

ASSEMBLY INSTRUCTION

MODEL : KENT DINING TABLE

IMPORTANT NOTE:





BEFORE YOU BEGIN, PLEASE READ AND FOLLOW THE ASSEMBLY INSTRUCTIONS CAREFULLY.


- IDENTIFY AND SEPARATE ALL PARTS BEFORE DISCARDING PACKAGING.
- PLACE WOODEN PARTS ON A CLEAN SOFT SURFACE TO AVOID SCRATCHING THE PARTS.
- **DO NOT USE POWER TOOL FOR ASSEMBLY.**
- AS WITH ALL FURNITURE, OCCASIONALLY CHECK TO ENSURE HARDWARE IS TIGHT.

PARTS LIST


A	TABLE TOP	1PC
B	TABLE LEGS	4PCS

HARDWARE LIST

C	JCBC BOLT(LONG)		8PCS
D	SPRING WASHER		8PCS
E	FLAT WASHER		8PCS
F	ALLEN KEY		1PC

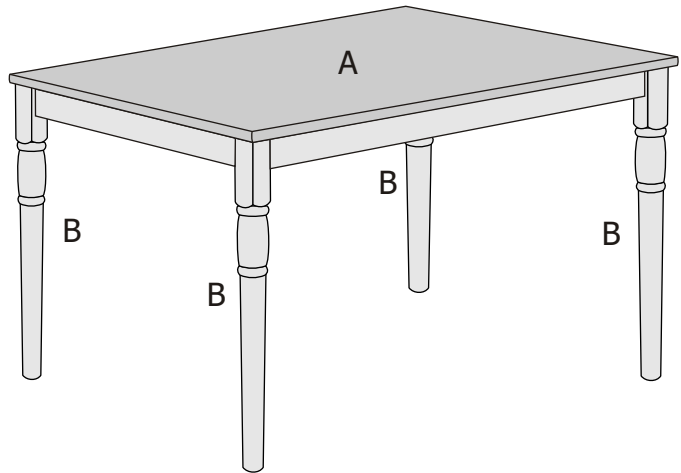

ATTACH THE TABLE LEGS (B) TO THE CORNER BLOCK WITH JCBC SCREW(C), SPRING WASHER(D) AND FLAT WASHER(E). TIGHTEN THE JCBC SCREW(C) BY USING THE ALLEN KEY(F).

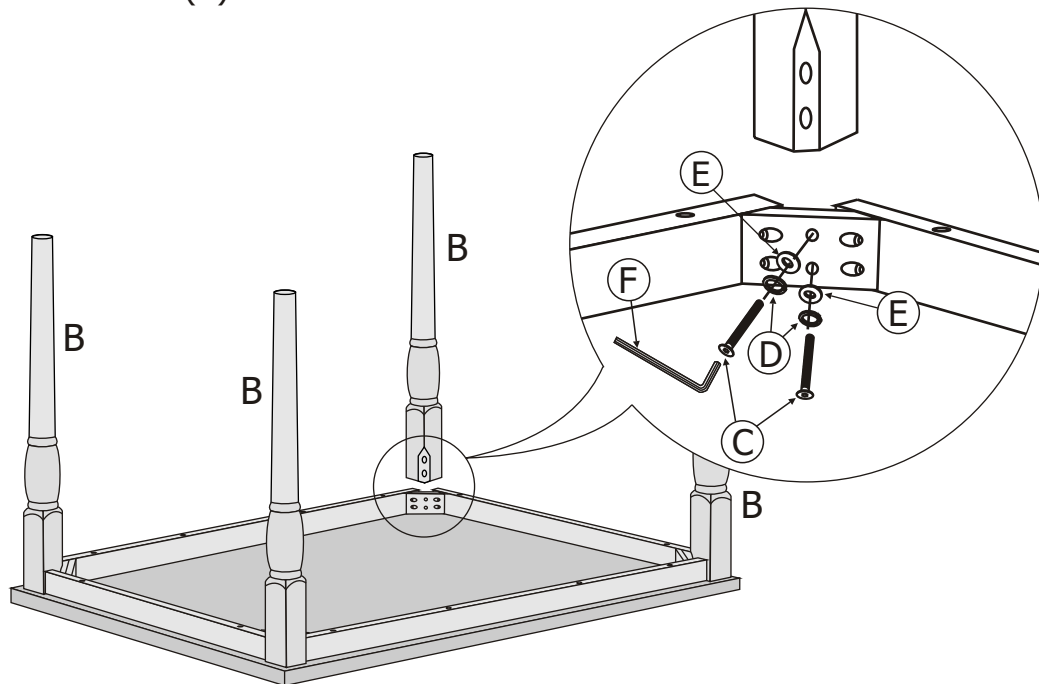

THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

