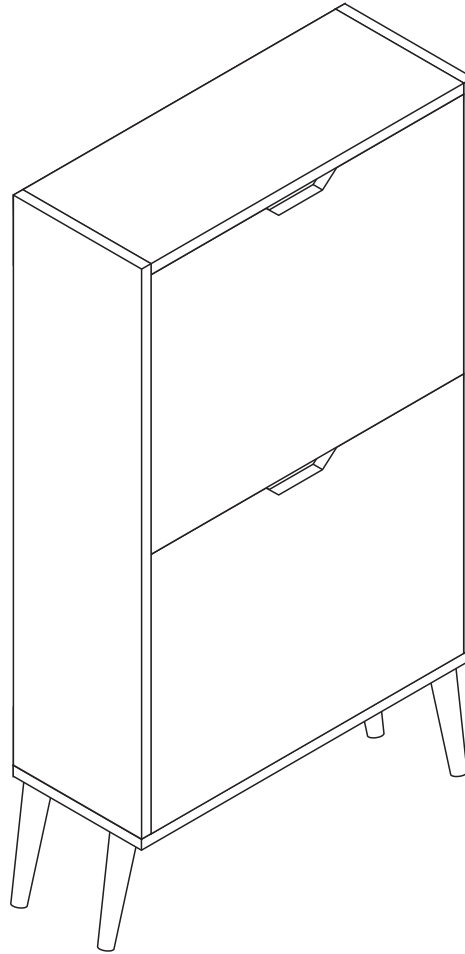


# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the **STOCKHOLM TWO TIER SHOE CABINET**. Please read the instructions carefully to ensure safe operation of the product.



Size: W47.0 x D23.0 x H88.8cm  
COLOUR: WHITE & OAK

---


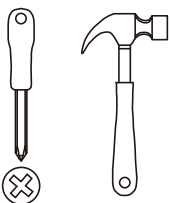
**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

## Tools Required



1 Hour  
Set Up

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### INFORMATION

- This product is intended for a maximum load of 20 kg spread evenly thorough the storage compartments. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground.
- Tools are not included.

### WARNINGS

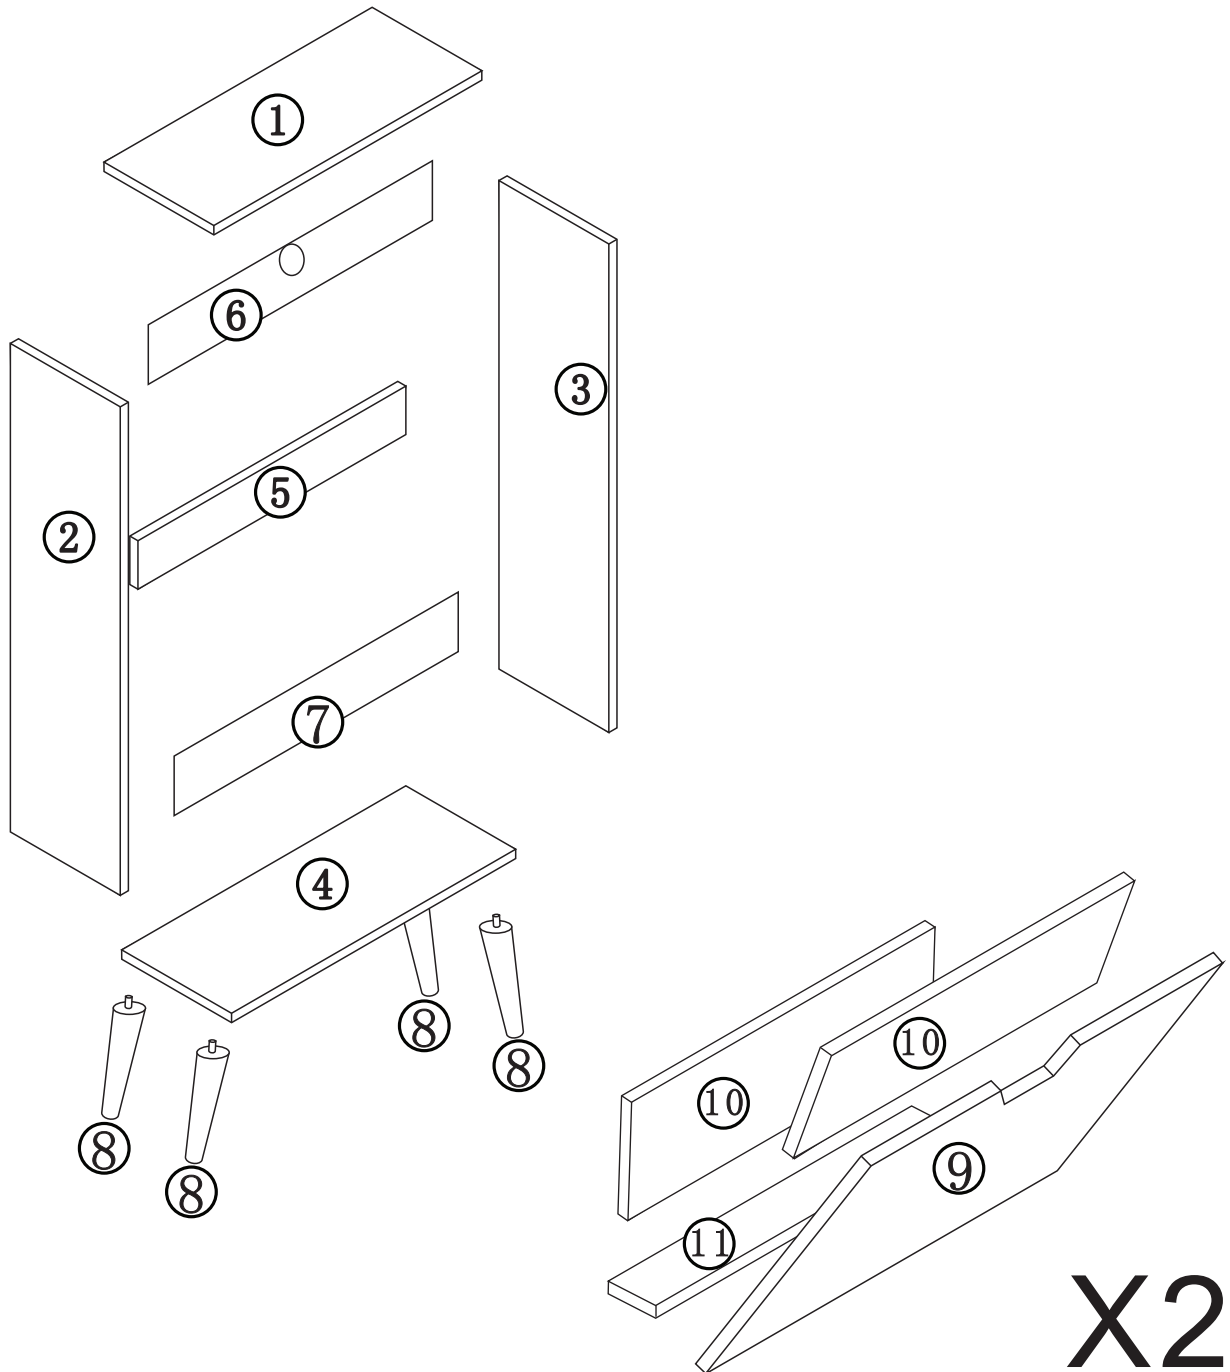
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing,damaged or worn.
- DO NOT sit or stand on the product.
- It is essential that this unit is fixed to a wall with the fixings provided.
- We recommend the use of the wall fixing provided for safety reasons. N.B. if in doubt pls consult a qualified tradesperson. **Warning:** Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

### CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product

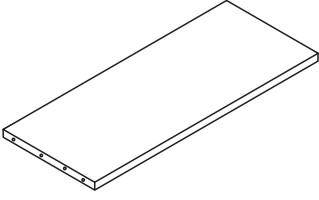
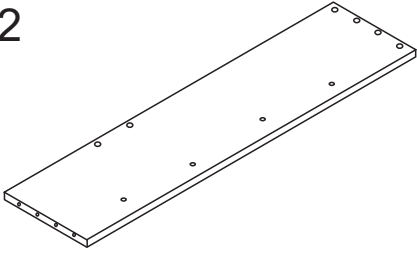
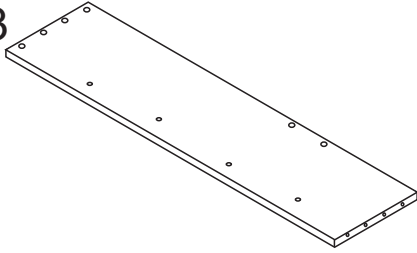
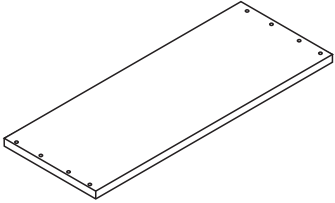
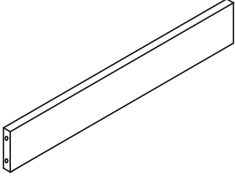
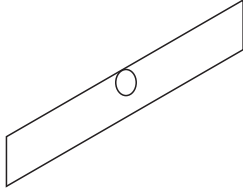
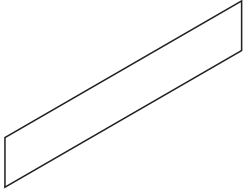

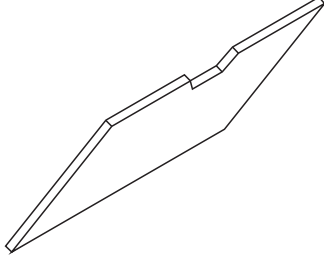
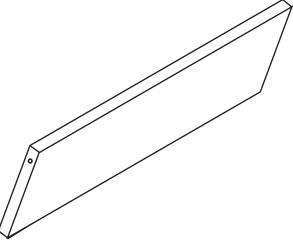
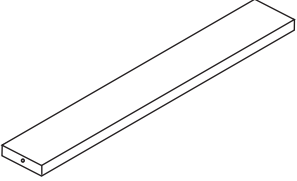
# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling this product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

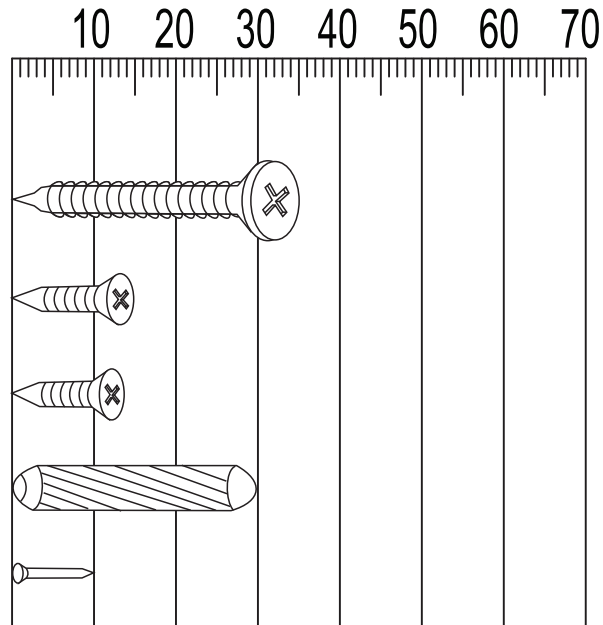
## PARTS

<p>1</p> 	<p>2</p> 	<p>3</p> 
<p>DESCRIPTION:TOP PANEL QTY:1 PC DIMENSION:440X230X15MM</p>	<p>DESCRIPTION:LEFT SIDE PANEL QTY:1 PC DIMENSION:765X230X15MM</p>	<p>DESCRIPTION:RIGHT SIDE PANEL QTY:1 PC DIMENSION:765X230X15MM</p>
<p>4</p> 	<p>5</p> 	<p>6</p> 
<p>DESCRIPTION:BOTTOM PANEL QTY:1 PC DIMENSION:470X230X15MM</p>	<p>DESCRIPTION:SUPPORT PANEL QTY:1 PC DIMENSION:440X50X15MM</p>	<p>DESCRIPTION:UPSIDE BACK PANEL QTY:1 PC DIMENSION:458X75x3MM</p>
<p>7</p> 	<p>8</p> 	<p>9</p> 
<p>DESCRIPTION:UNDERSIDE PACK PANEL QTY:1 PC DIMENSION:458X75x3MM</p>	<p>DESCRIPTION:WOODEN LEGS QTY:4 PCS DIMENSION:100X <math>\phi</math> 35X <math>\phi</math> 25MM</p>	<p>DESCRIPTION:DRAWER FRONT PANEL QTY:2 PCS DIMENSION:436X365X15MM</p>
<p>10</p> 	<p>11</p> 	
<p>DESCRIPTION:DRAWER BACK SHELF PANEL QTY:4 PCS DIMENSION:426X138X12MM</p>	<p>DESCRIPTION:DRAWER BOTTOM PANEL QTY:2 PCS DIMENSION:426X89X12MM</p>	

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

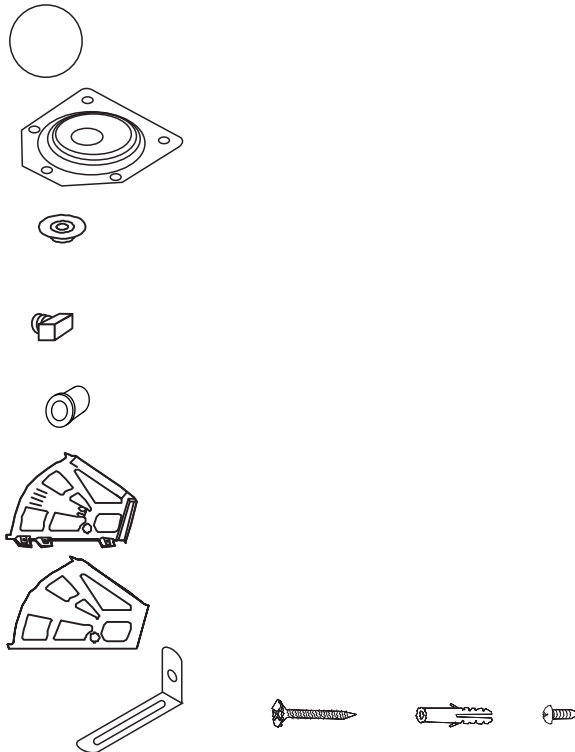
## FIXINGS (TO SCALE)

Ref	Dimensions	Qty
A	SCREWS (4x35mm)	12
B	SCREWS (4x14mm)	12
C	SCREWS (4x12mm)	32
D	DOWEL (6X30MM)	8
E	NAIL (1.5X10MM)	15



## NOT TO SCALE

F	STICKERS	8
G	LEG BRACKETS	4
H	OUTER AXIS	4
I	STOPER	4
J	INNER AXIS	4
K	LEFT SIDE BRACKET	2
L	RIGHT SIDE BRACKET	2
M	WALL FIXING HARDWARE	1



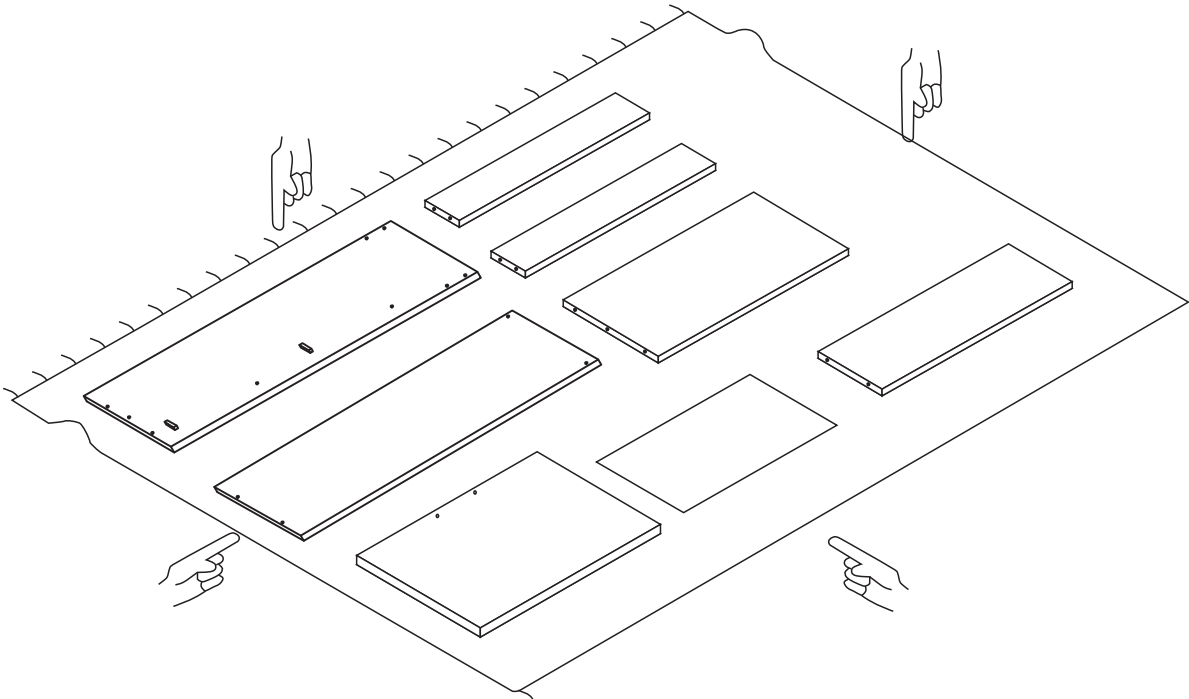
**CAUTION:** There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product.

If you keep the fittings in a bowl during assembly you will be less likely to lose them!

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## Layout Parts on Soft Surface

Layout all part on a soft surface i.e. Rug,carpet or packaging carton

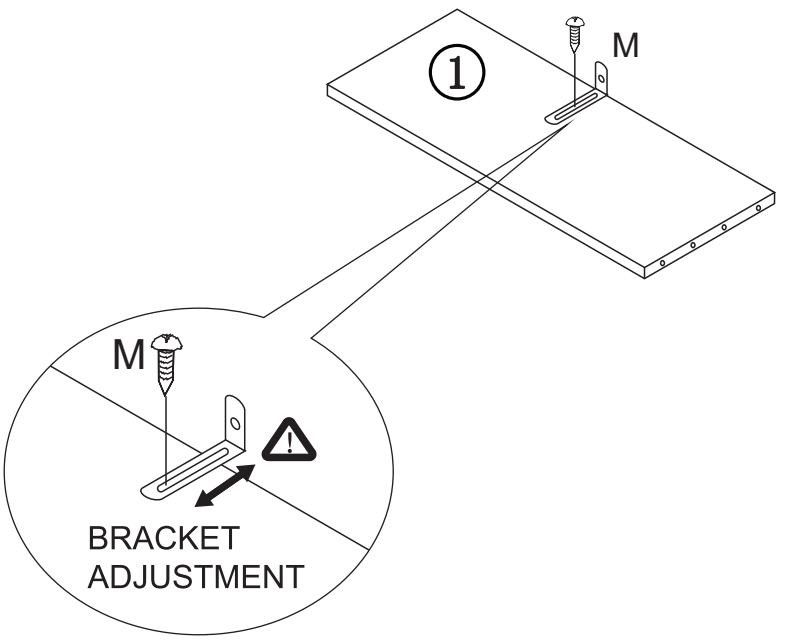


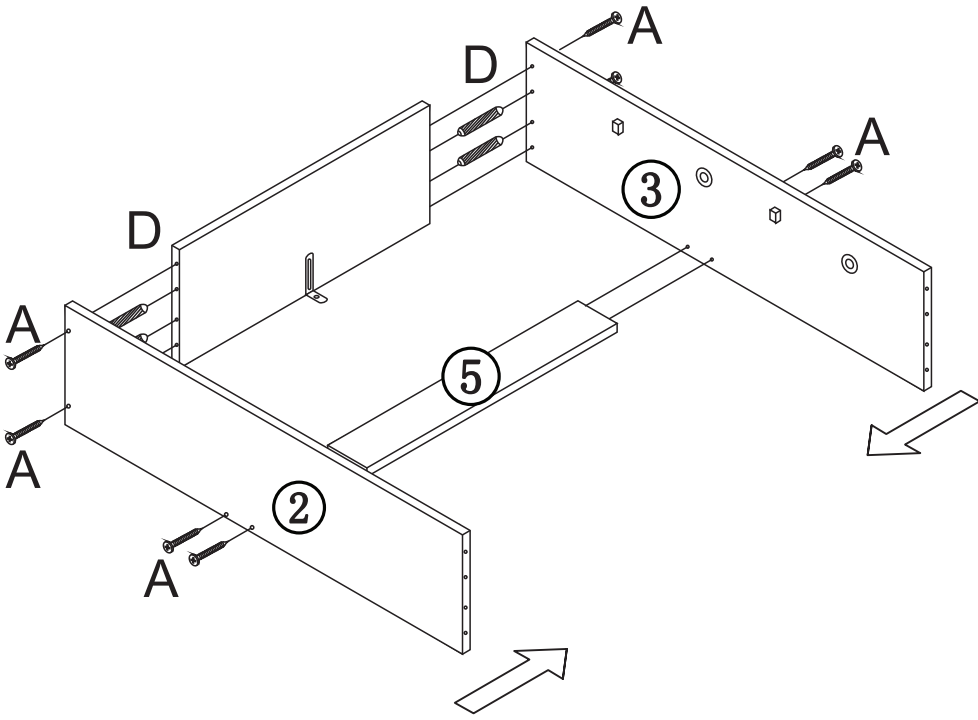
# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 1	PARTS REQUIRED
	<p>9: DRAWER FRONT PANEL X2            10: DRAWER BACK SHELF PANEL X2            11: DRAWER BOTTOM PANEL X2</p> <p>B: SCREWS X12            C: SCREWS X4            K: LEFT SIDE BRACKET X2            L: RIGHT SIDE BRACKET X2</p>

STEP 2	PARTS REQUIRED
	<p>2: LEFT SIDE PANEL X1            3: RIGHT SIDE PANEL X1</p> <p>H: OUTER AXIS X4            I: STOPPER X4</p>

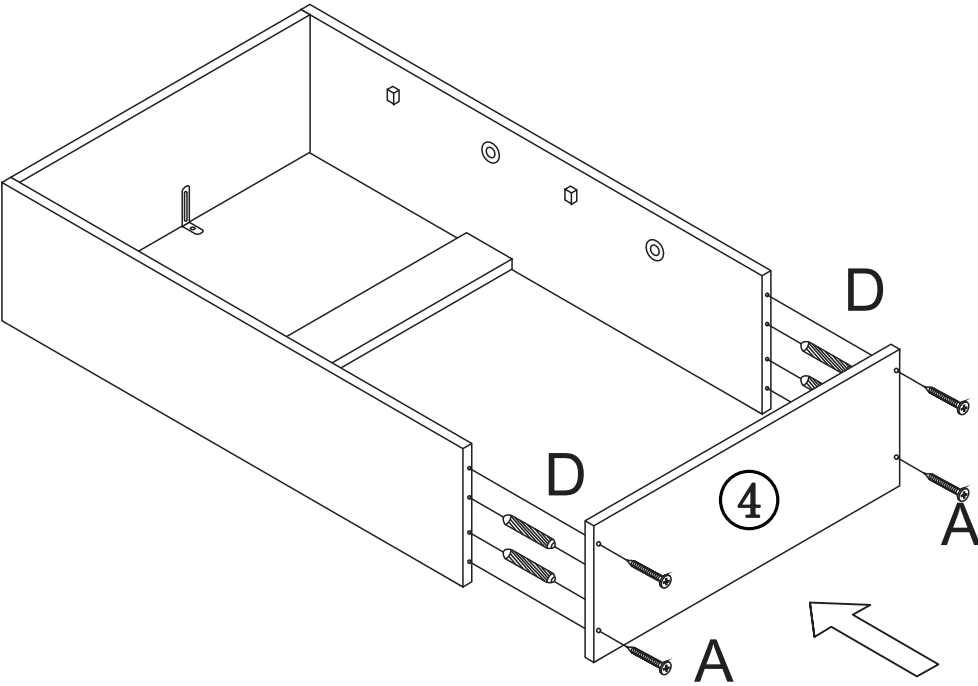
# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

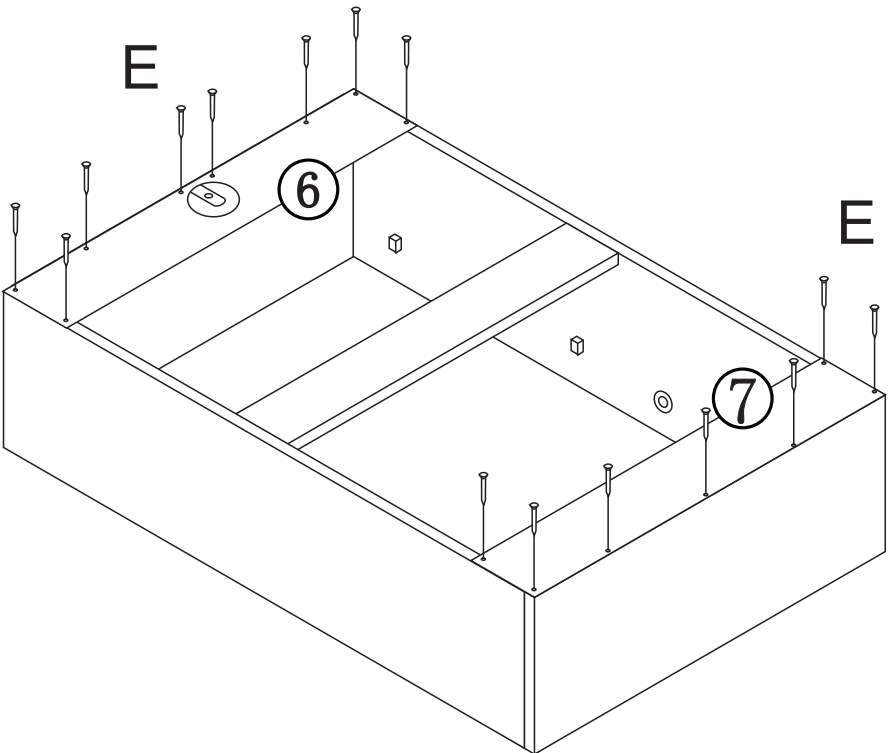
STEP 3	PARTS REQUIRED
 <p>Diagram illustrating Step 3: Attaching the top panel (1) to the wall using a wall fixing (M). A circular inset shows a close-up of the wall fixing being adjusted, with a warning triangle and the text "BRACKET ADJUSTMENT".</p>	<p>1:TOP PANEL X1 M:WALL FIXING X1</p>

STEP 4	PARTS REQUIRED
 <p>Diagram illustrating Step 4: Attaching the side panels (2, 3, 5) to the top panel (1) using screws (A) and dowels (D). Arrows indicate the direction of assembly.</p>	<p>1:TOP PANEL X1 2:LEFT SIDE PANEL X1 3:BOTTOM PANEL X1 5:RIGHT SIDE PANEL X1</p> <p>A:SCREWS X8 D:DOWEL X4</p>

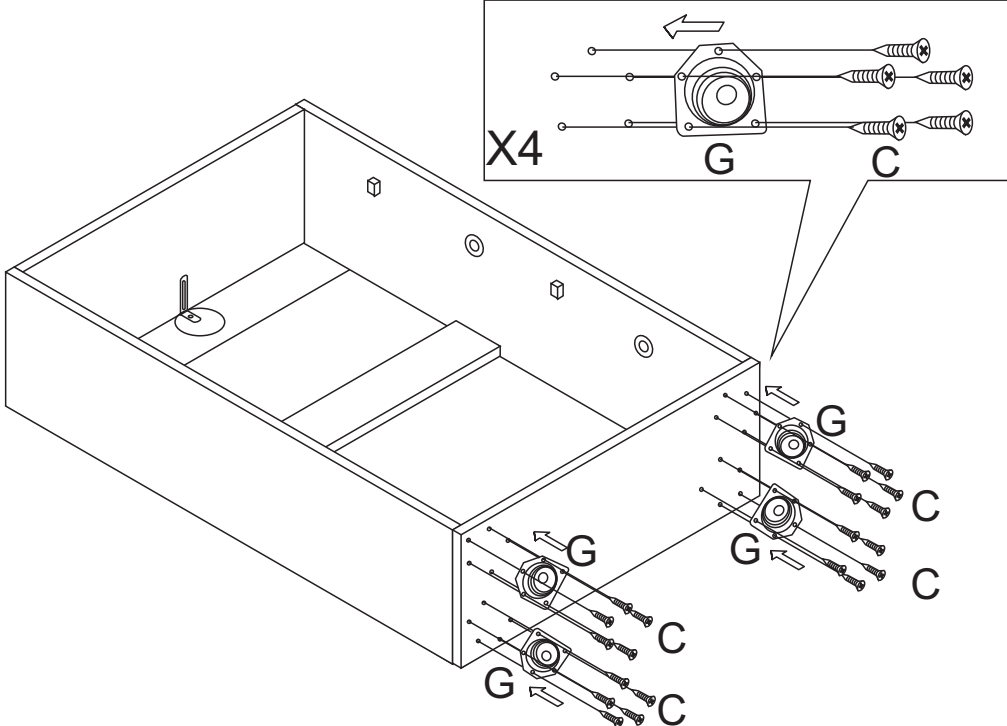


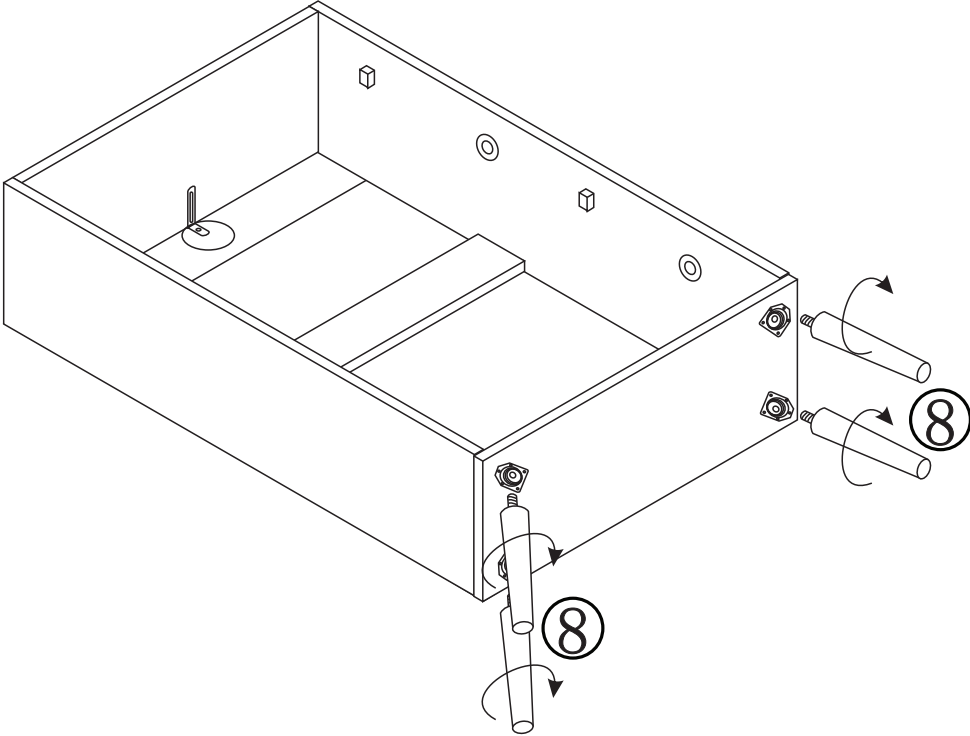
# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 5	PARTS REQUIRED
	<p>4: BOTTOM PANEL X1</p> <p>A: SCREWS X4</p> <p>D: DOWEL X4</p>


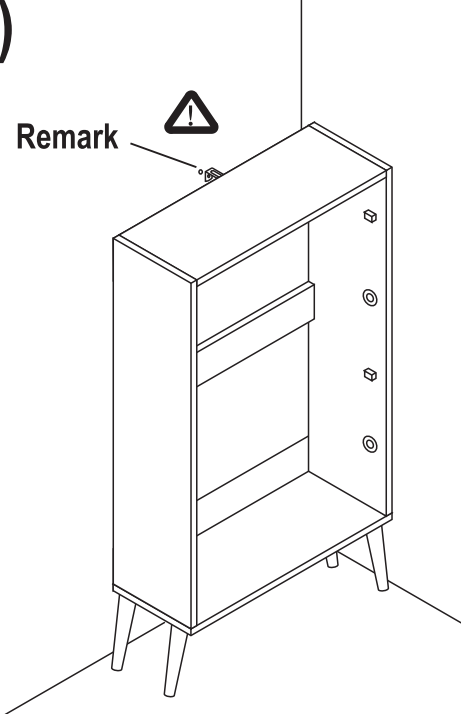
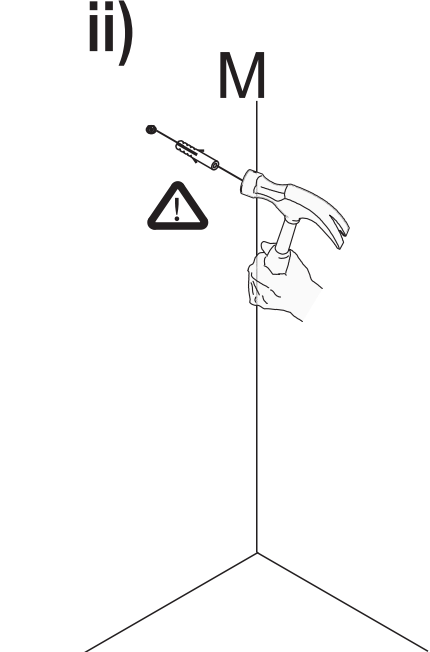
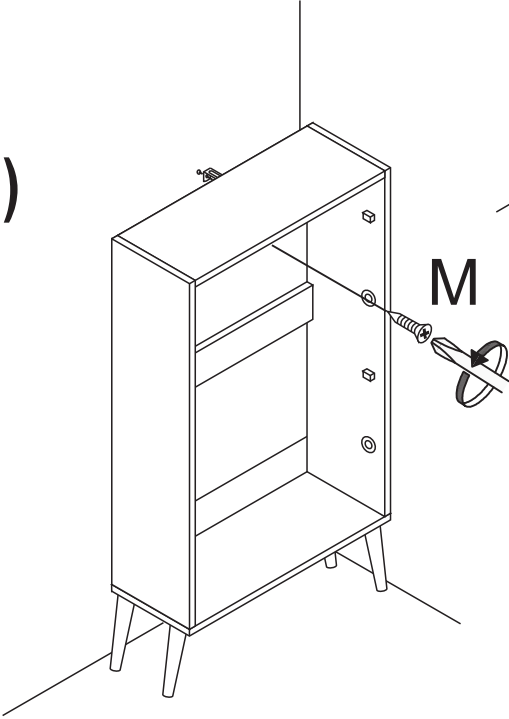
STEP 6	PARTS REQUIRED
	<p>6: UPSIDE BACK PANEL X1</p> <p>7: UNDERSIDE BACK PANEL X1</p> <p>E: NAIL X15</p>

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

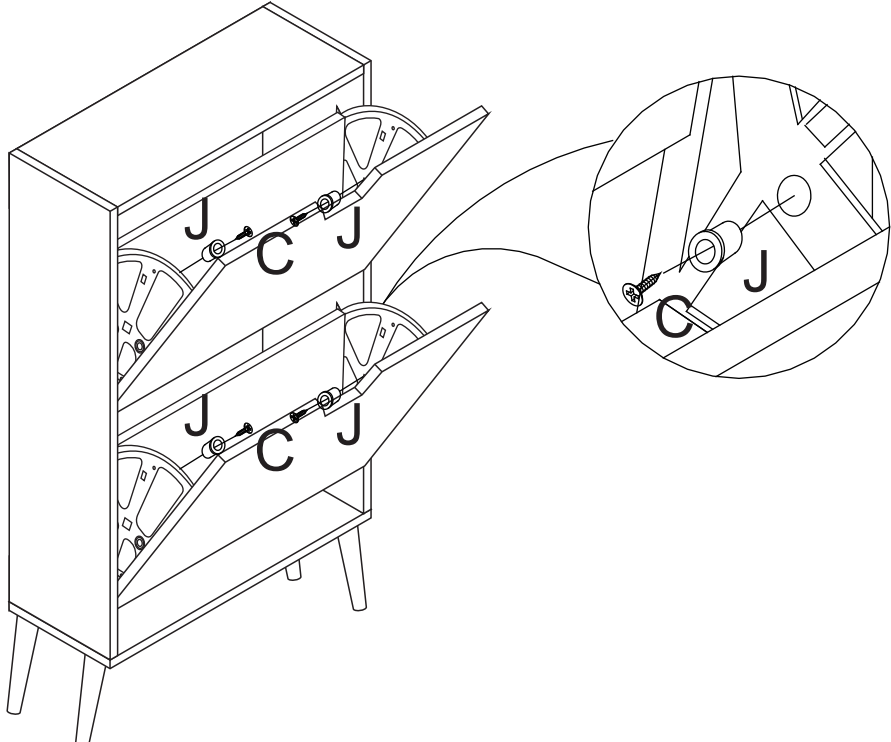
STEP 7	PARTS REQUIRED
 <p>X4 G C</p>	<p>C:SCREWS X20 G:LEG BRACKETS X4</p>

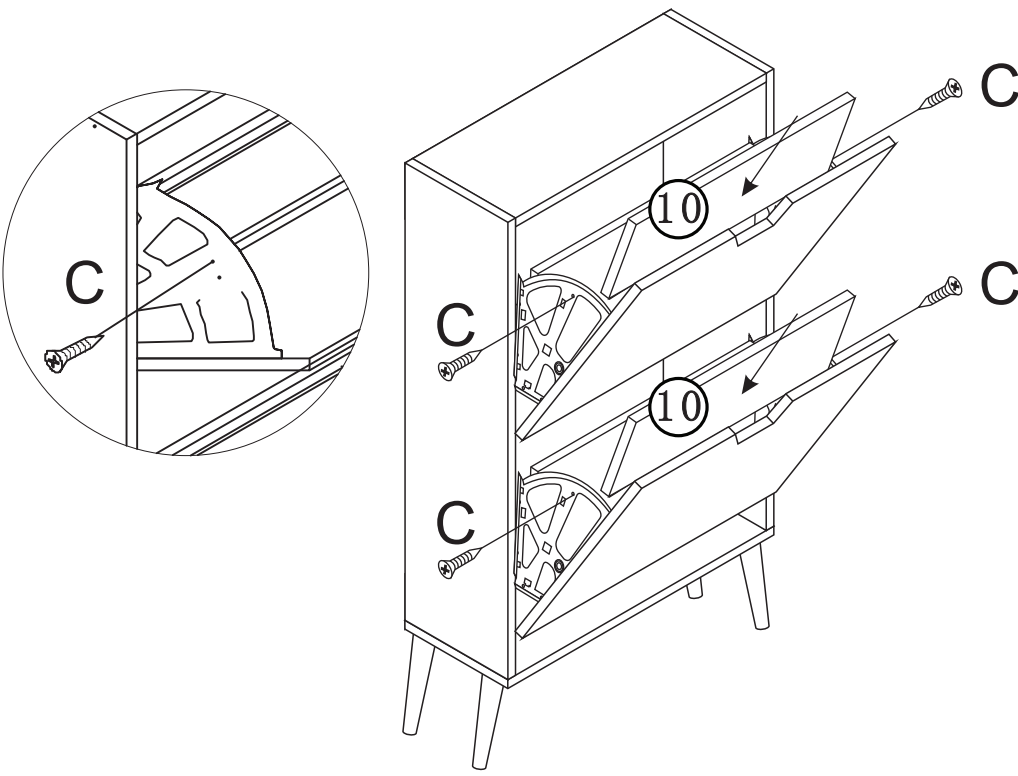
STEP 8	PARTS REQUIRED
 <p>8</p>	<p>8:WOODEN LEGS X4</p>

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

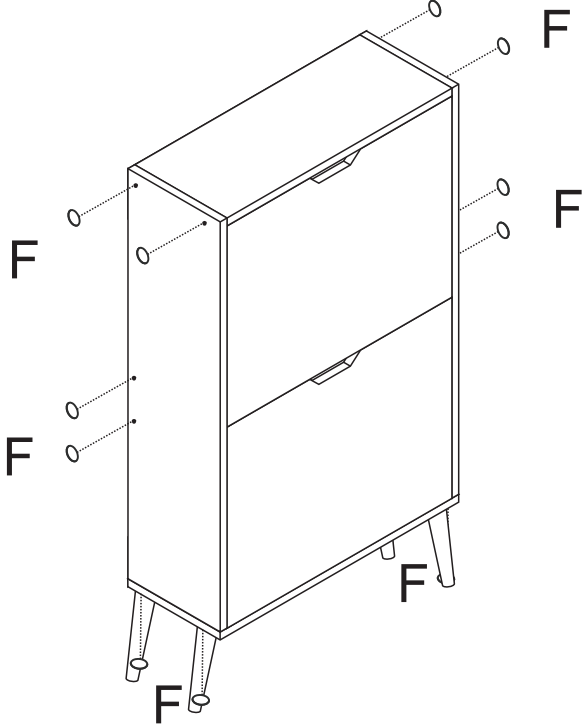
WALL STRAP	PARTS REQUIRED
<p><b>i)</b></p> <p>Remark </p>  <p><b>ii)</b></p> <p>M</p>  <p><b>iii)</b></p> <p>M</p> 	<p>M:WALL FIXING X1</p>

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 9	PARTS REQUIRED
	<p>C:SCREWS X4 J:INNER AXISX4</p>

STEP 10	PARTS REQUIRED
	<p>10:DRAWER BACK SHELF PANEL X2 C:SCREWS X4</p>

# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 11	PARTS REQUIRED
 <p>The diagram shows a two-tier shoe cabinet with two shelves. Twelve 'F' stickers are being applied to the cabinet. The stickers are located at the top corners, the top edge of the side panels, the bottom corners, and the bottom edge of the side panels. There are also two stickers on the front edge of the lower tier. The letters 'F' are placed next to each sticker location, with dotted lines pointing to the specific spot on the cabinet.</p>	<p>F:STICKERS X12</p>

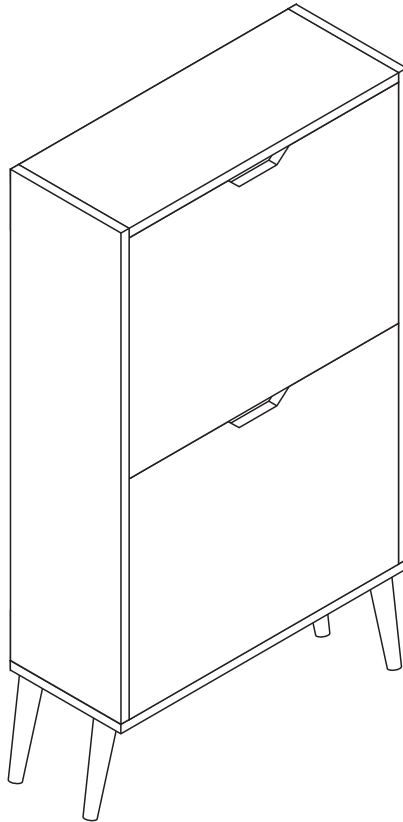
# STOCKHOLM TWO TIER SHOE CABINET ASSEMBLY INSTRUCTIONS

## Complete Assembly

Your STOCKHOLM TWO TIER SHOE CABINET is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage.

Also, make sure the connectors are tight and secure.



Retain these instructions for future reference.

