


GLOBAL PROCUREMENT AND MARKETING LIMITED

MONICA WOODEN RATTAN BED

Assembly Instructions – Please keep for future reference

OBDMONDBO

OBDMON5OK

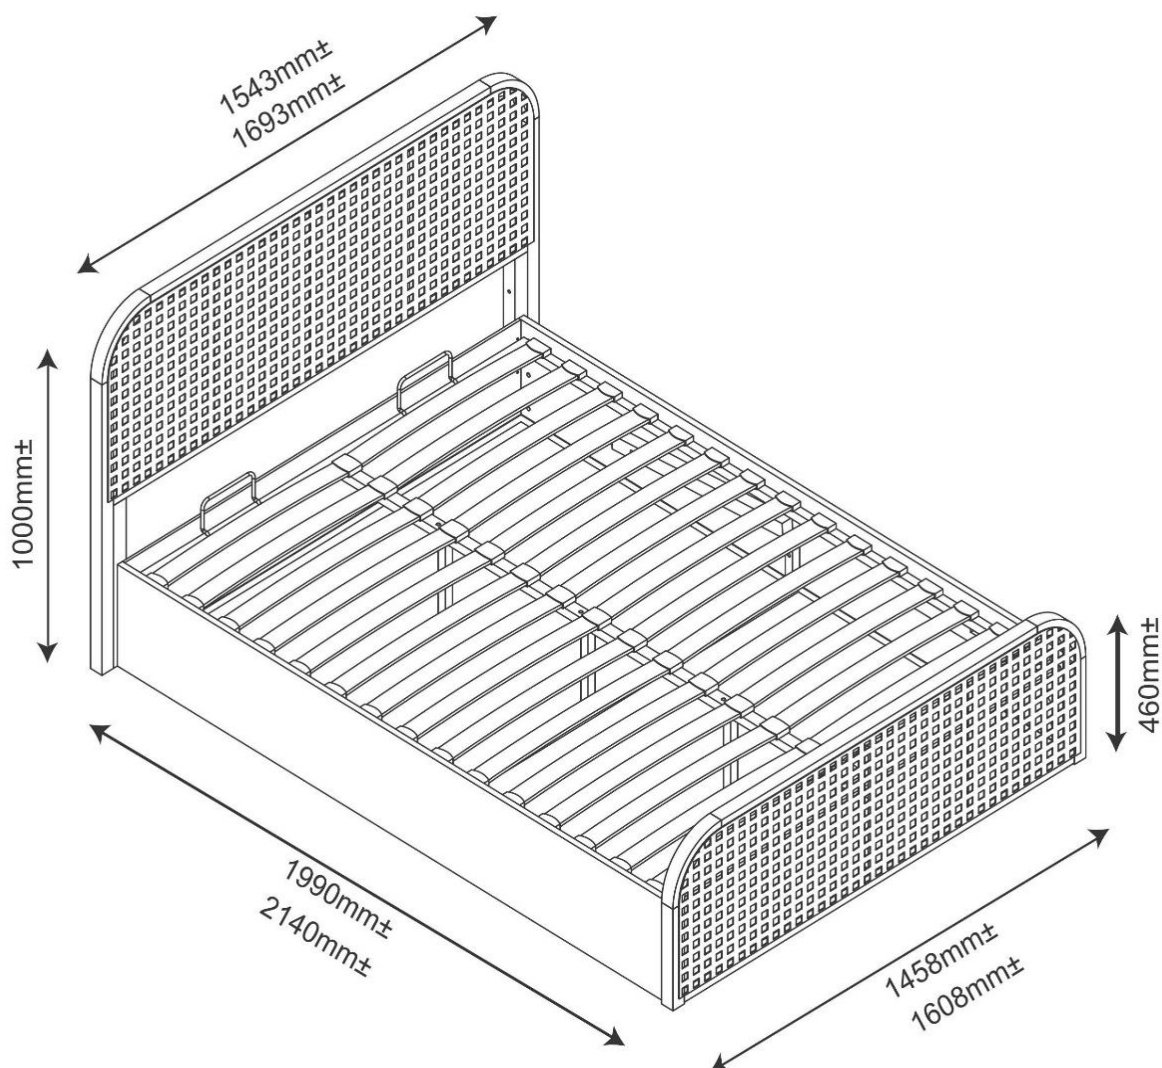

Dimensions	No. people	Assembly Time	OW #
Width: 1543mm Depth: 1990mm Height: 1000mm		60 mins (approx.)	OBDMONDBO
Dimensions	No. people	Assembly Time	OW #
Width: 1693mm Depth: 2140mm Height: 1000mm		60 mins (approx.)	OBDMON5OK

thank you

For purchasing this
GPM Limited
product

Important

- PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY
- PLEASE DO NOT THROW THE PACKAGING AWAY UNTIL YOU ARE SATISFIED WITH PURCHASE, GOODS NEED TO BE RETURNED IN ORIGINAL PACKAGING.

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components, parts, hardware and tools listed on pages 3, 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit.

- Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

HELPFUL HINTS

- Please read through the assembly instructions thoroughly before you begin.
- Check all fittings and panels against the parts list to ensure that you have everything before you start. In the unlikely event that any parts are missing, please contact your retailer immediately.
- Remove all fittings from the plastic bags and separate them into their groups in a bowl or other container to stop any small parts being lost.
- Do not use any tool that's not listed in these assembly instructions. The use of power tools is NOT advised, this could damage your product and cause over tightening to occur.
- Assemble the item as close to its final position (in the same room) as possible.
- Make sure you have enough space to layout the parts before starting.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people. Look for this logo 
- Check you have all the components and tools listed on the next page.

SAFETY

- Keep children and animals away from the work area, small parts could cause choking if swallowed.
- Dispose of all packaging carefully and responsibly.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**If you are unhappy with the product and wish to return it,
please follow the retailer's returns procedure.**

IMPORTANT INFORMATION

OTTOMAN OPERATING INSTRUCTIONS

Once your bed frame is completely assembled, the slat frame unit will not operate correctly unless a mattress is placed on the slat frame. Position the mattress onto the slat frame whilst it is in the closed position.

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.

Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame, THIS IS NORMAL.

After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman. **THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT.**

When the ottoman is almost shut, it will close completely under its own weight. The speed of closing depends on the weight of the mattress so always keep fingers clear of the frame. Periodically check and tighten bolts to ensure that the components are tight and secure.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the Side Rail. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the Footboard of the bed slightly to the left or right whilst leaving the headboard of the bed frame stationary.

If you are experiencing difficulty with the initial compression try fitting one piston at a time (following the Assembly Instructions) then press down on the side of the frame with the piston fitted - this acts like a big lever (The weight of the mattress can be used to supplement the load exerted). Effectively you are doubling the amount of force applied, because you have halved the resistance offered by the pistons. It can take slightly more effort than you might feel comfortable applying to the bed frame at first.


WARNING

For the safety of yourselves and others, please ensure that:

- **Children and pets are not left unattended when the frame is in the lifted position as they could become trapped inside the ottoman space.**
- **Please keep children and pets away from the ottoman bedstead whilst opening and closing the slat frame to avoid injury.**
- **The items store under the bed - i.e. the top of an item must not touch the underside of the mattress metal frame base or it may get damaged.**

ATTENTION Important Notes Regarding Gas Lifts

This information applies to all types of gas lift storage, regardless of the base top: boarded base ① or wooden slats ② and regardless of opening configuration: end opening ① / side opening ②

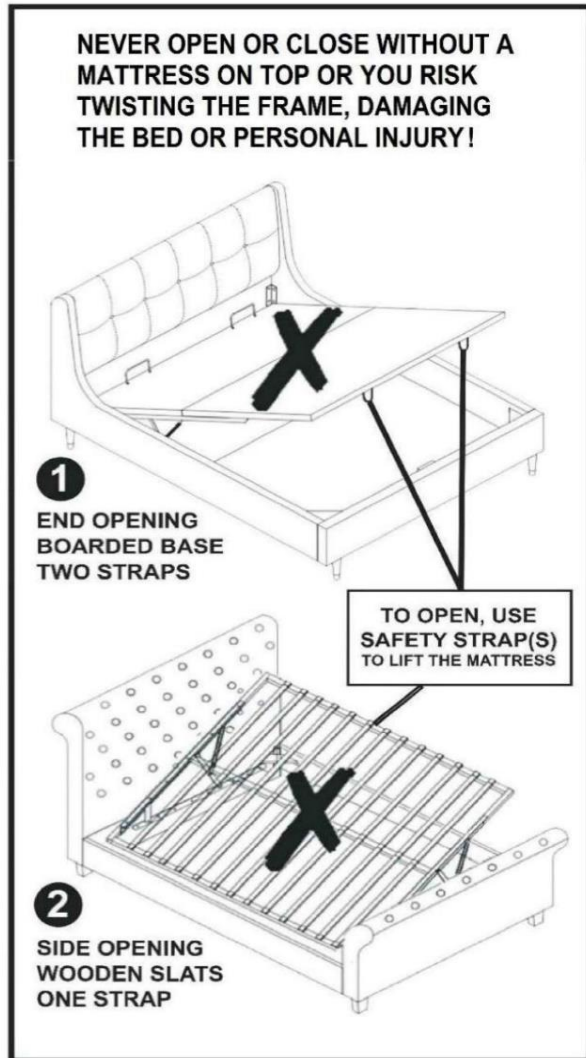





Once all the nuts and bolts are tightened firmly, the first time you close the lifting mechanism, push down with extra pressure to force open the seals on the pistons.

This will feel like a lot of pressure, so be firm and it will close!


1. NEVER operate without a mattress on top. Failure to do so will damage the bed.
2. Close by pushing down firmly, with both hands towards the centre, with equal pressure.
3. NEVER push down on only one side or edge, or you will damage your bed.
4. NEVER sleep on the bed frame without a mattress.
5. Please remember to re-tighten all nuts & bolts within the bed frame after 2 weeks of use.

Hints and Tips

Failure to do so may result in injury.

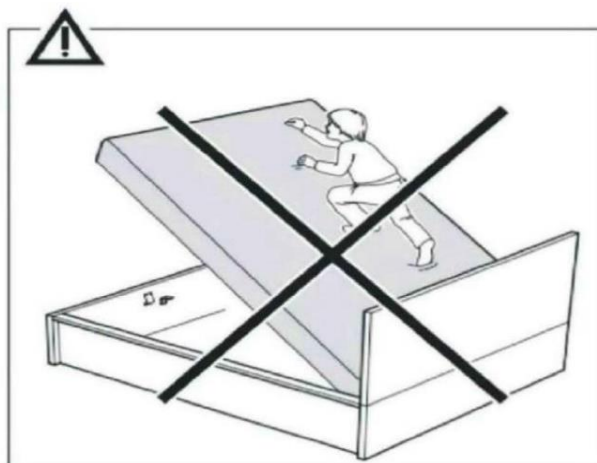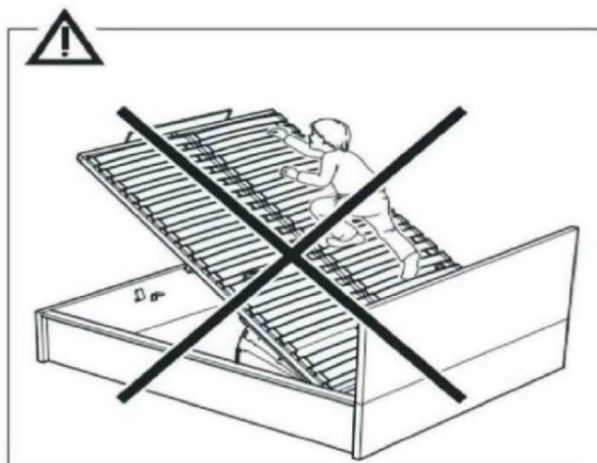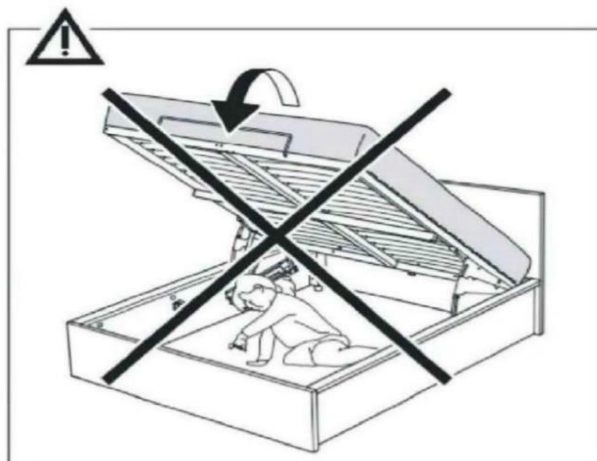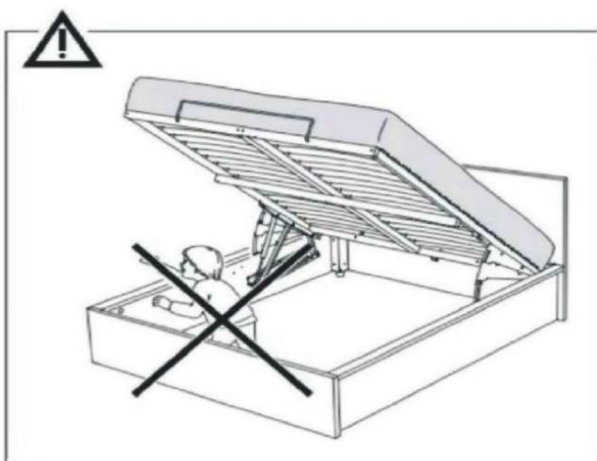

Bed frame must be in it's CLOSED position when moving the bed.

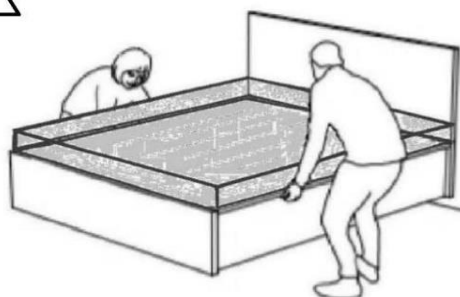

Hints and Tips

Failure to do so may result in injury.



To operate the ottoman, always use two hands at arm's length to push down on the bed frame end, in between the 2 rows of slats (as shown below) to close the bed frame.

To open, lift up using the nylon strap on the bed end. You must always ensure the mattress is on the bed frame before lifting to open and close the bed frame.

The weight of the mattress loaded on the frame helps to close the bed frame easier and with less effort, also keep the frame in it's closed position until it is pulled upwards by the user.




Always ensure a Mattress is on the bed frame

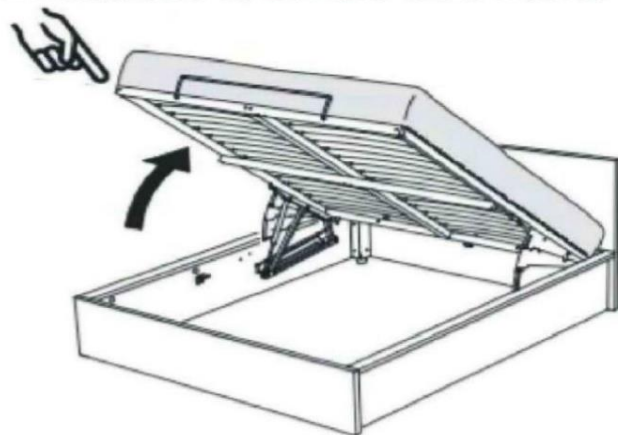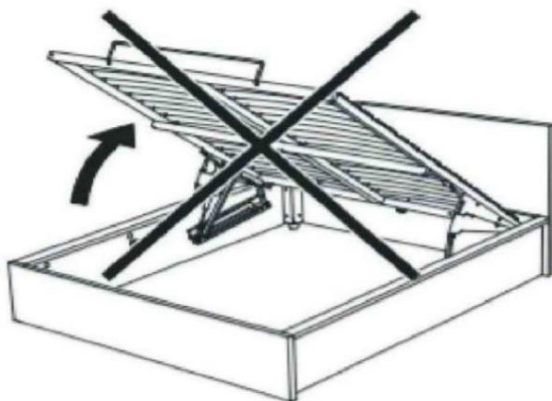

COMPONENT PARTS

PLEASE CHECK YOU HAVE ALL THE PARTS LISTED BELOW.

NOTE: The quantities below are the correct amount to complete the assembly.

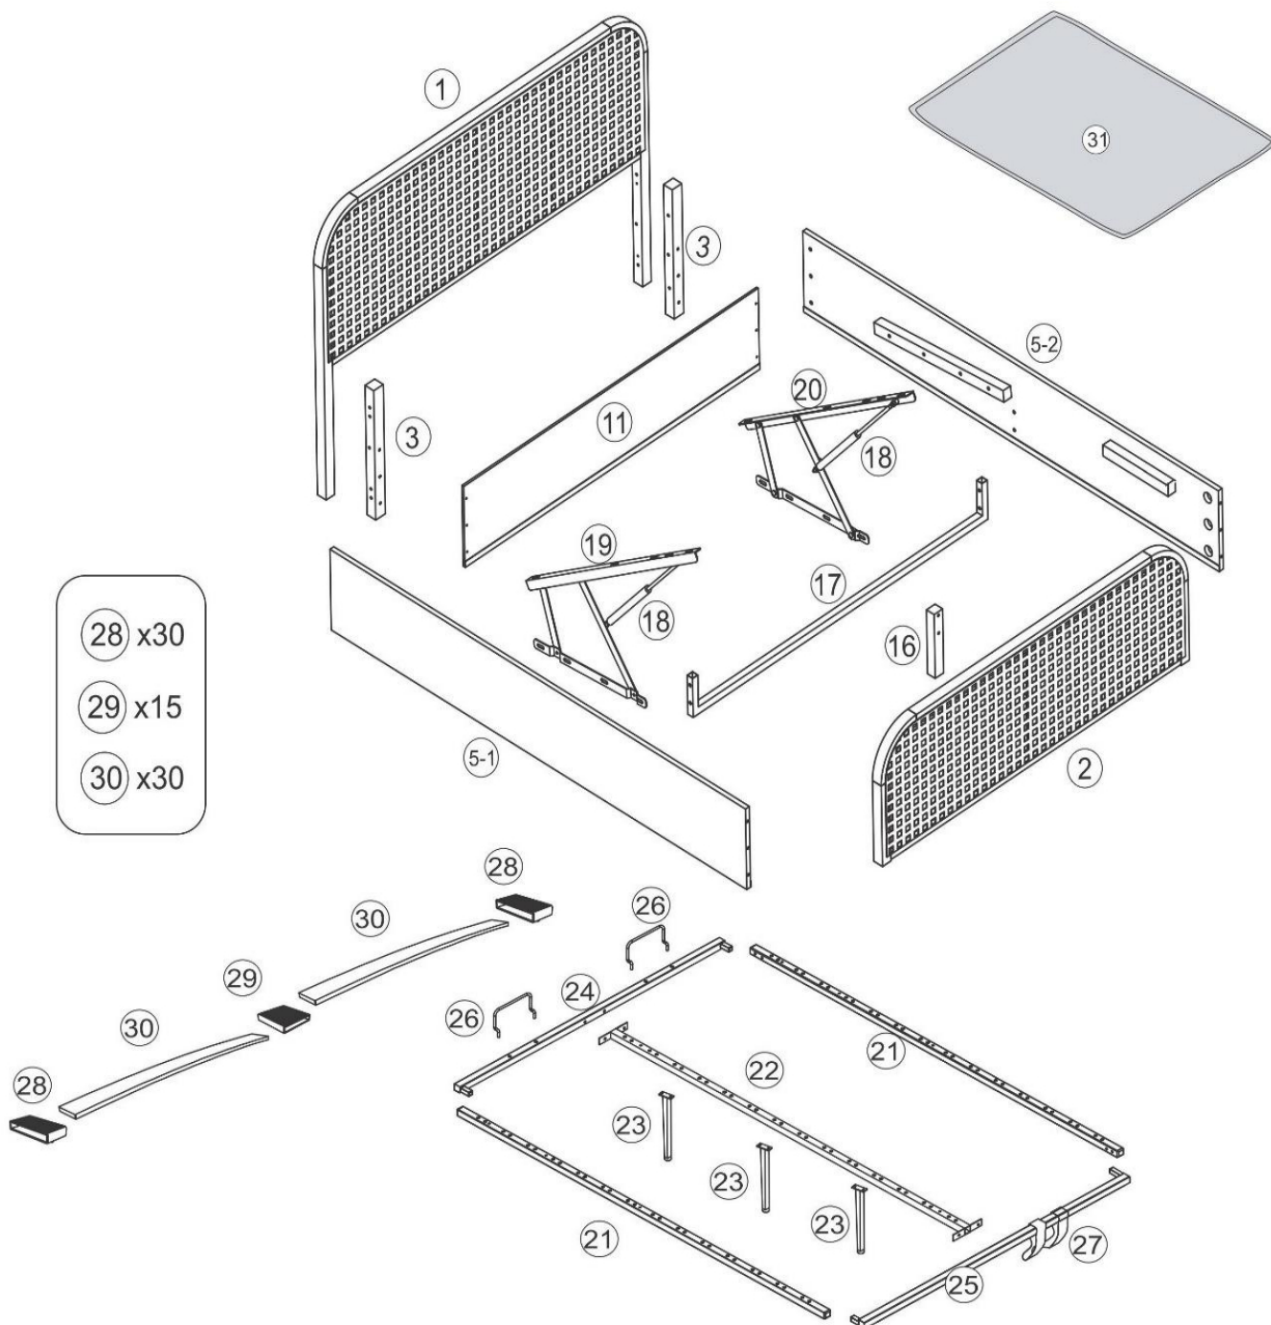

Components - Parts

Please check that you have all the components listed below before constructing your item.



Part No	Description	Qty
1	Headboard	1
2	Footboard	1
3	Headboard Short post	2
5-1	Left Side Rail	1
5-2	Right Side Rail	1
11	Headboard Lower Panel	1
16	Base Frame Support	1
17	Side Rail Stretcher	1
18	Gas Lift Piston	2
19	Left Folding Mechanism	1
20	Right Folding Mechanism	1
21	Side Rail Base Frame	2
22	Centre Support Rail	1
23	Centre Support Leg	3
24	Headboard Base Frame	1
25	Footboard Base Frame	1
26	Mattress Stopper Bracket	2
27	Lifting Strap	2
28	Plastic End Cap	30
29	Plastic Centre Cap	15
30	Wood Slat	30
31	Non-Woven Fabric Base Cover	1

COMPONENT FITTINGS

PLEASE CHECK YOU HAVE ALL THE FITTINGS LISTED BELOW.

NOTE: The quantities below are the correct amount to complete the assembly.


In some cases, more fittings may be supplied than required.

A x6  Bolt M6x80mm	B x4  Wood Dowel Ø8x30mm	C x6  Bolt M6x70mm	E x6  T-Nut	F x2  Bolt M6x50mm
G x4  Bolt M6x35mm	H x6  Stud M6x60mm	J x6  Nut M6	K x6  Half Moon Washer	L x1  Spanner M6
M x1  Allen Key M4	N x8  Bolt & Washer Ø8x20mm	O x24  Bolt Ø8x15mm	P x4  Nut M8	Q x1  Spanner M10
R x1  Allen Key M5	U x6  Screw Ø4x20mm	I x1  Screw driver (not provided)	 Gloves (Not Provided)	

Step 01

B x4


 Wood Dowel
 Ø8x30mm


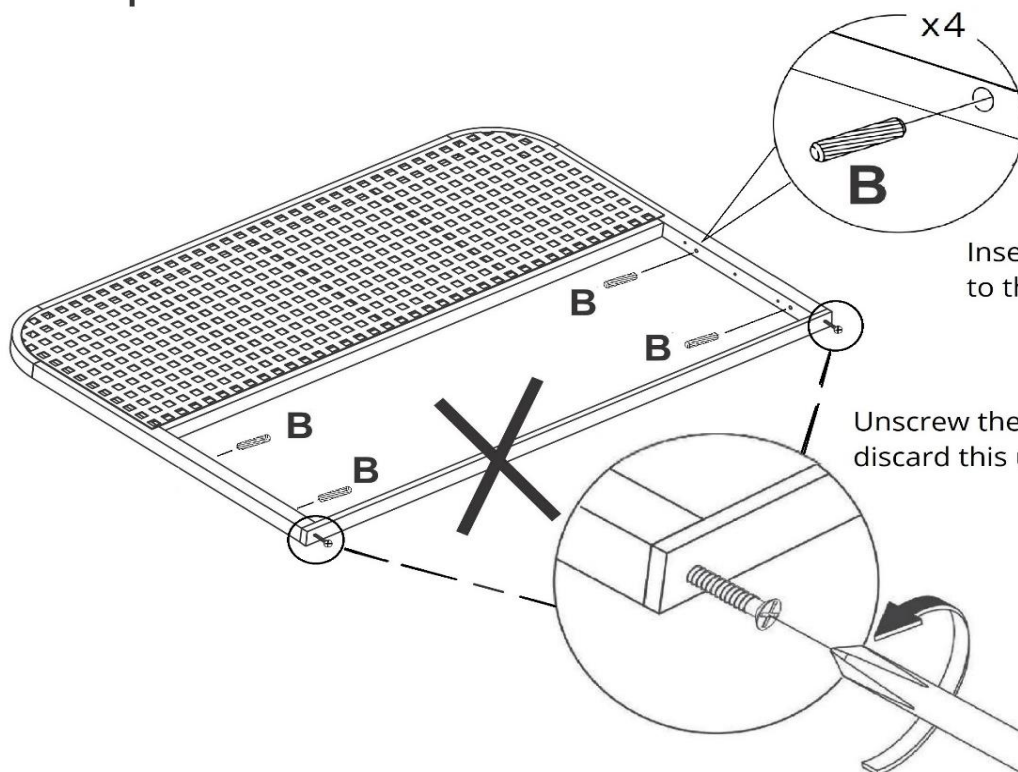


Insert Wood Dowel B to the headboard leg.

Unscrew the two screws and discard this unwanted wood.



Step 02

Attach Headboard Short Post ③ to Headboard Post with Bolt C using Allen key M as shown.

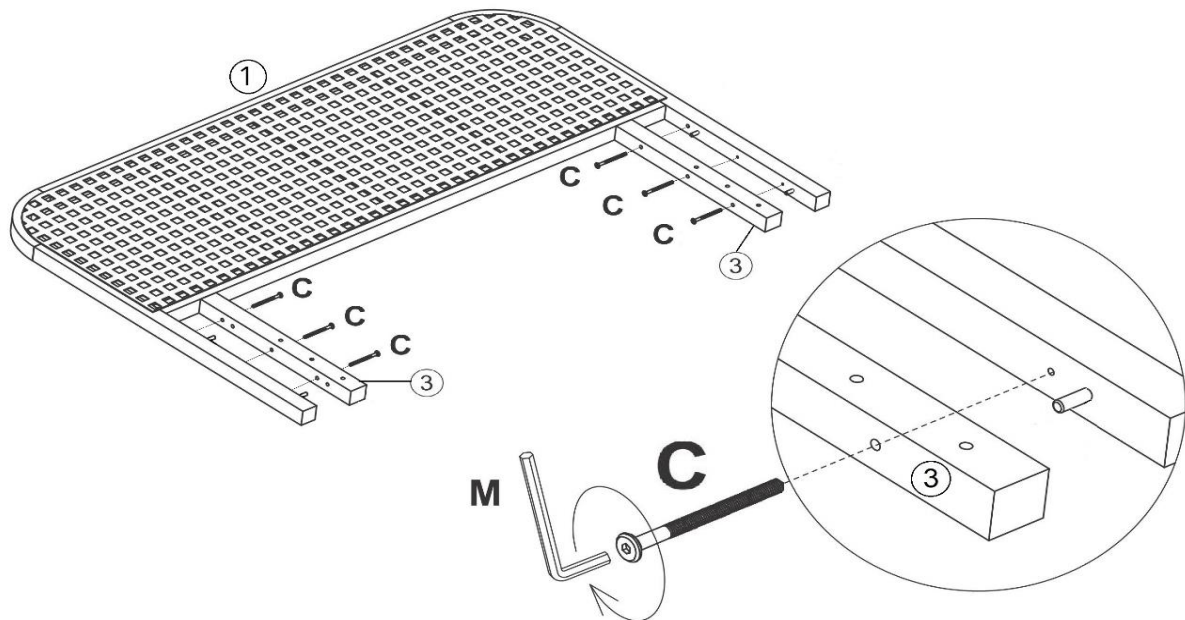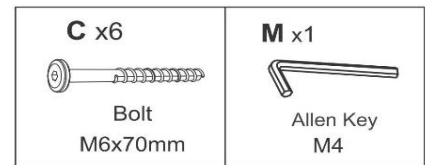

Step 03

Insert one stud H into each hole of the Footboard. Screw them in until firmly secure. Leave the outer half exposed for later steps.

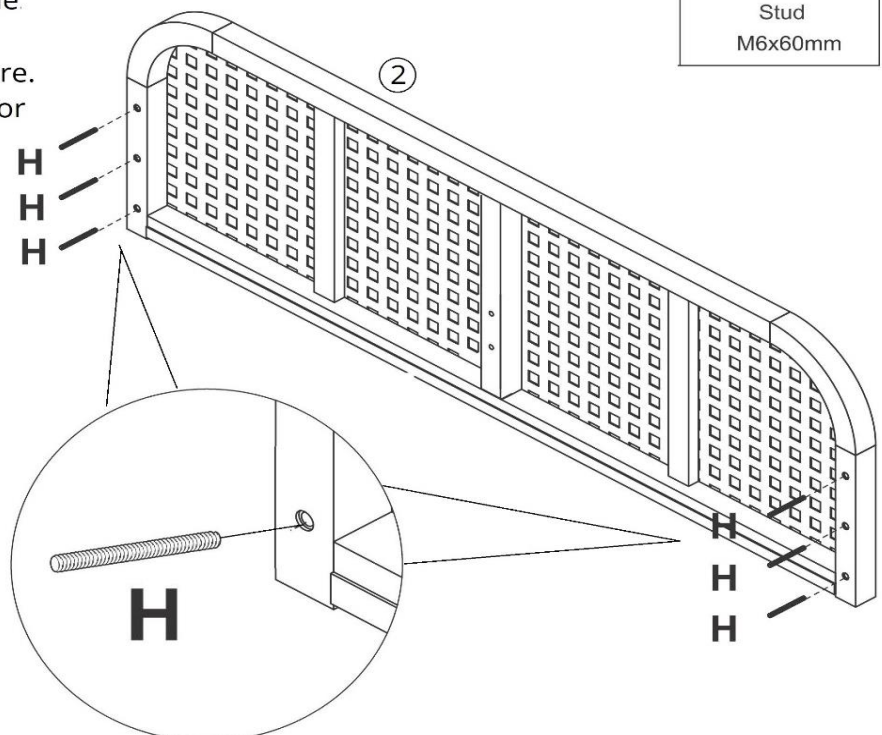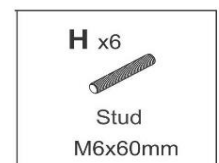


Step 04

Connect the Gas Lift Piston (18) to the lifting mechanisms (19 and 20).

Thread one Nut P onto the joint connection.
Use Spanner Q to tighten the nut.

Important warning: Do not over-tighten Nut P to ensure the mechanism moves smoothly.

P x4  Nut M8	Q x1  Spanner M10
---	--

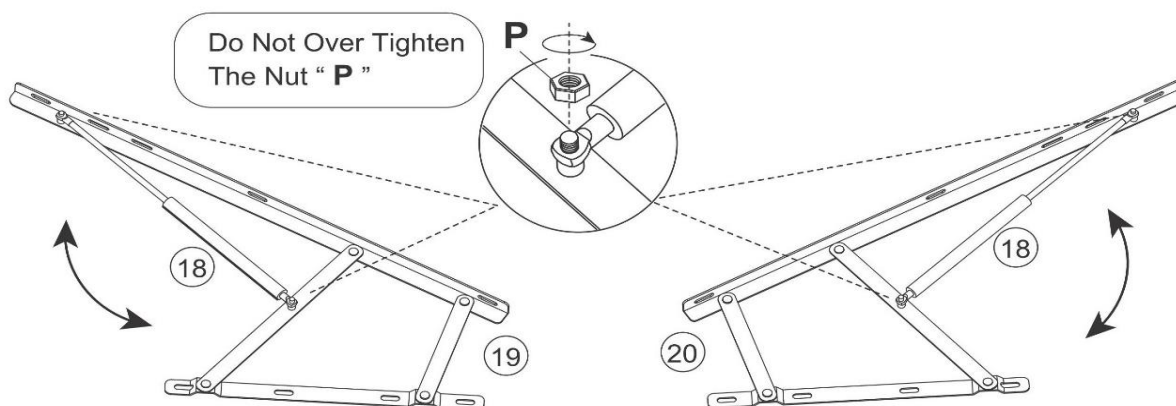


Step 05

Align lift mechanism (19) & (20) onto the Side Rail panel (5-1) & (5-2).

Tighten Bolt & Washer N using Allen Key R.

N x8  Bolt & Washer Φ8x20mm
--

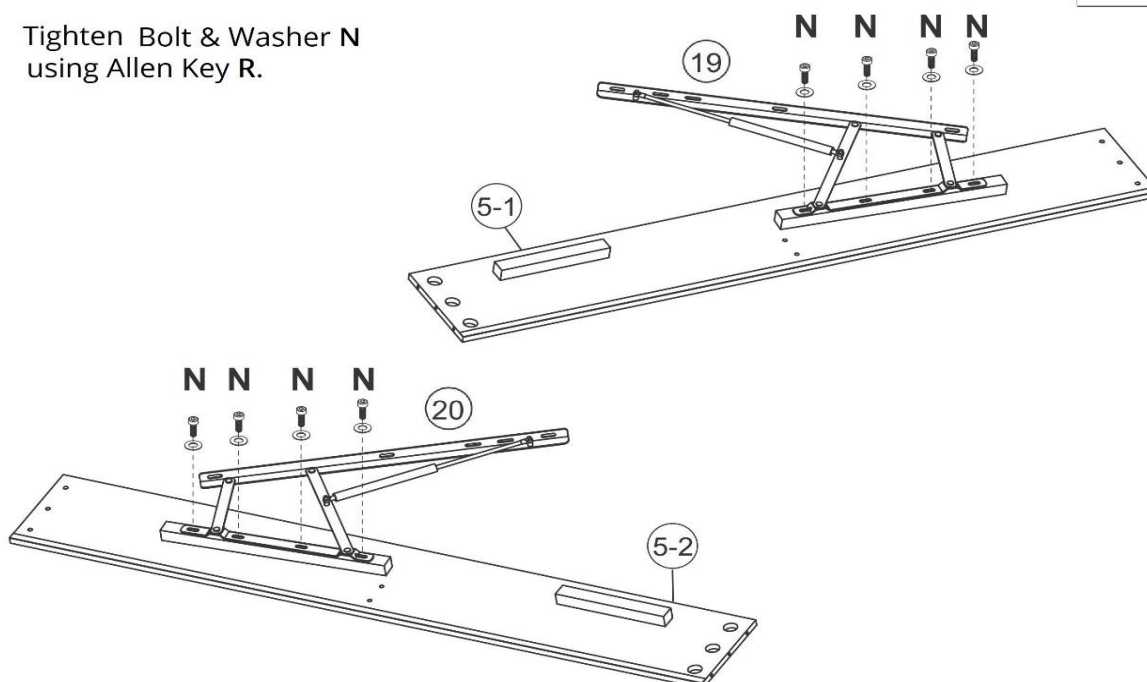


Step 06



Align the two assembled side panels with the headboard legs. Insert T-Nuts E into the inner holes of each side panel. Ensure the threaded hole of each T-Nut lines up with the outer bolt hole. Insert 3 Bolts A from the outside of the headboard into each side panel. Thread the bolts into the T-Nuts to connect the pieces. Tighten Bolts A using Allen Key M.

A x6	E x6
	
Bolt M6x80mm	T-Nut

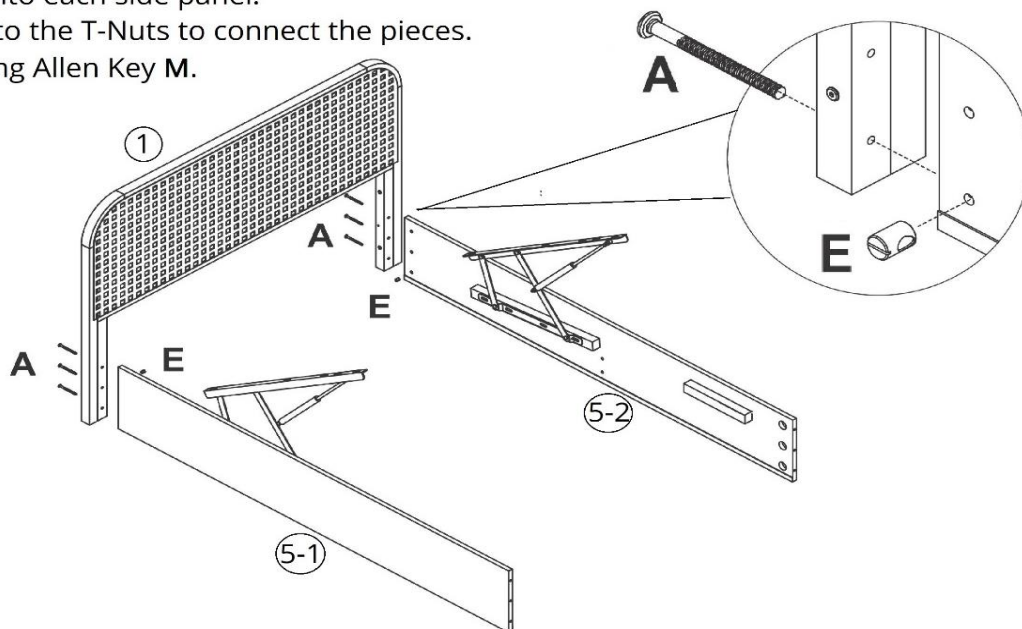


Step 07



Slide a Half Moon Washer K onto each protruding bolt on the inside. Thread Nut J onto each bolt over the washer. Use Spanner L to tighten all 6 nuts securely.

J x6	K x6	L x1
		
Nut M6	Half Moon Washer	Spanner M6

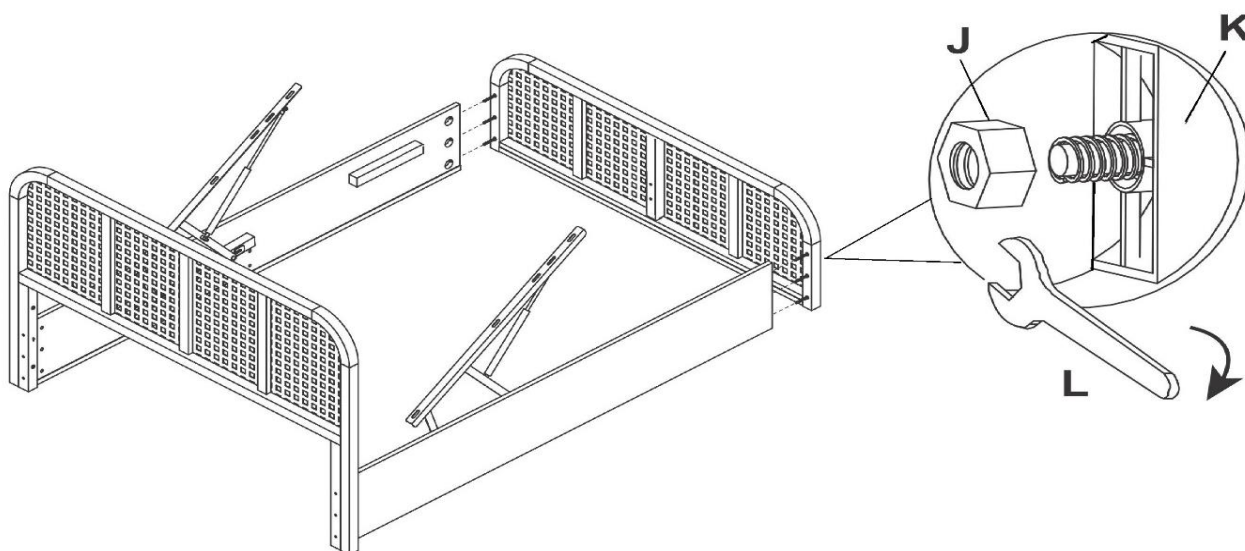


Step 08

Attach Headboard Lower Panel (11) to the Headboard leg with Screw U.
Tighten Screws with a Philip head Screwdriver.

U x6




Screw
Φ4x20mm

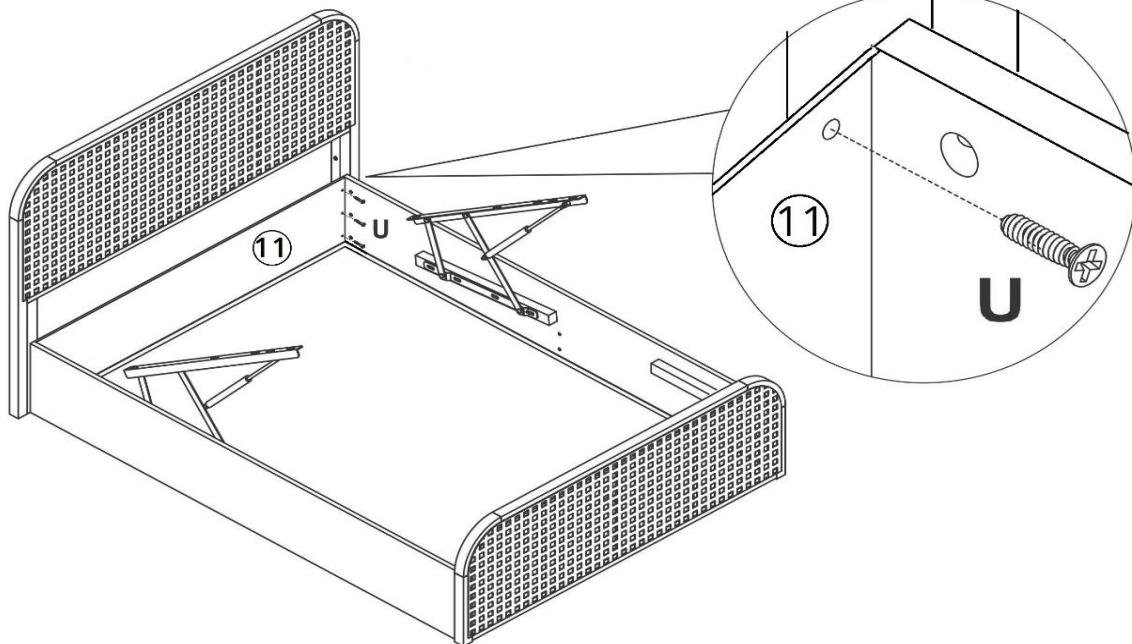


Step 09

Place Non-Woven Fabric Base Cover (31) inside the bottom of the bed frame inner 4 edges. Press firmly along the edges to secure the cover in place using the Velcro Tape pre-attached to the frame.


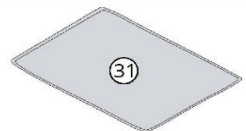


Non-Woven Fabric Base Cover

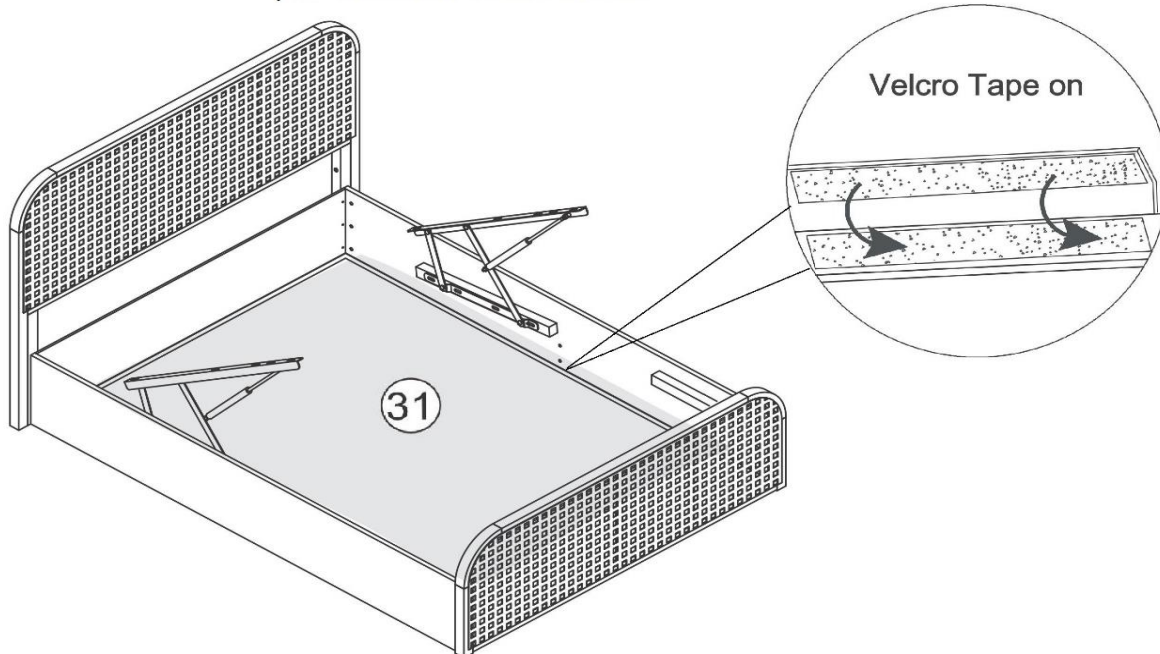



Step 10

Attach Side Rail Stretcher (17) to the Left & Right of Side Rail with Bolt G. Tighten with Allen key M.

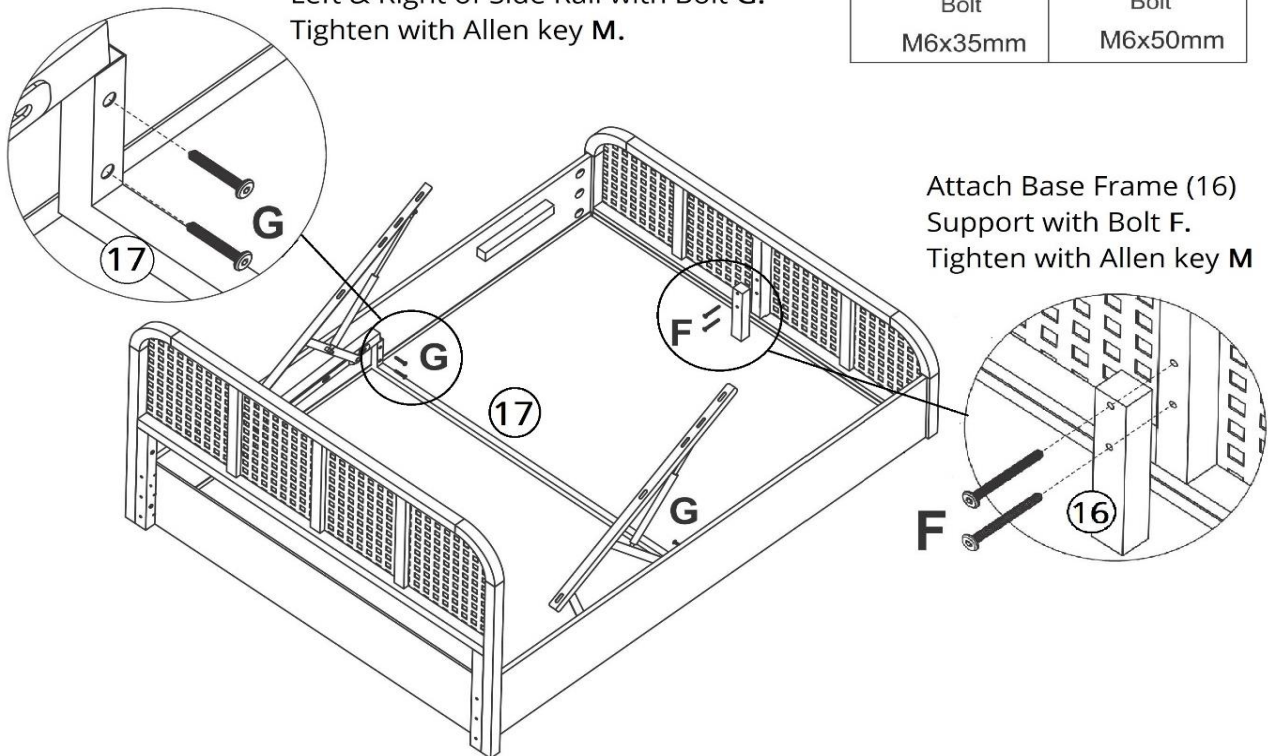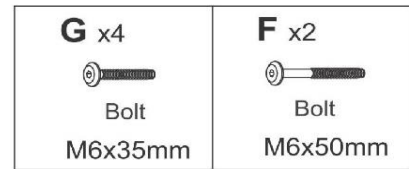

Step 11

Attach Centre Support Rail (22) to Headboard and Footboard Base Frame Rail (24 & (25) with Bolt **O**. Tighten with Allen key **M**.

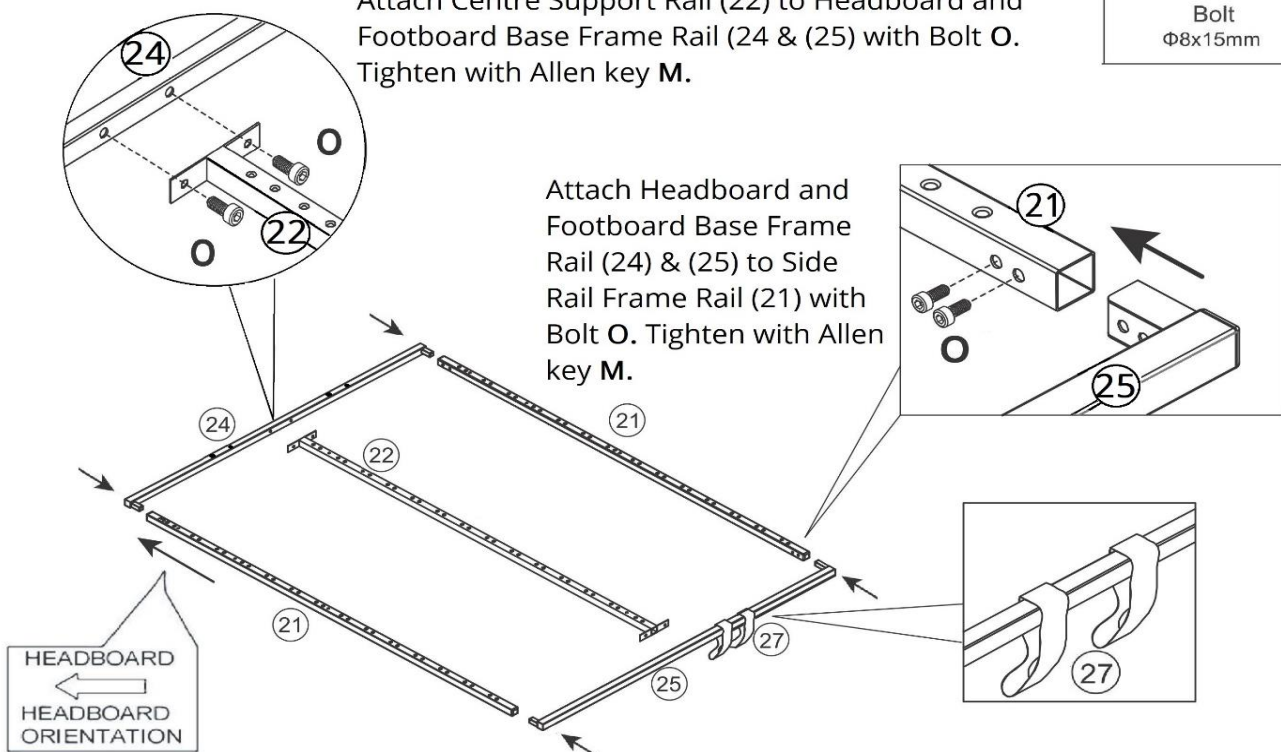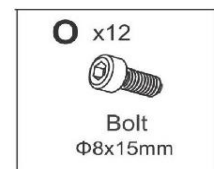


Step 12

Slot in Wood Slat (30) to End Slat Cap (28) and Centre Slat Cap (29). Align and Push in the Slat Caps into the metal frame slat holes.

PARTS REQUIRED

- (28) End Slat Cap × 30
- (29) Centre Slat Cap × 15
- (30) Wood Slat × 30
- (26) Mattress Stopper × 2


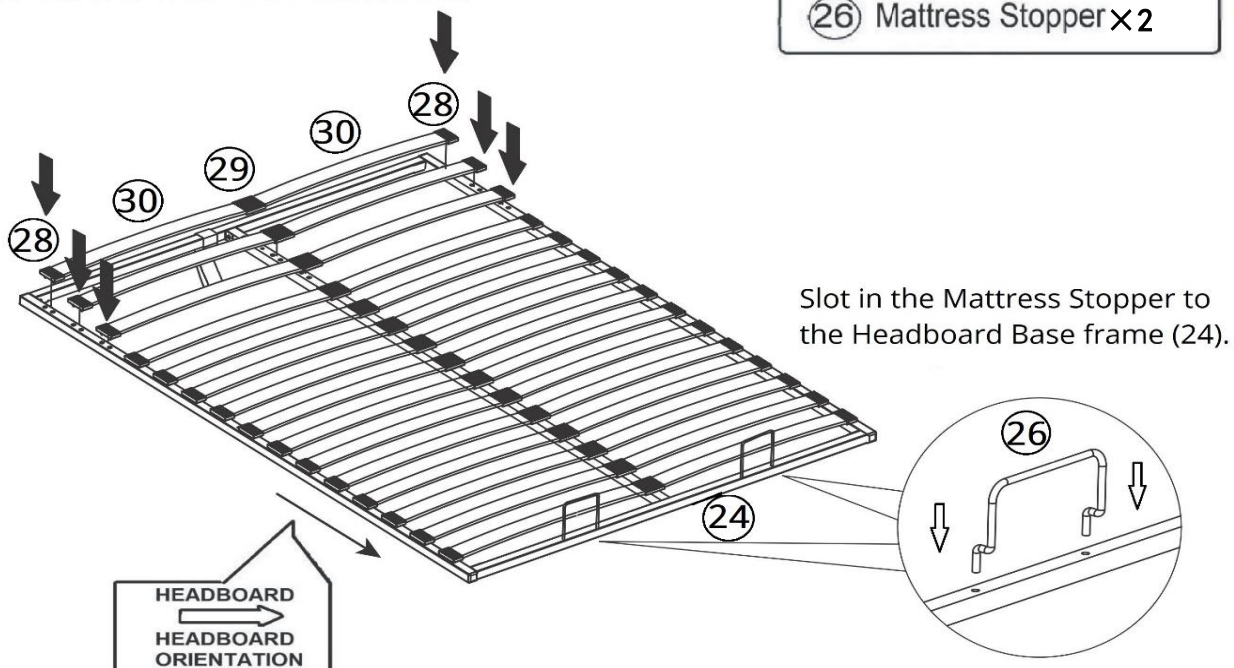


Step 13




Lift the Slat Frame and place in position on top of the Gas Lift Struts so that the holes on the Gas Lift Struts lineup with the locator holes along the sides of the Slat Frame.

Secure the Slat Frame onto the Struts with Bolt O using Allen Key R.

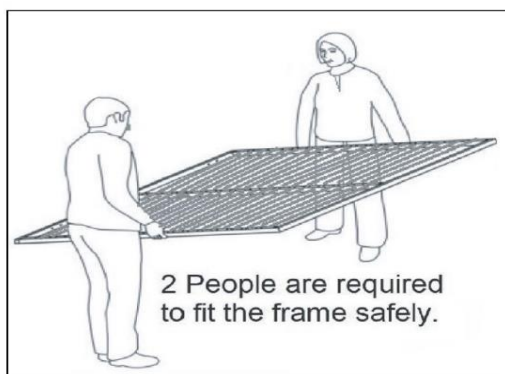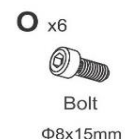

Warning: Should one of the side of the gaslift struts failed / lost of pressure or suspected to be failed or lost of pressure please stop using the ottoman storage function and contact the retailer you bought your bed from.

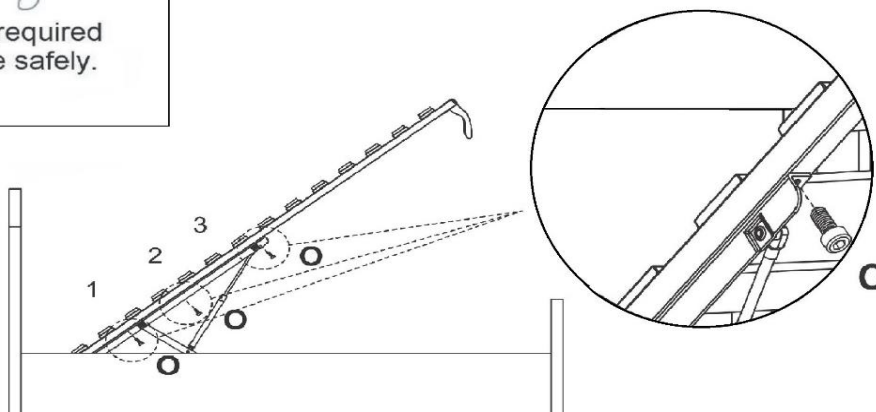


Step 14

Attach the Centre Support Leg (23) to Centre Support Rail (22) with Bolt O. Tighten with Allen key R.


O x6



Bolt
Φ8x15mm

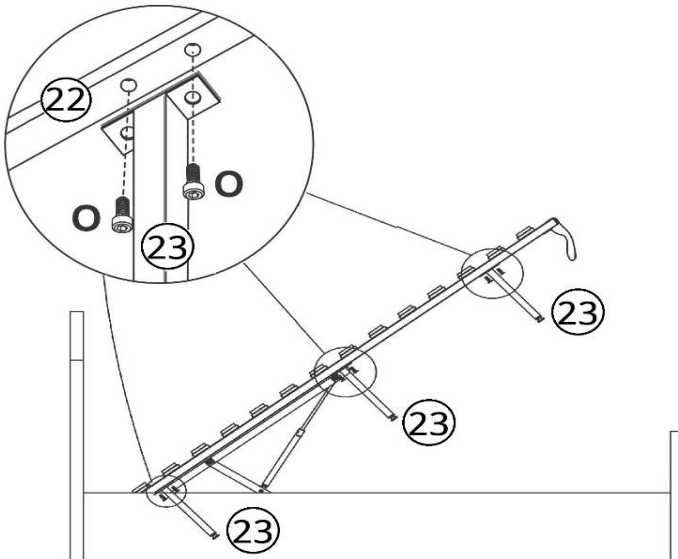

Step 15

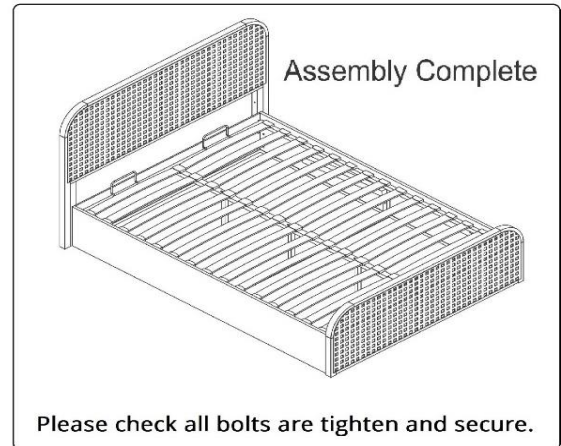

Important Maintenance & Safety Notice

To ensure the longevity of your bed frame and prevent structural damage, please adhere to the following guidelines regarding relocation and cleaning.



Do Not Drag, Pull or Push Bed

The bed is designed to support vertical weight (downward pressure) and is not built to withstand lateral (sideway) force. Moving the bed while it is fully assembled—especially with the mattress still on top—can lead to several types of permanent damage:

Structural Stress: Lateral movement puts extreme pressure on the joints, bolts, and connecting brackets, causing them to loosen, bend, or snap.

Support Leg Failure: Center support legs are particularly vulnerable. Dragging the bed can cause these legs to tilt or break off entirely, leading to a collapsed frame.

Floor & Frame Damage: Pushing the bed can scratch or gouge your flooring and may cause the bed's legs to splinter or crack.

How to Properly Relocate or Clean Under the Bed

If you need to move the bed to clean the floor or rearrange your room, please follow these steps:

Remove the Mattress: Never attempt to move the bed with the mattress or bedding in place. This reduces the weight and the risk of frame collapse.

Team Lift: With at least two people, lift the bed frame entirely off the floor to move it. Do not slide it.

Disassemble if Necessary: For long-distance moves or relocation to a different room, it is highly recommended to partially or fully disassemble the frame to protect the hardware.

Damage caused by improper handling, dragging, or pushing is not covered under the manufacturer's warranty.