


GLOBAL PROCUREMENT AND MARKETING LIMITED

PHOENIX 3 DOOR WARDROBE

Assembly instruction- Please keep for future reference

ROBPHO3WT

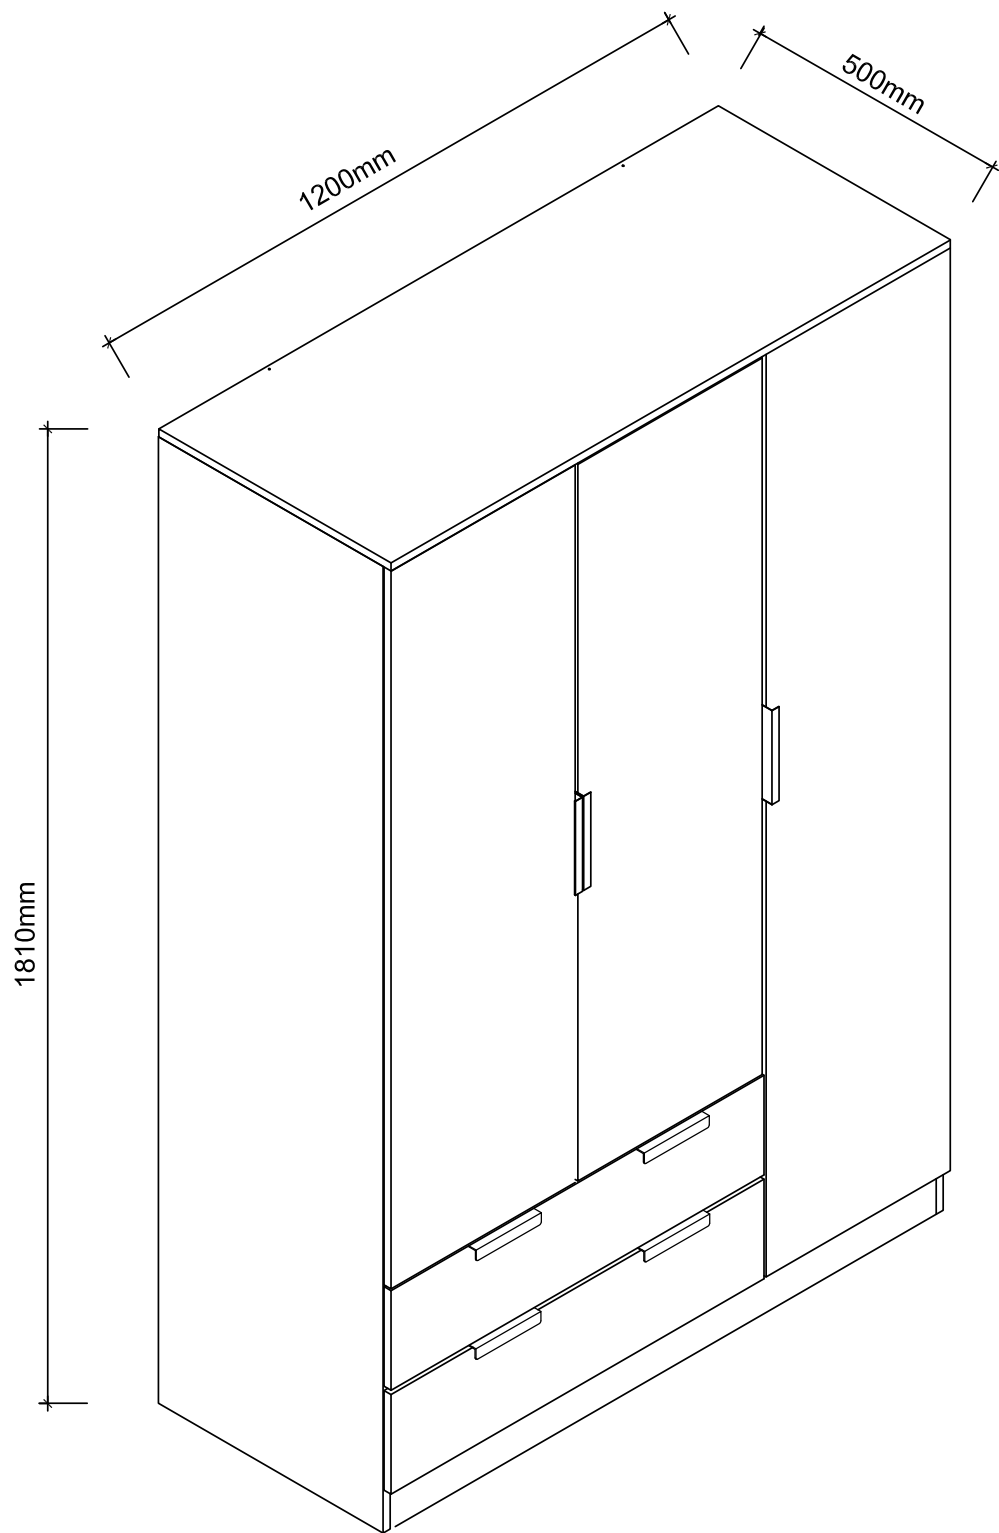

Dimensions	No.People	Assembly Time	OW#
Width: 120 cm Depth: 50 cm Height: 181 cm		60 mins (approx)	ROBPHO3WT

thank you

For purchasing this
GPM Limited
product

Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit. only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you are unhappy with the product and wish to return it, please following the retailer's returns procedure.

Components - Panels

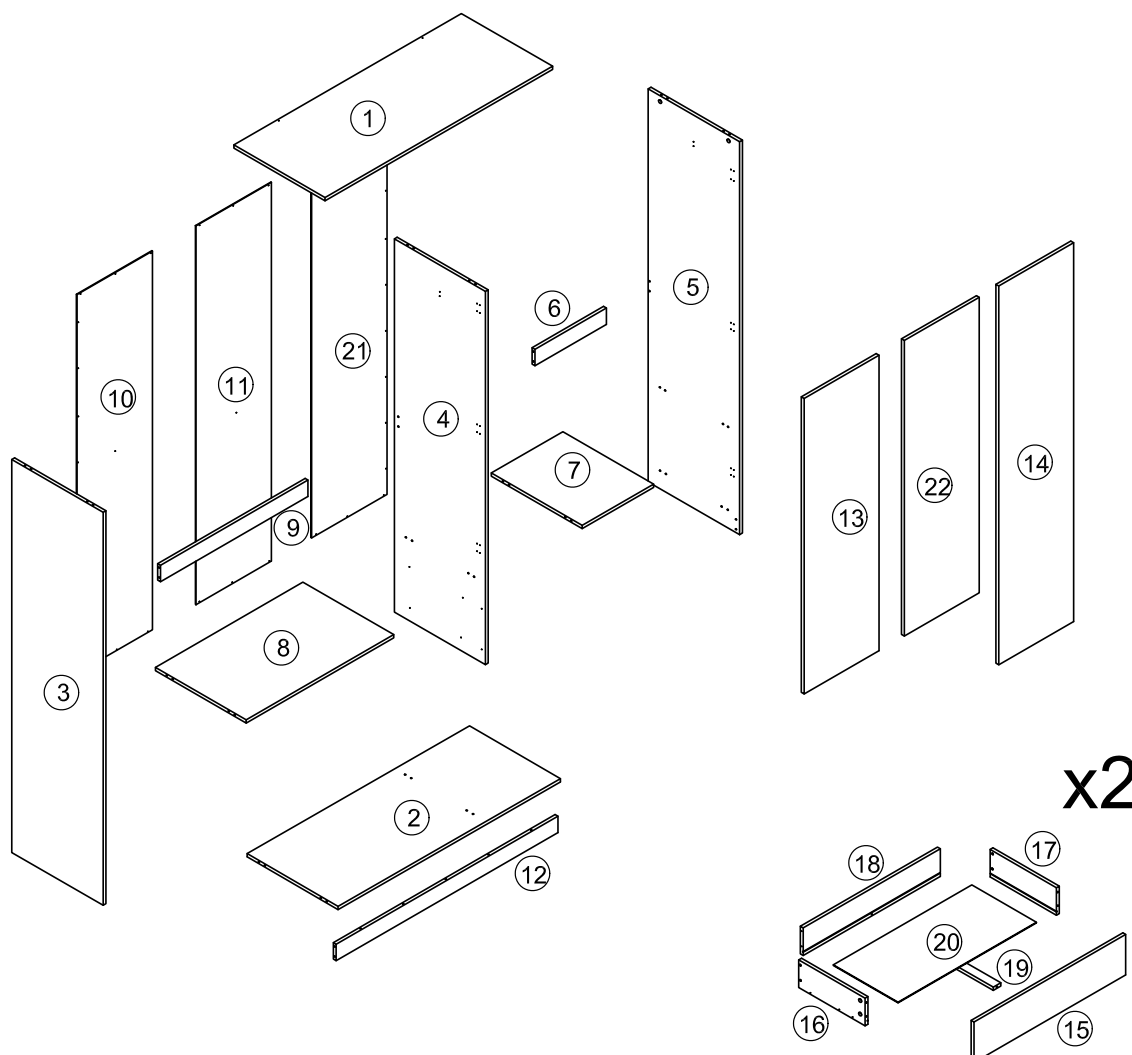

Components - Panels

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.

Part No	Description	Qty	Thickness (mm)
1	Top Panel	1	15 mm
2	Bottom Panel	1	15 mm
3	Left Side Panel	1	15 mm
4	Middle Vertical Panel	1	15 mm
5	Right Side Panel	1	15 mm
6	Right Upper Back Support Panel	1	15 mm
7	Shelf	1	15 mm
8	Shelf	1	15 mm
9	Left Upper Back Support Panel	1	15 mm
10	Back Board	1	15 mm
11	Back Board	1	3 mm
12	Lower Front Panel	1	15 mm
13	Left Door	1	15 mm
14	Right Door	1	15 mm
15	Drawer Front	2	15 mm
16	Drawer Left Side Pane	2	15 mm
17	Drawer Right Side	2	15 mm
18	Drawer Back	2	15 mm
19	Drawer Bottom Support	2	15 mm
20	Drawer Bottom Board	2	3 mm
21	Back Board	1	3 mm
22	Middle Door	1	15 mm

Important-Please read these instructions fully before starting assembly












If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Components - Fixings



If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

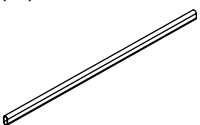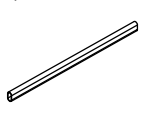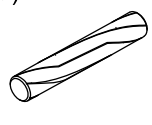(A)  Cam Bolt M6x35mm X 43+3	(B)  Cam Lock M15x10mm X 43+3	(C)  Dowel M6x30mm X 18+2	(D)  M4x35mm X 12+1	(E)  M3.5x14mm X 62+5	(F)  Handle X 7
(G)  Handle X 6	(H)  M3x12mm X 40+3	(J)  Handle X 8	(K)  M2.5x12 mm X 44+3	(L)  Handle X 7	(M)  Handle X 3
(O)  Handle X 4	(CL)  Drawer Slide X 2	(DL)  Drawer Slide X 2	(CR)  Drawer Slide X 2	(DR)  Drawer Slide X 2	(P)  Handle X 1
(Q)  Handle X 1	(R)  Handle X 1	(S)  Dowel M6x50mm X 2	(T)  Handle X 1		


ANTI - TIPPING KITS

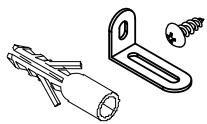(D)  M4x35mm X 2	(N)  Handle X 2			
---	--	--	--	--

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)







Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk










Assembly Instructions

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk


Step 1

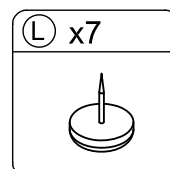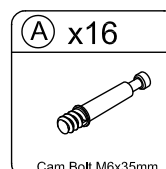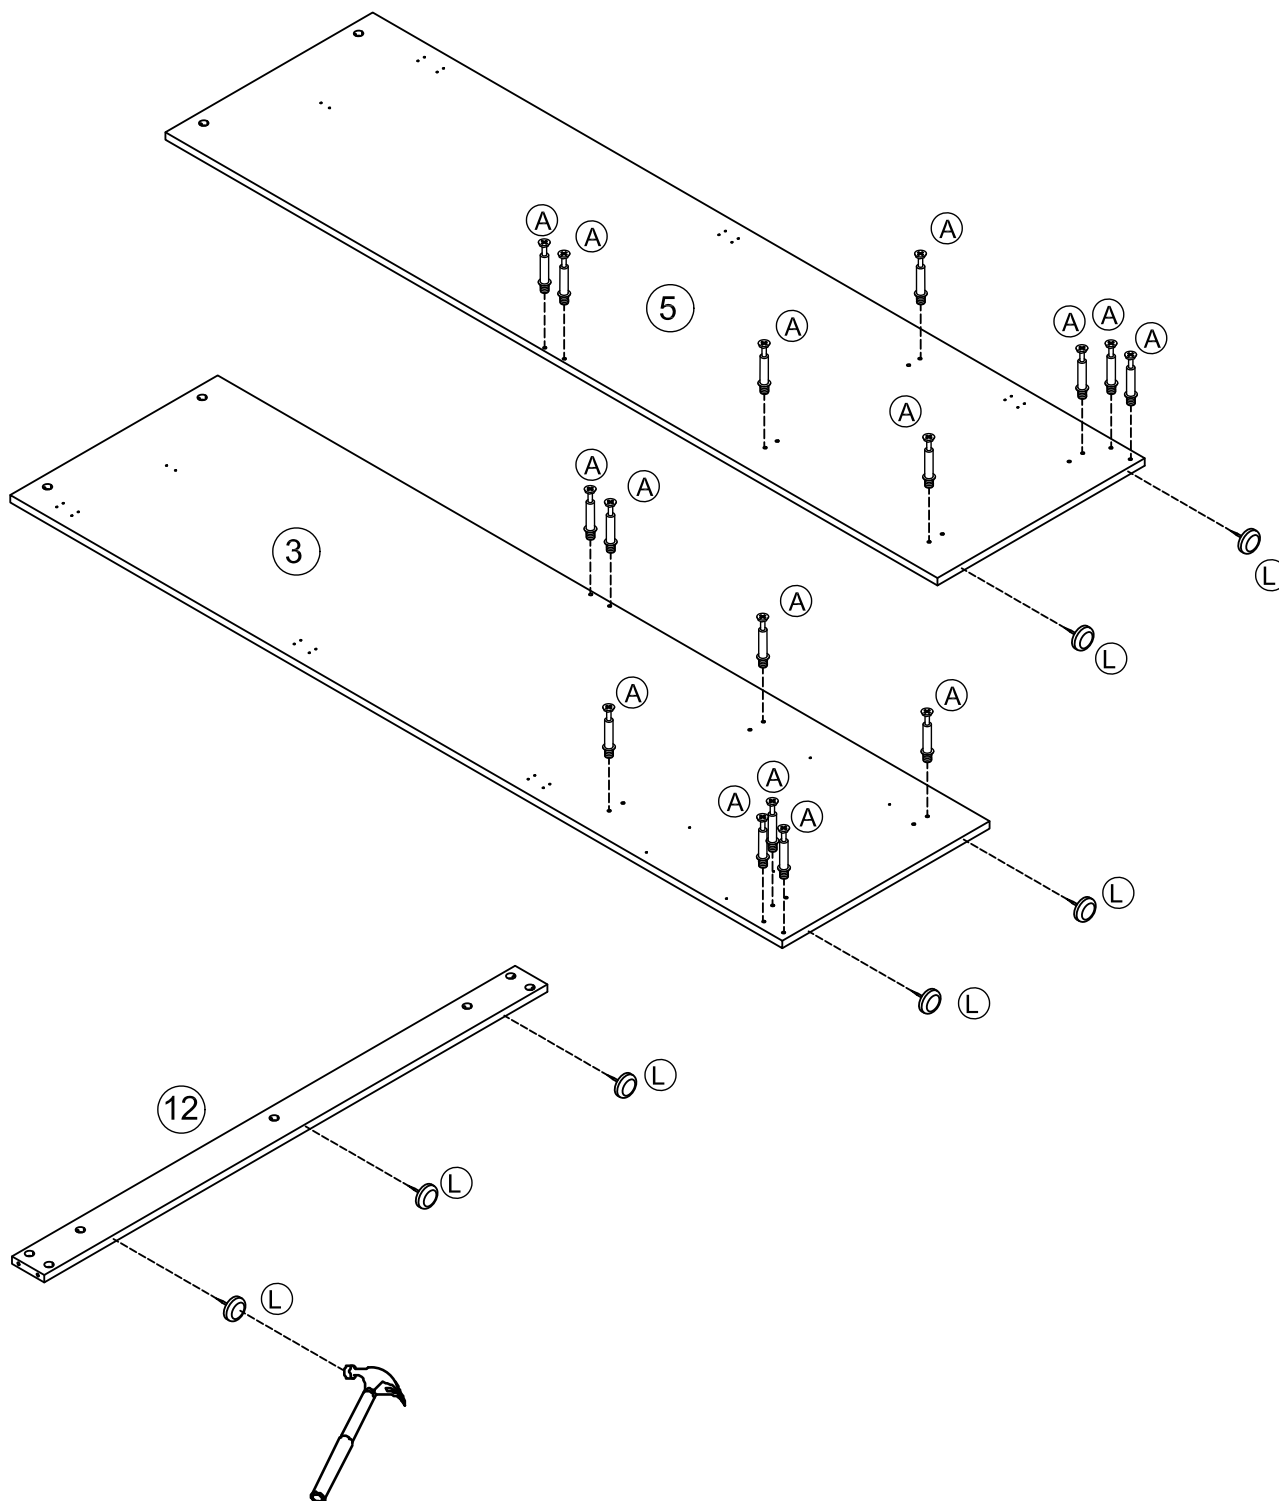


Step 2

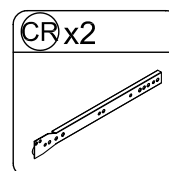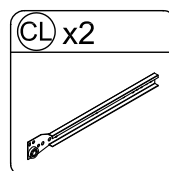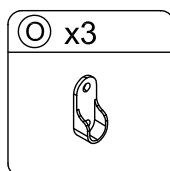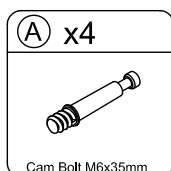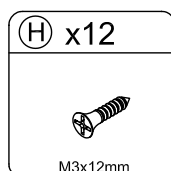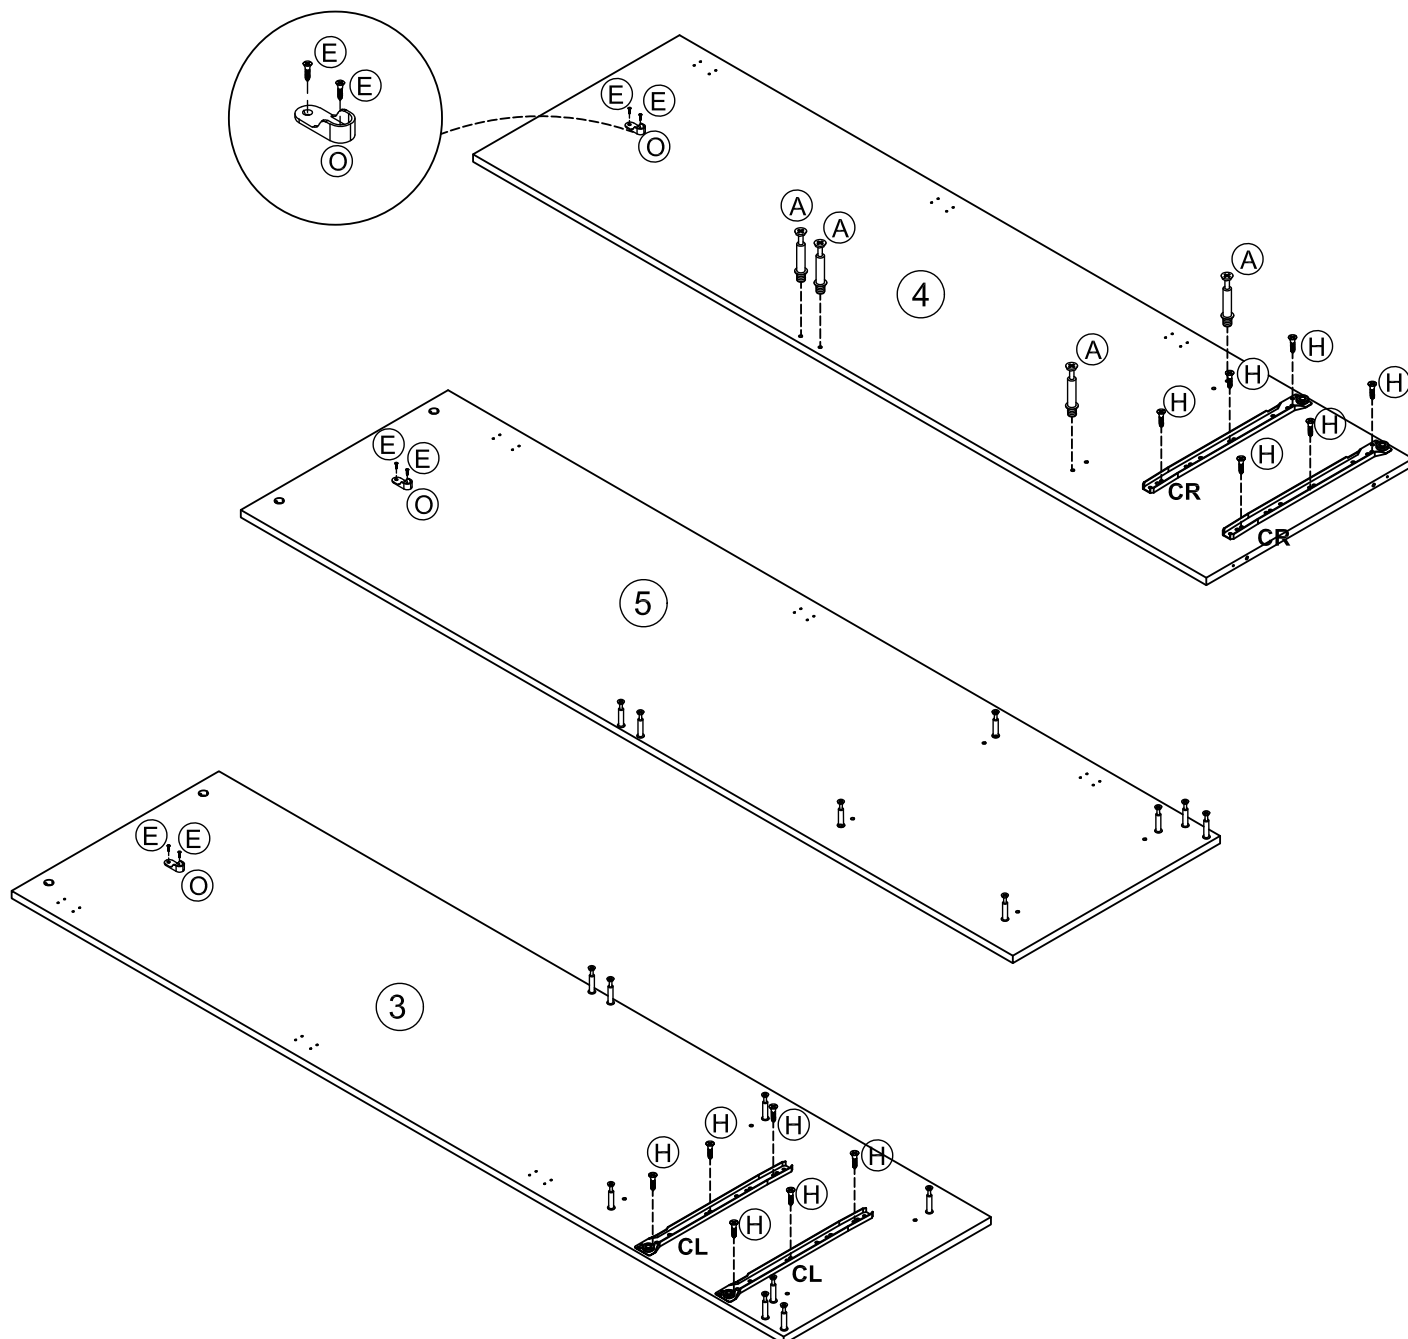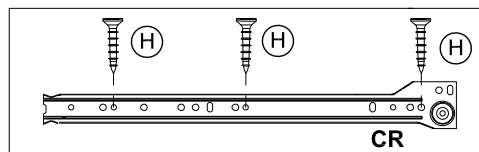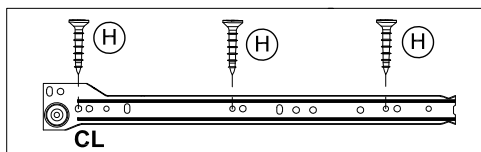







Step 3

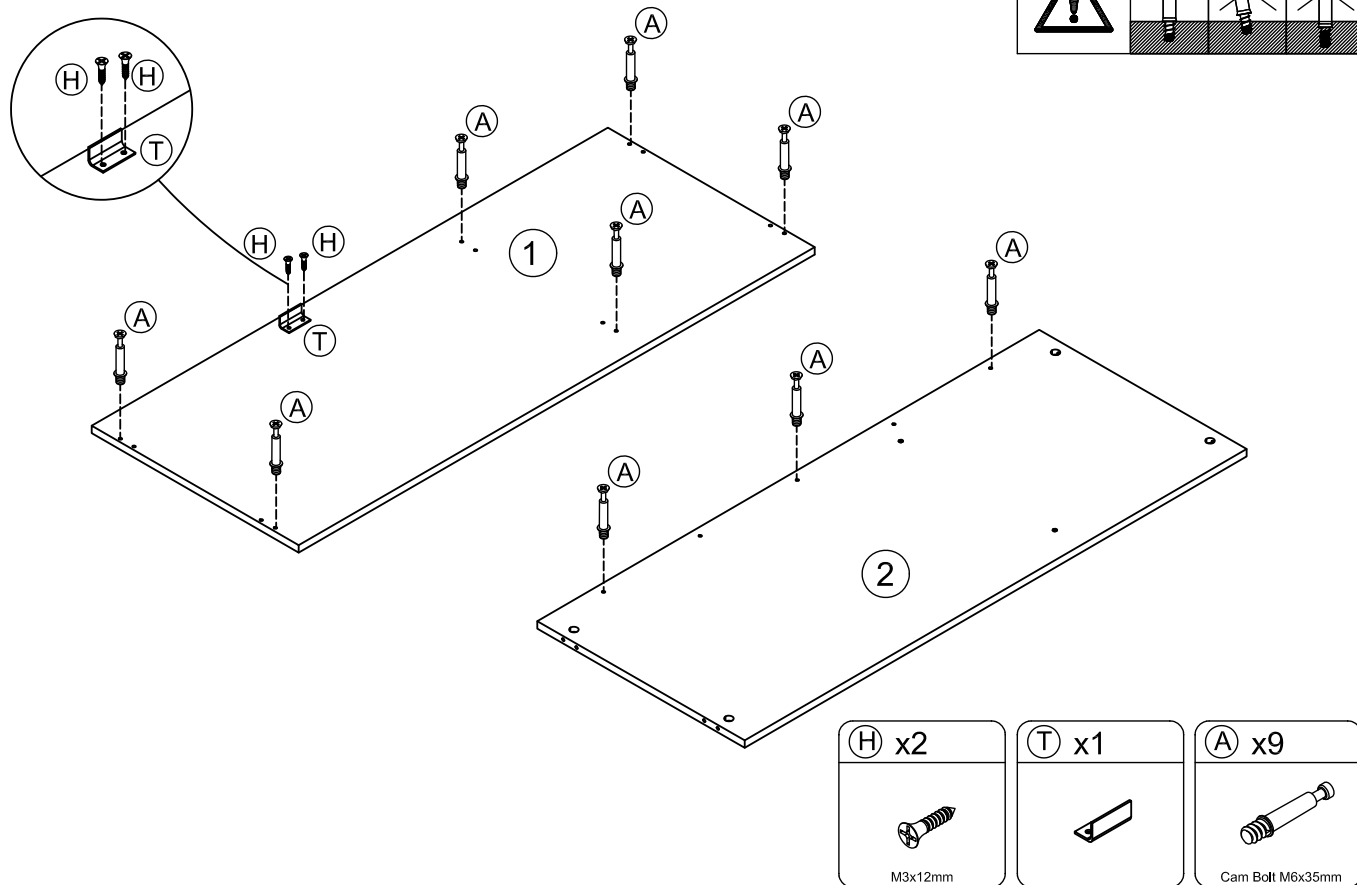





Step 4

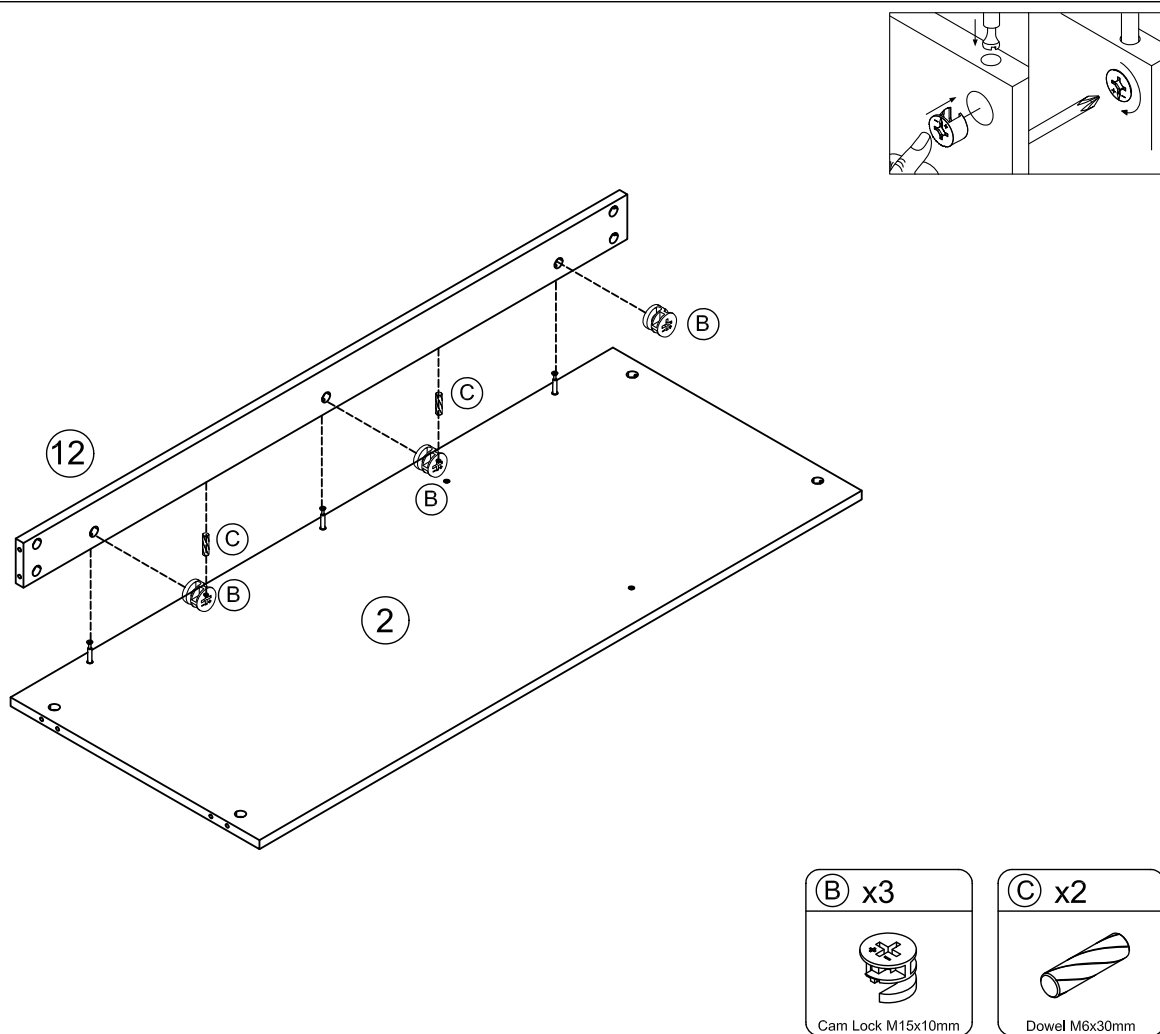


Step 5

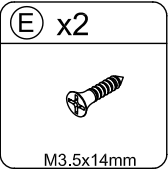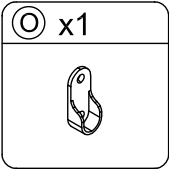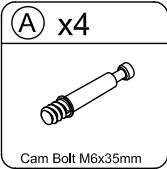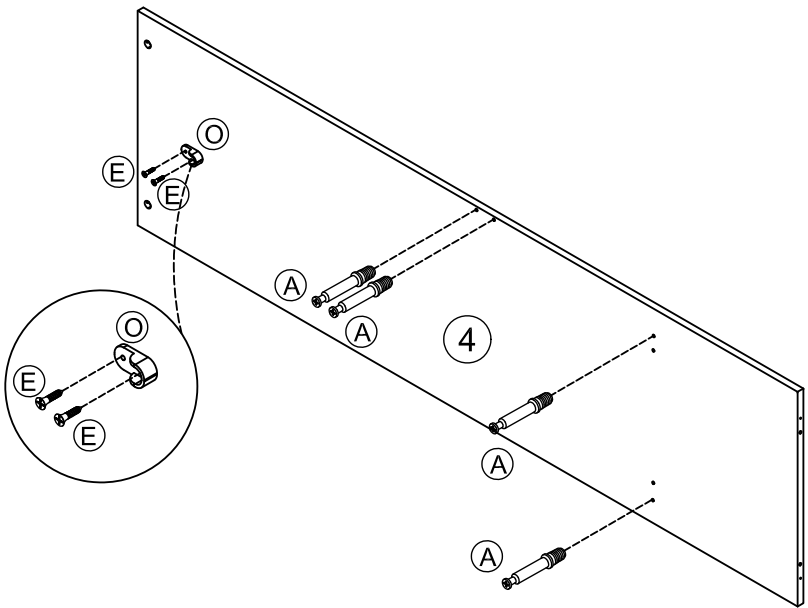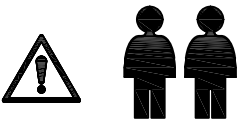


Step 6

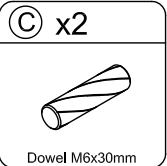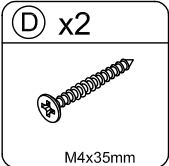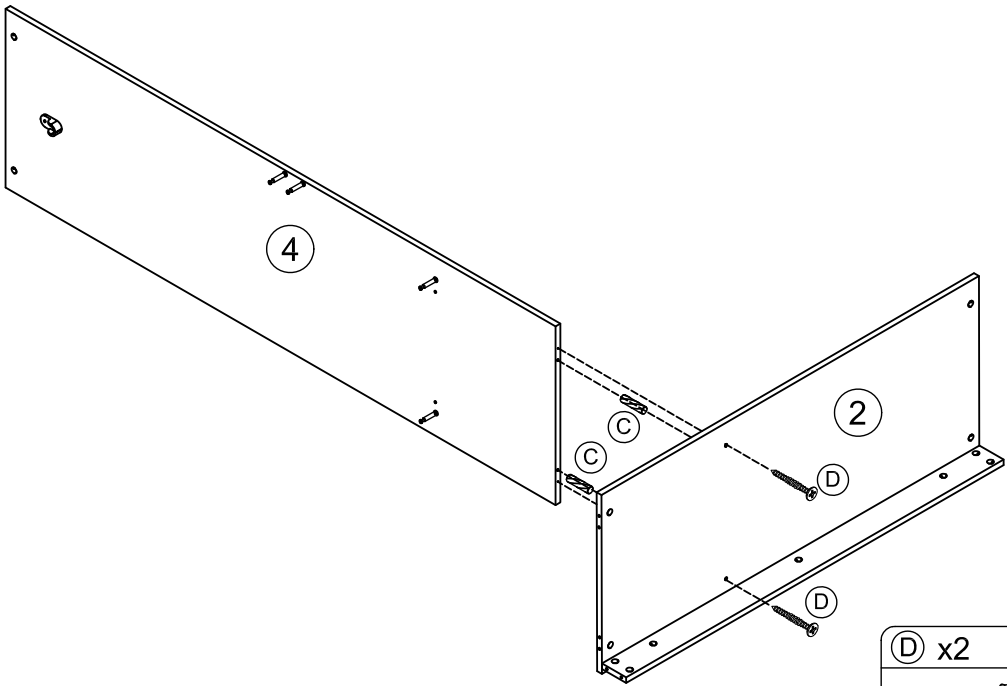




Step 7

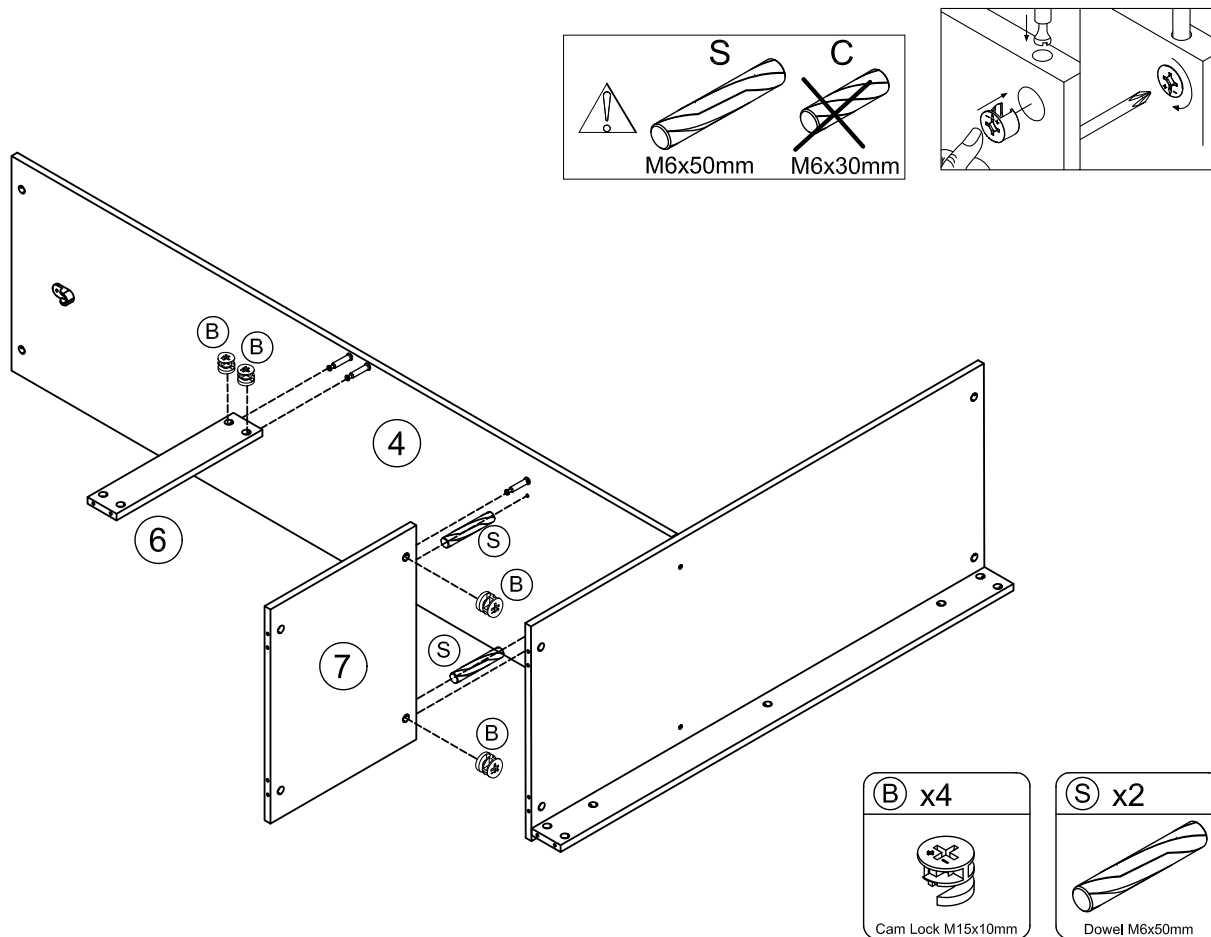





Step 8

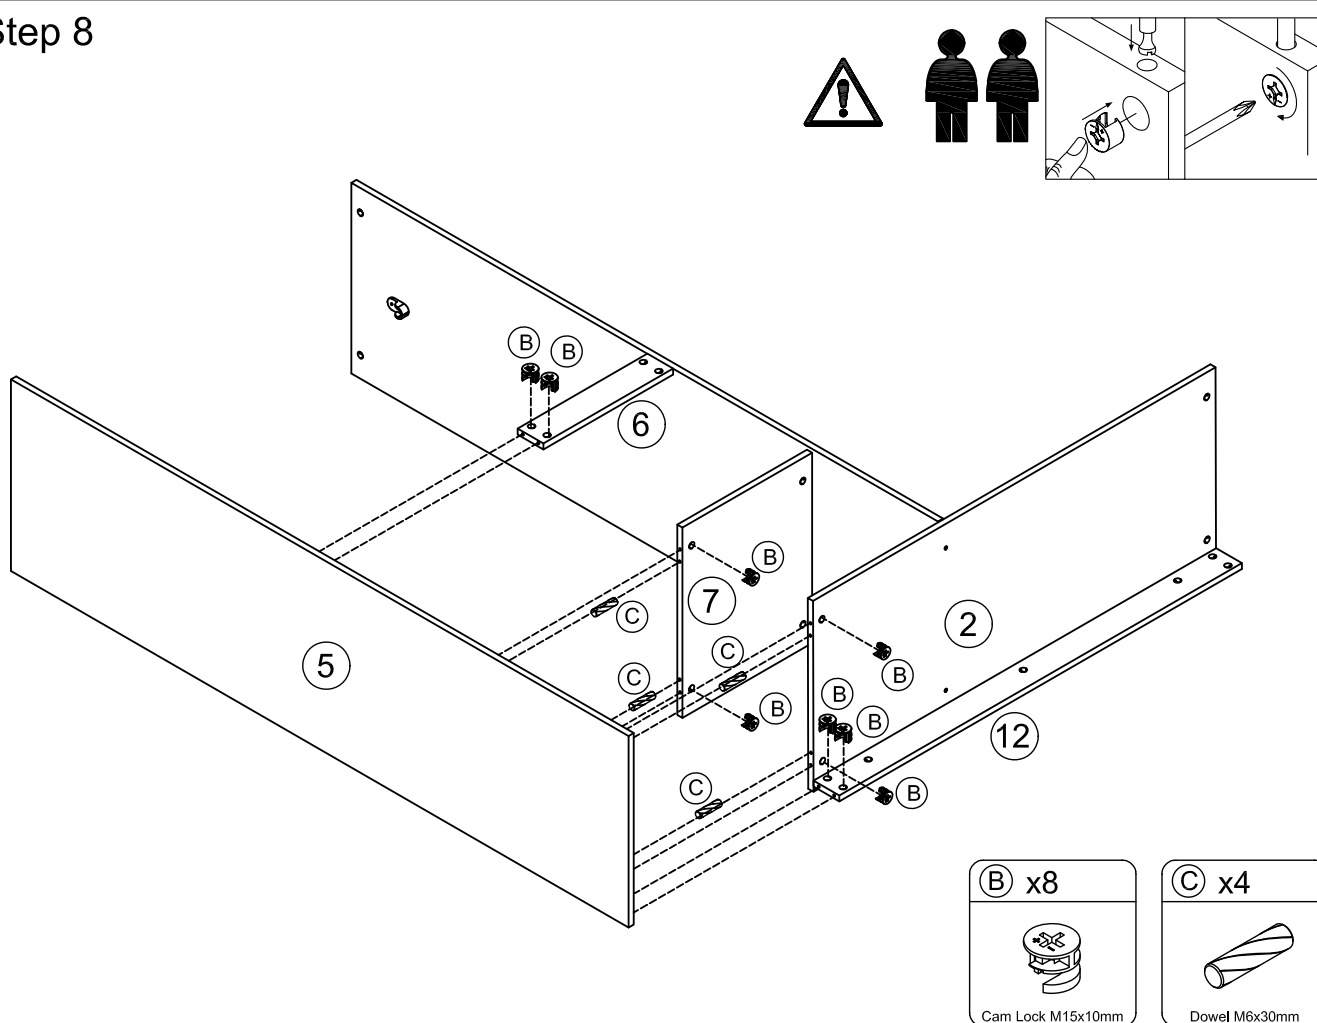





Step 9

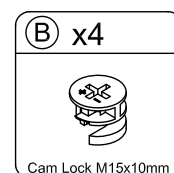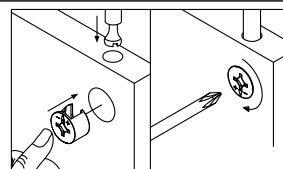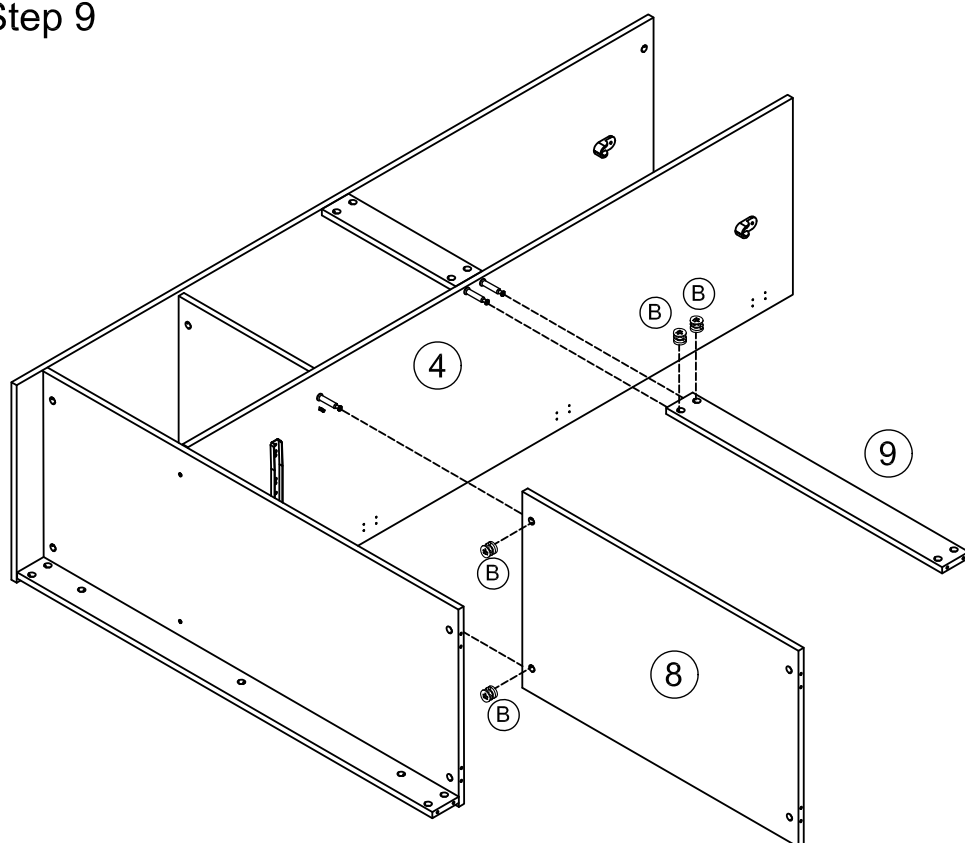







Step 10

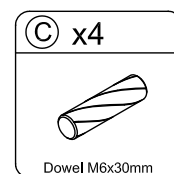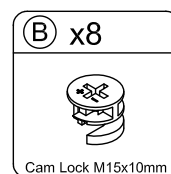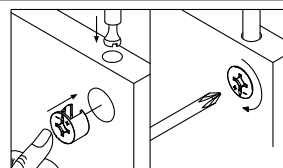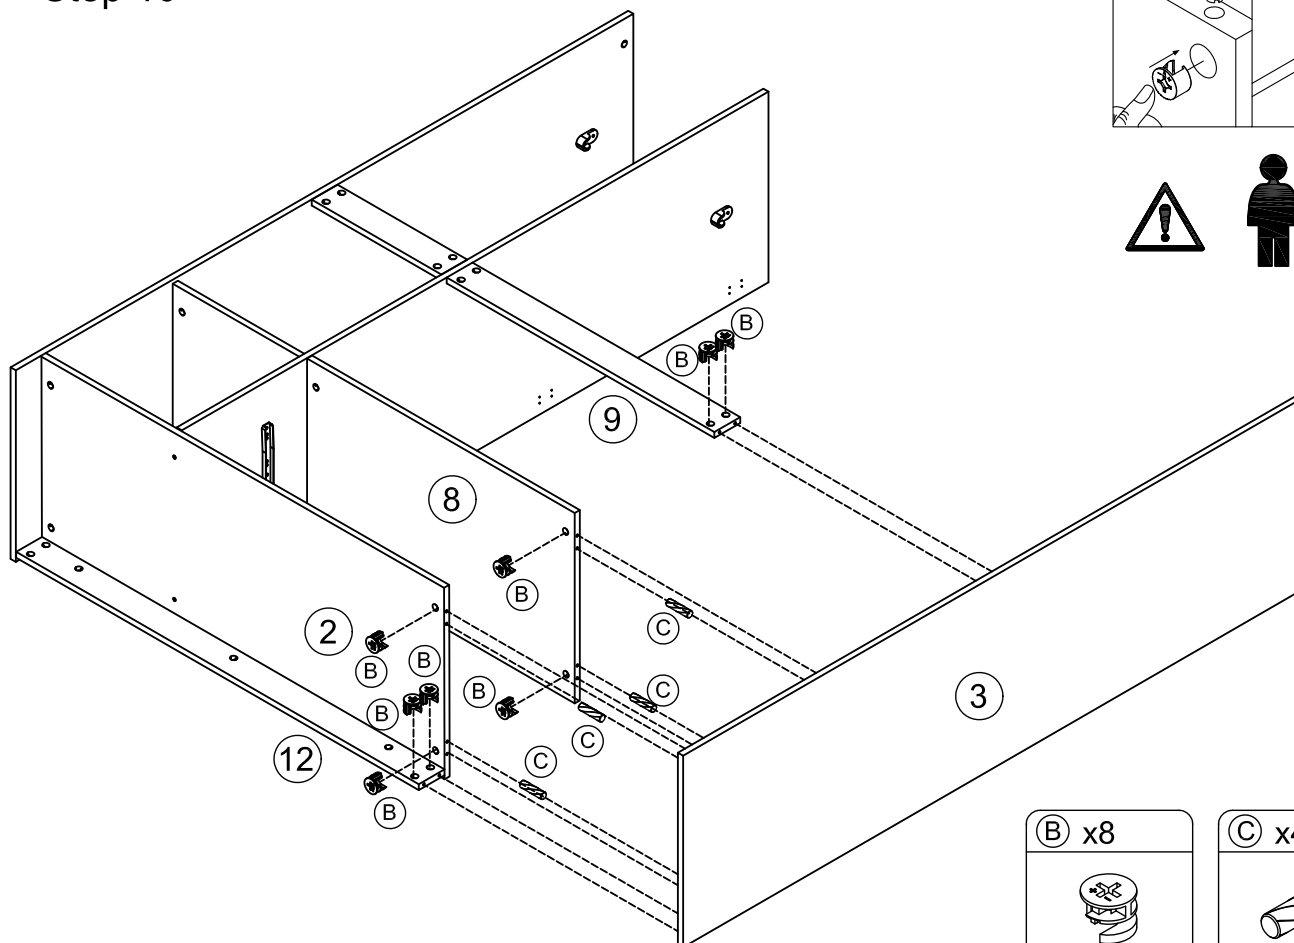



Step 11

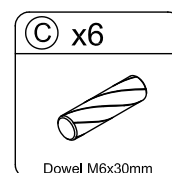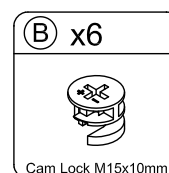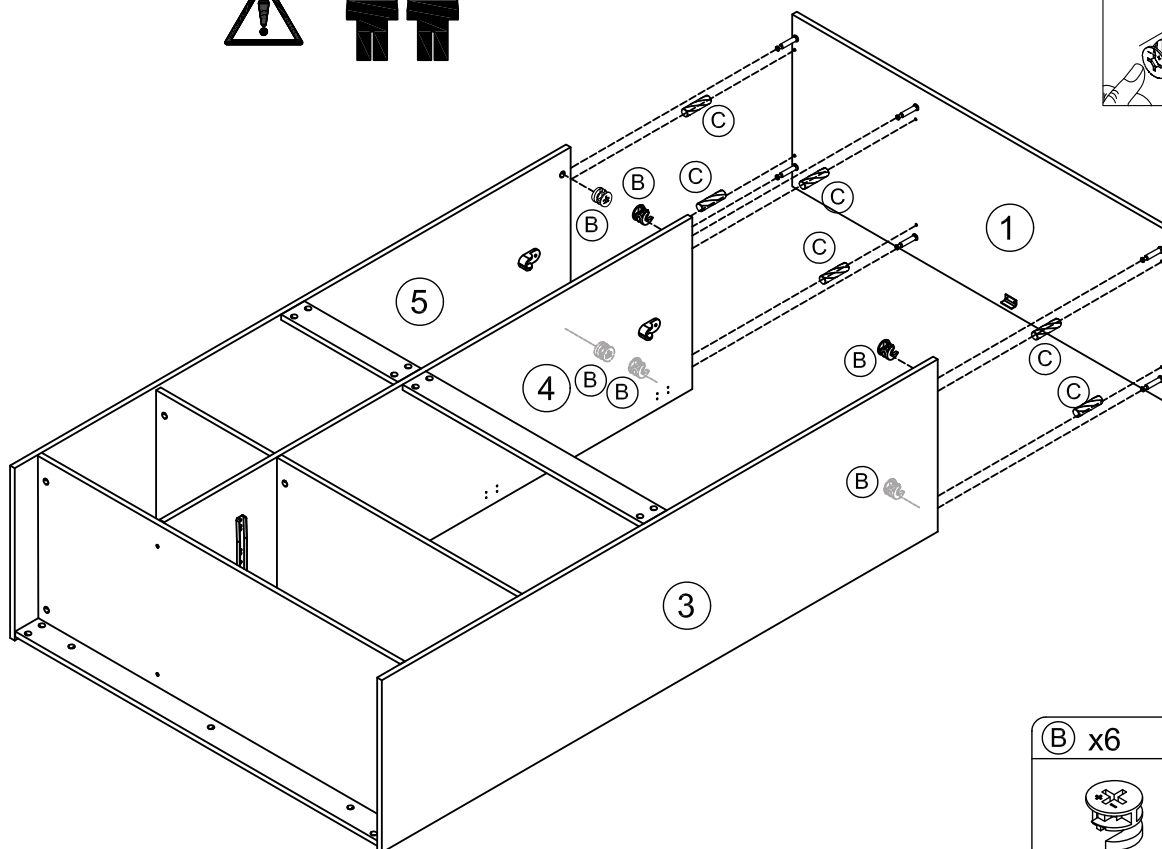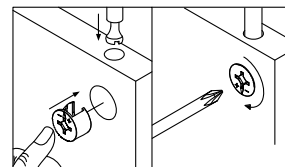





Step 12

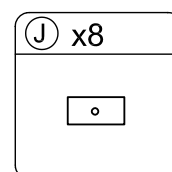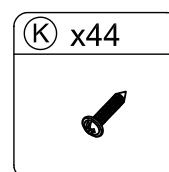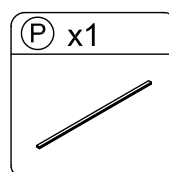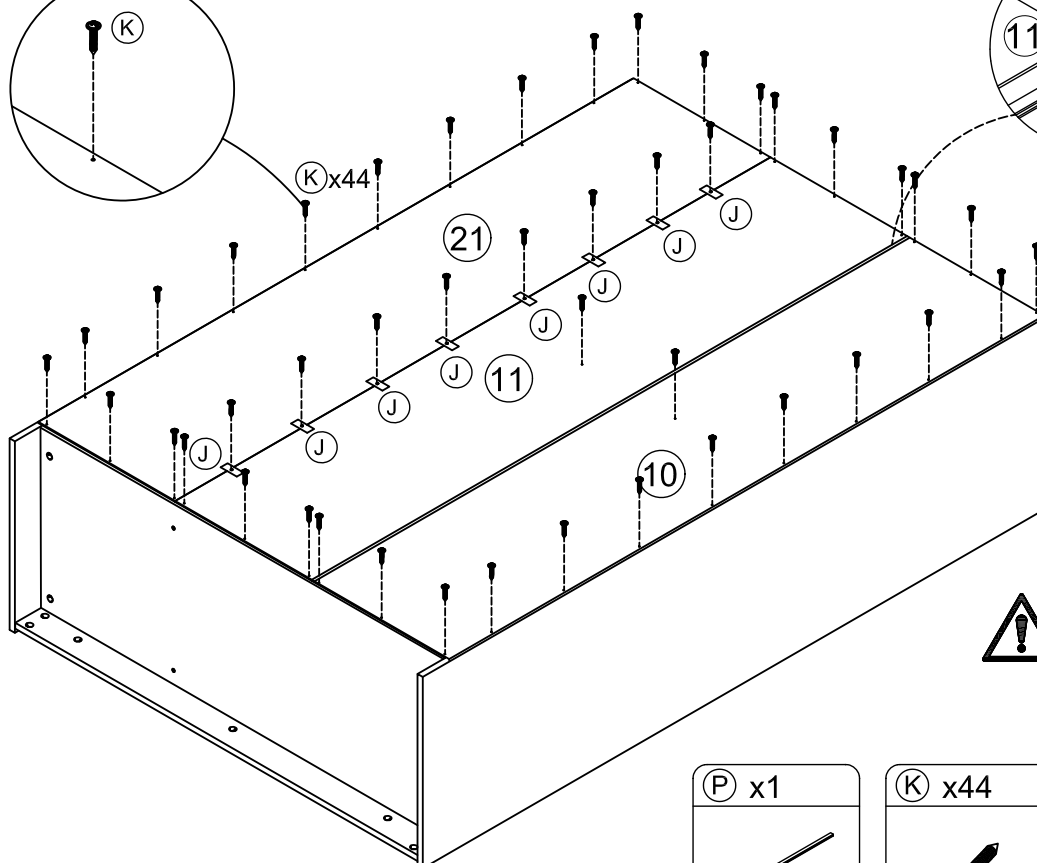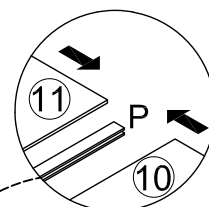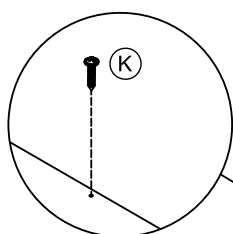



Step 13

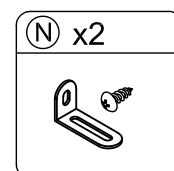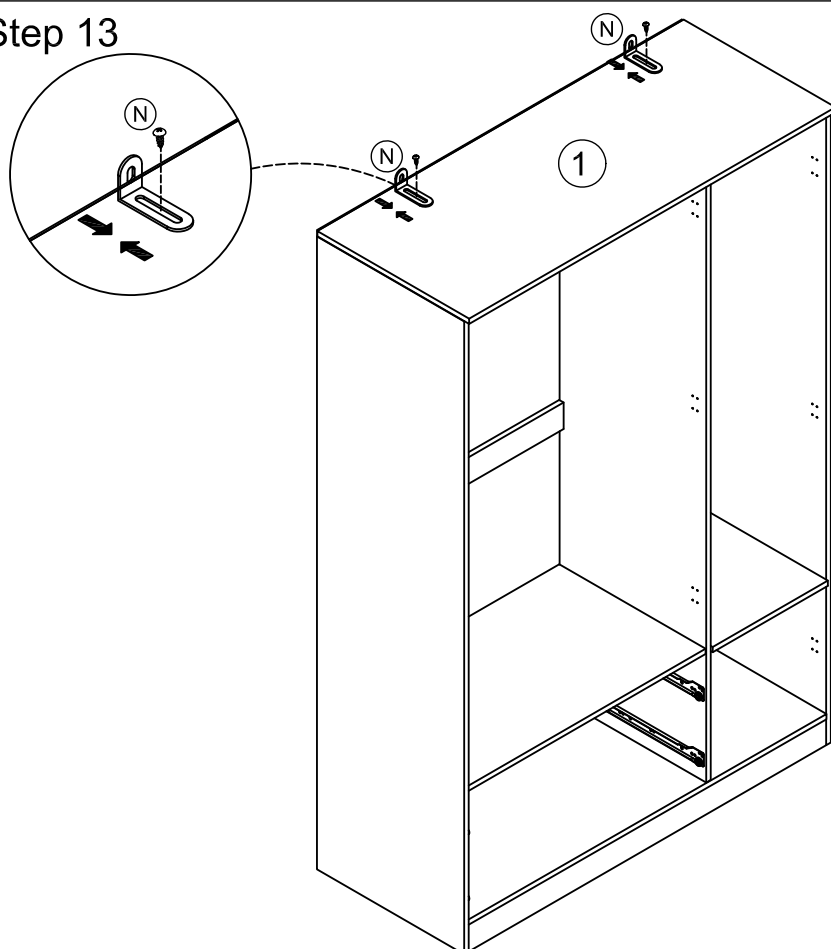


Step 14

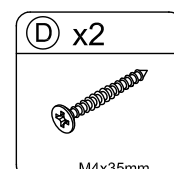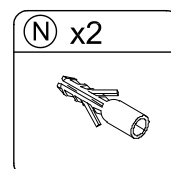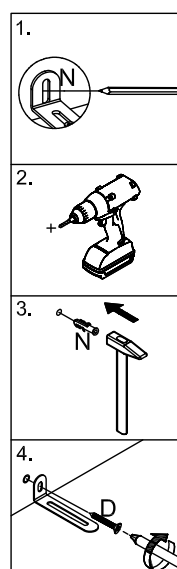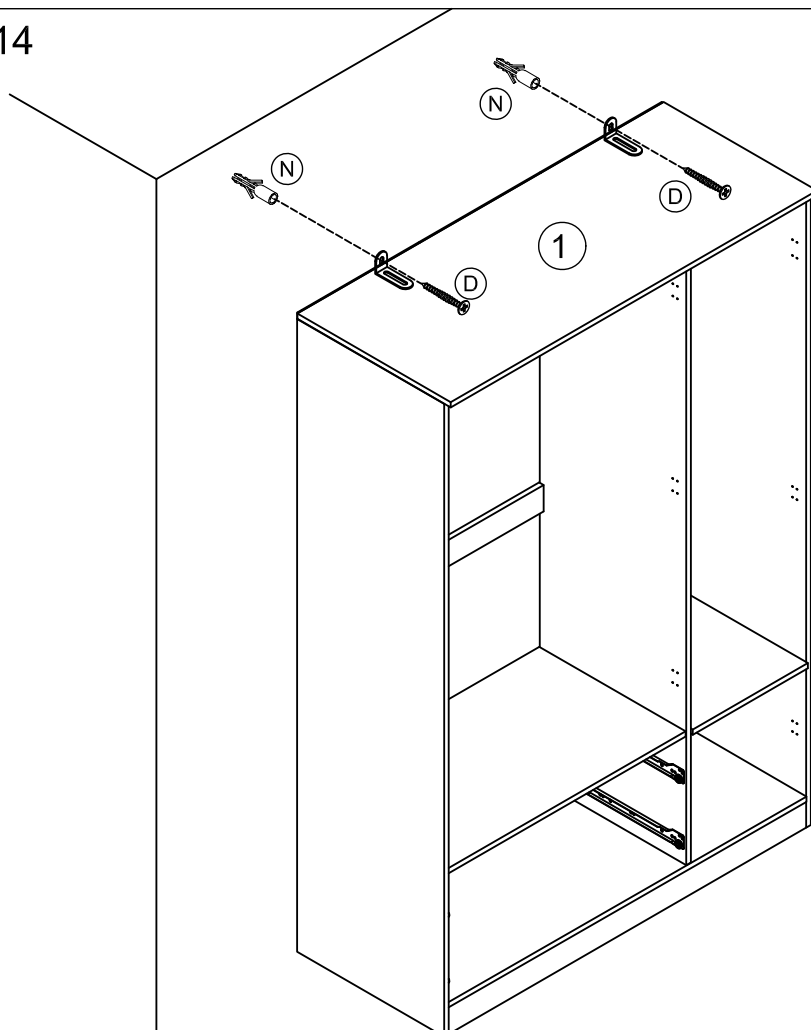

Step 15

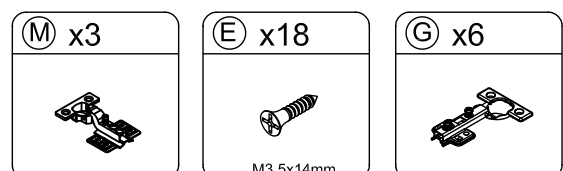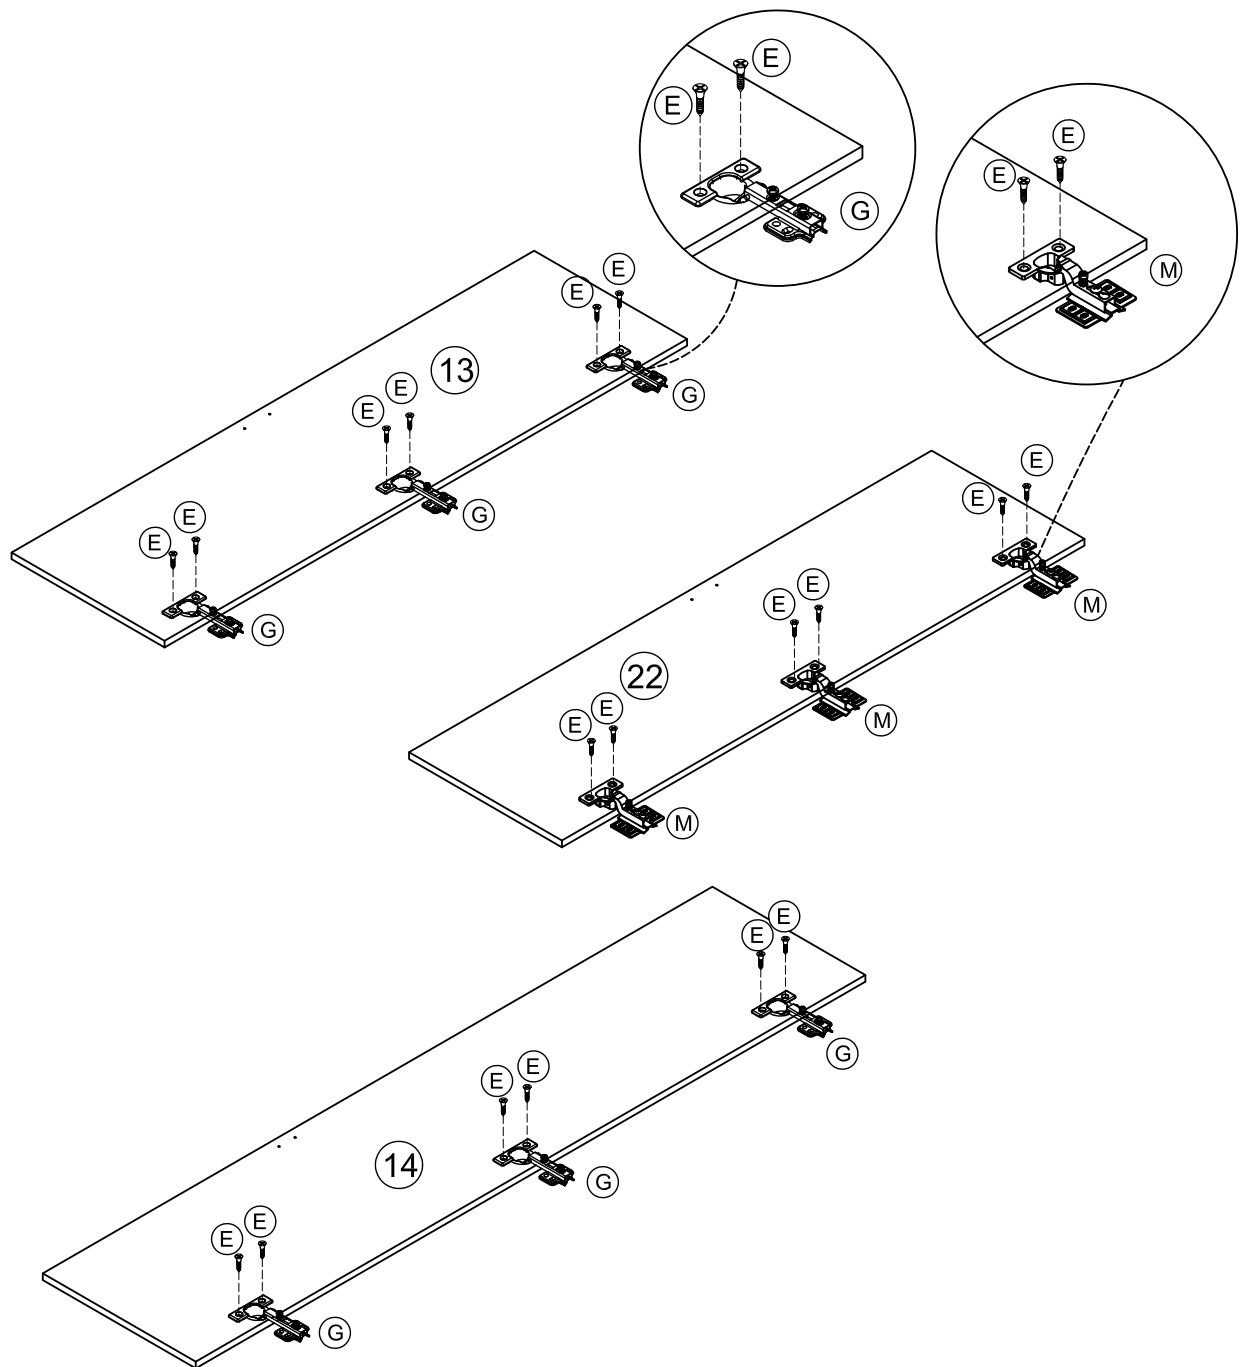


Step 16

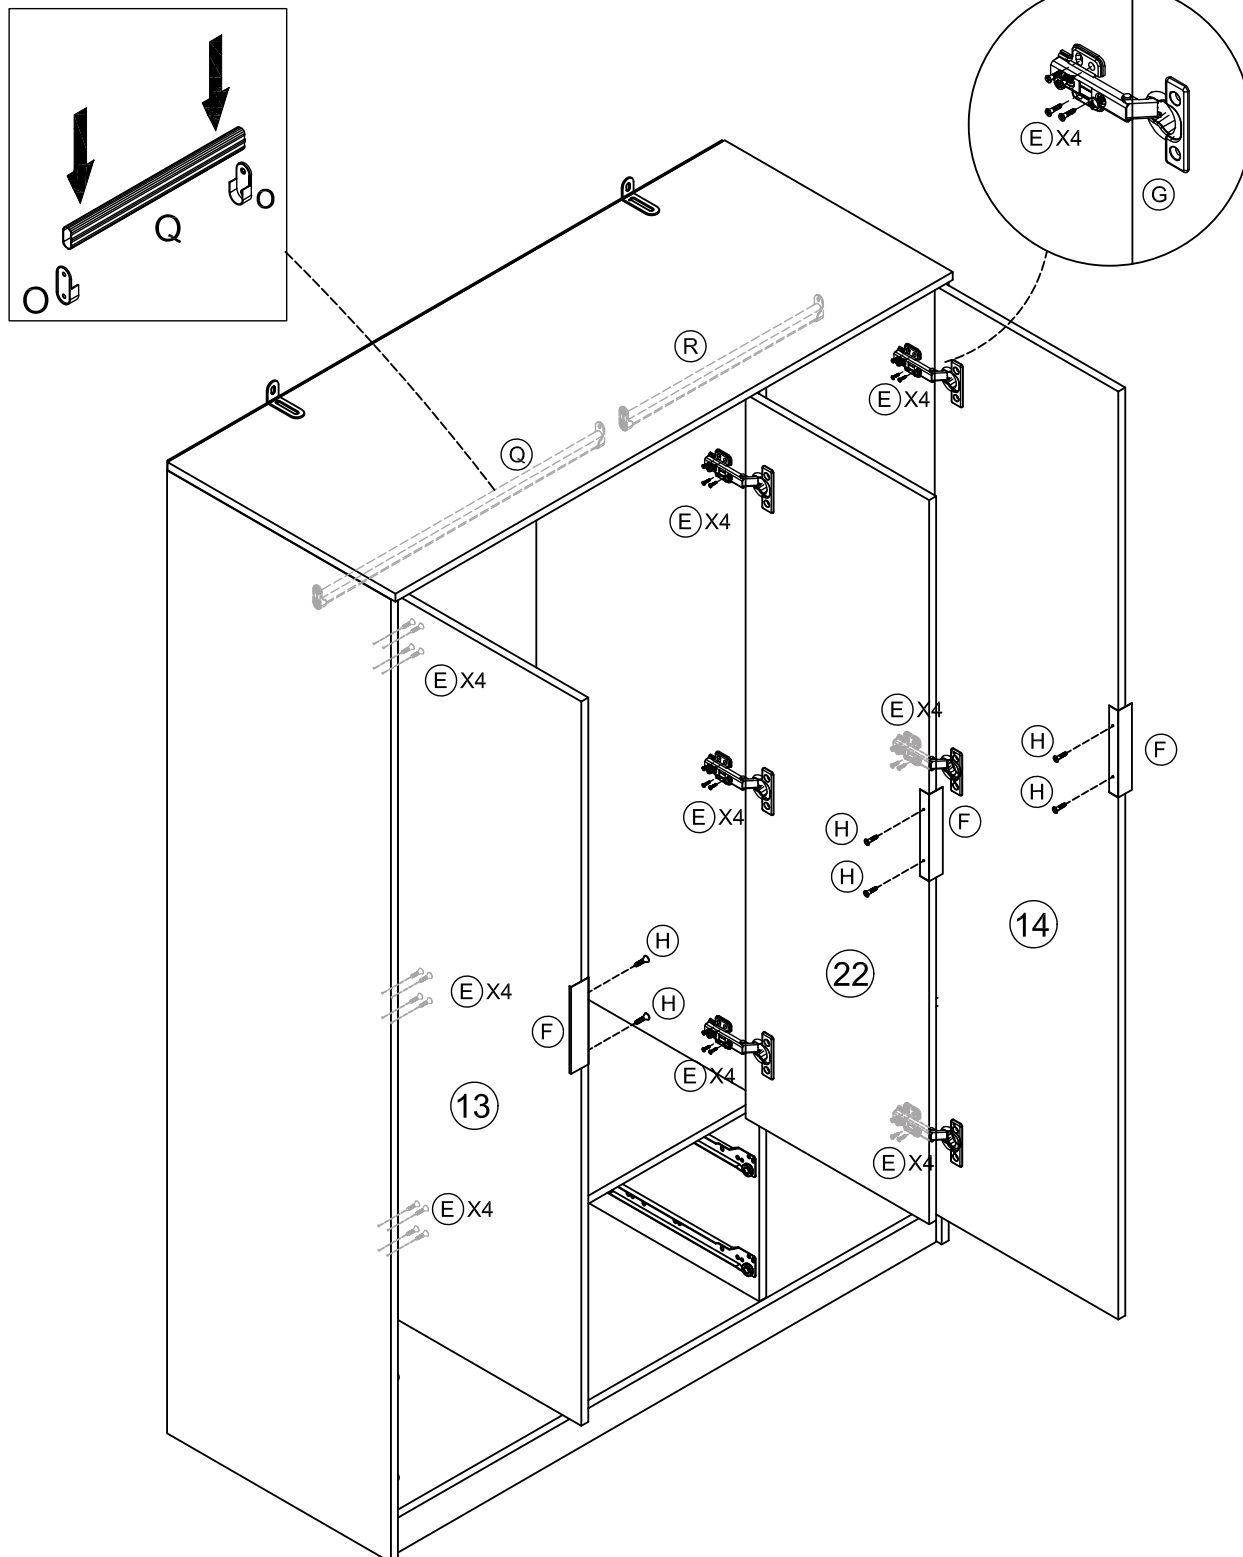









Q x1	R x1
	
F x3	E x36
	
	M3.5x14mm





Step 17

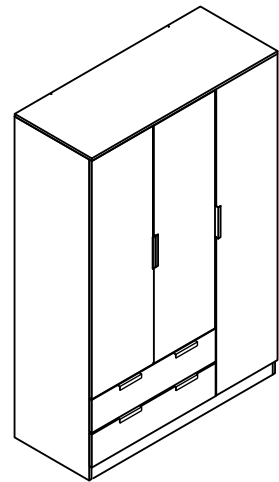

If there is misalignment after you install,
adjust the screw to the best condition

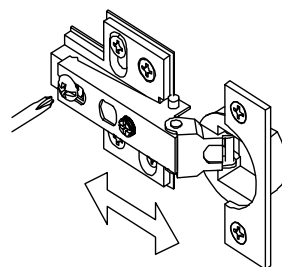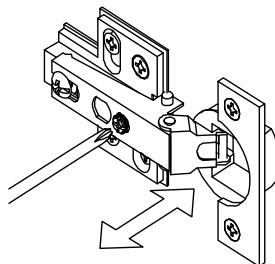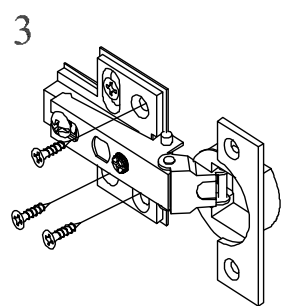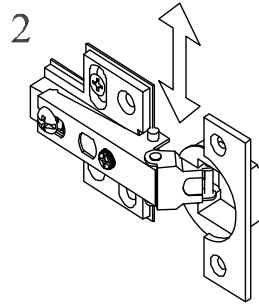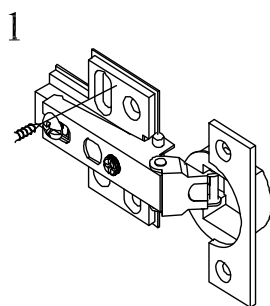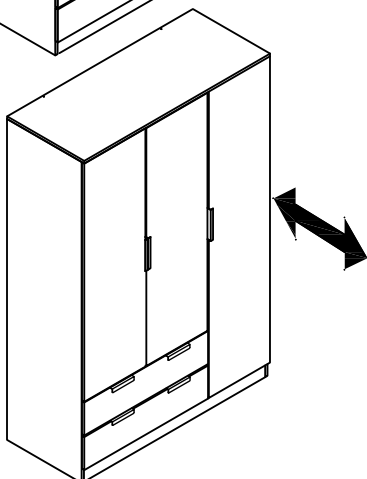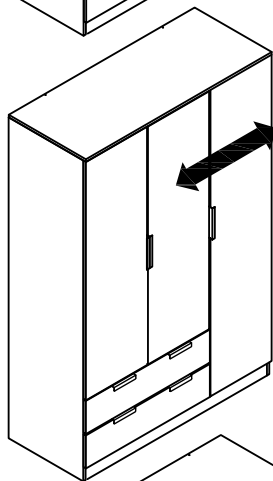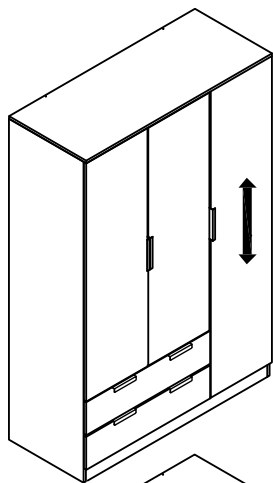

Step 18

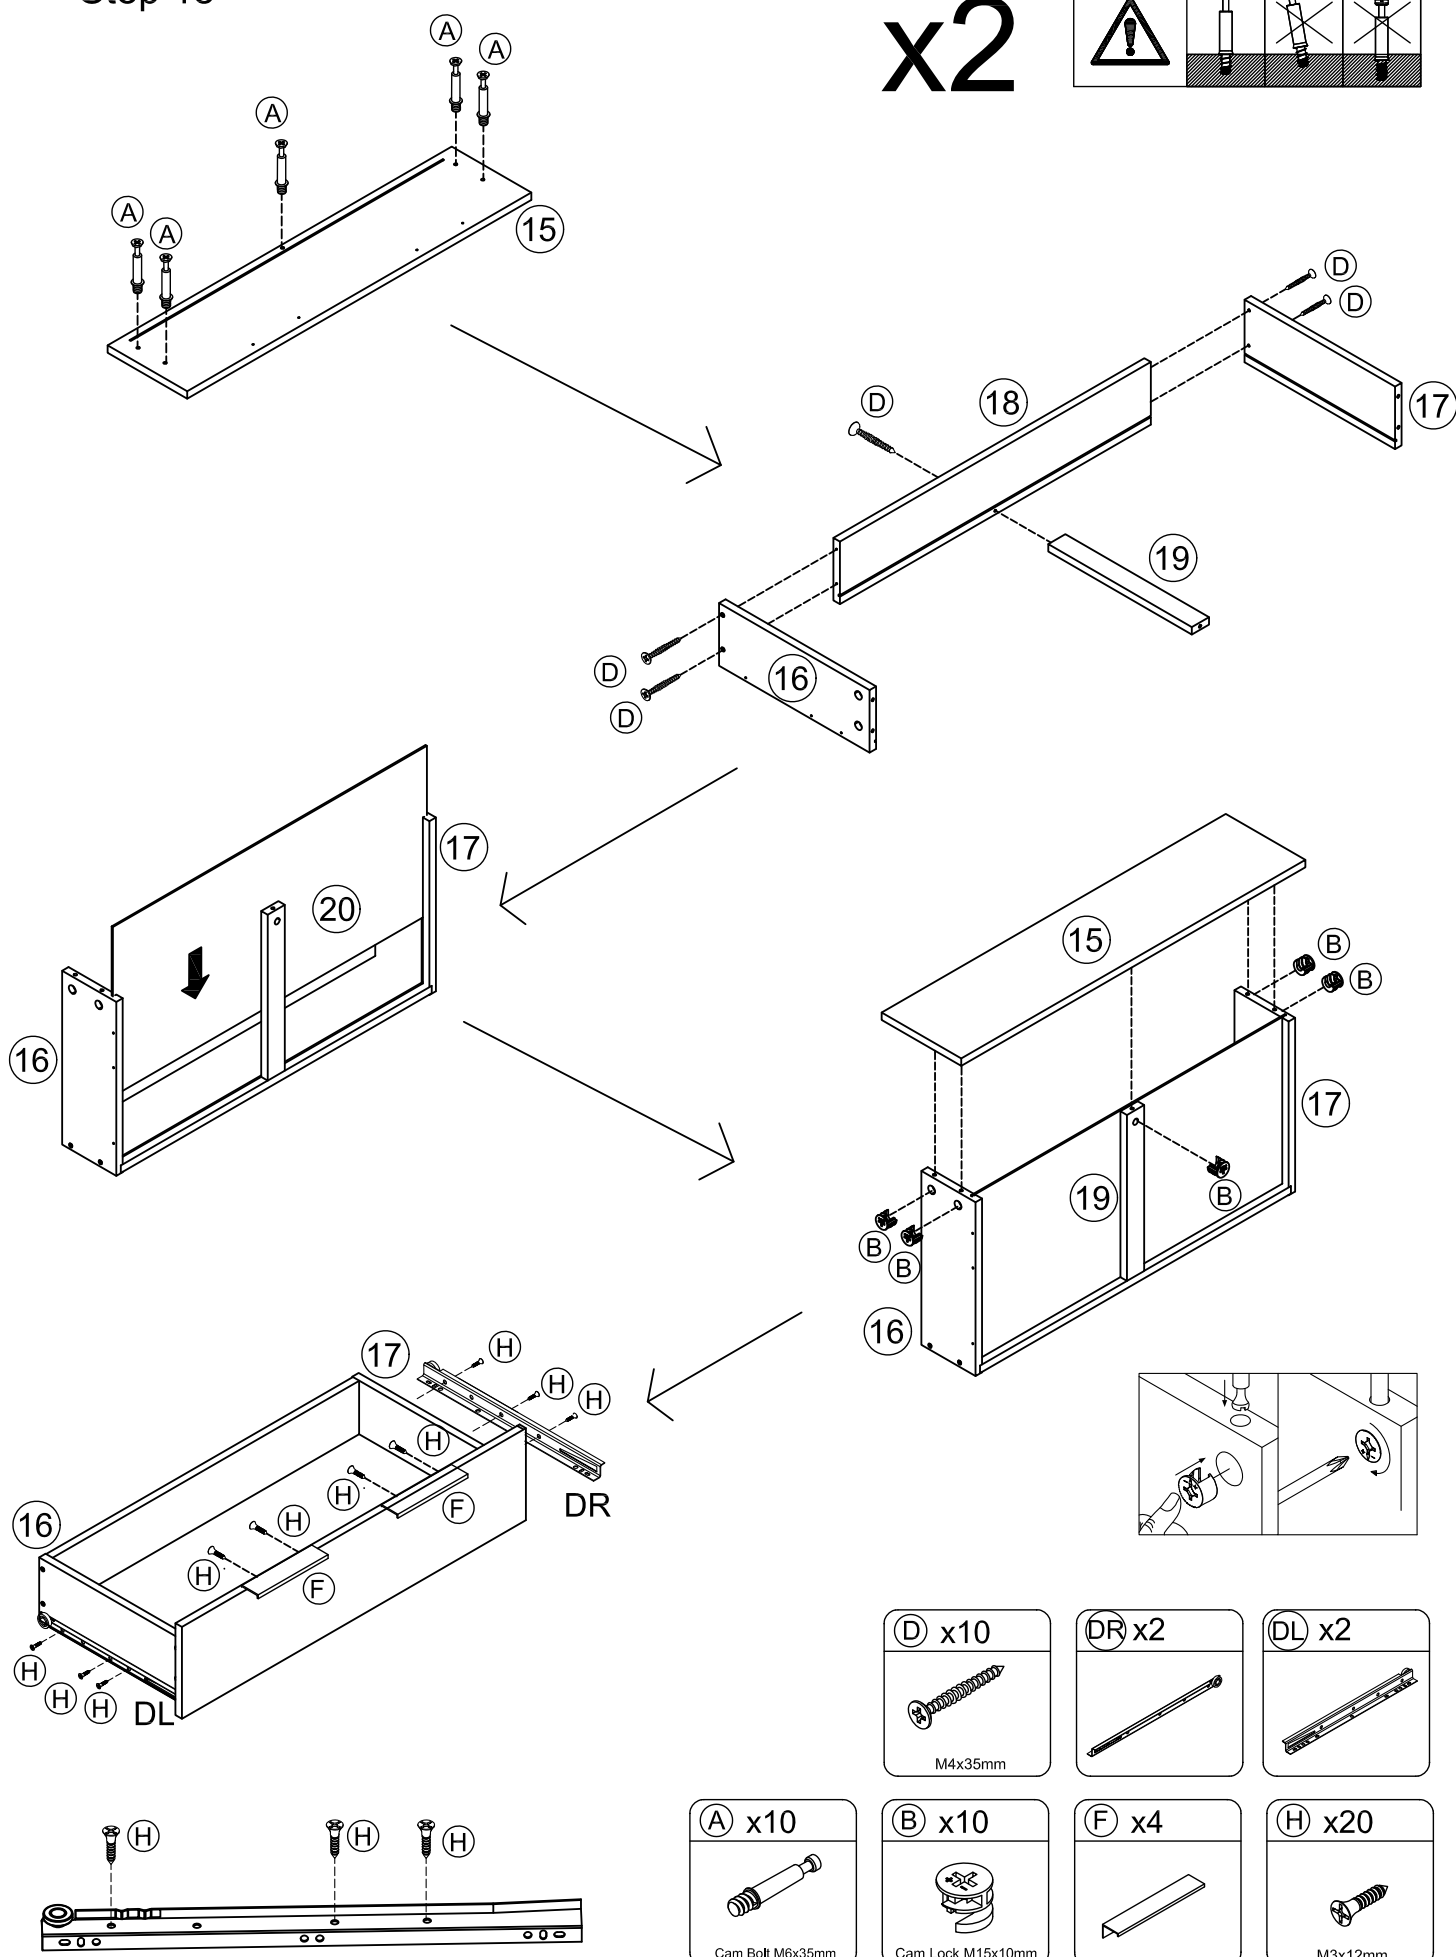 x^2 

Step 19

