


GLOBAL PROCUREMENT AND MARKETING LIMITED

PHOENIX 2 DOOR AND 3 DRAWER CABINET

Assembly instruction- Please keep for future reference

SIDPHO23W

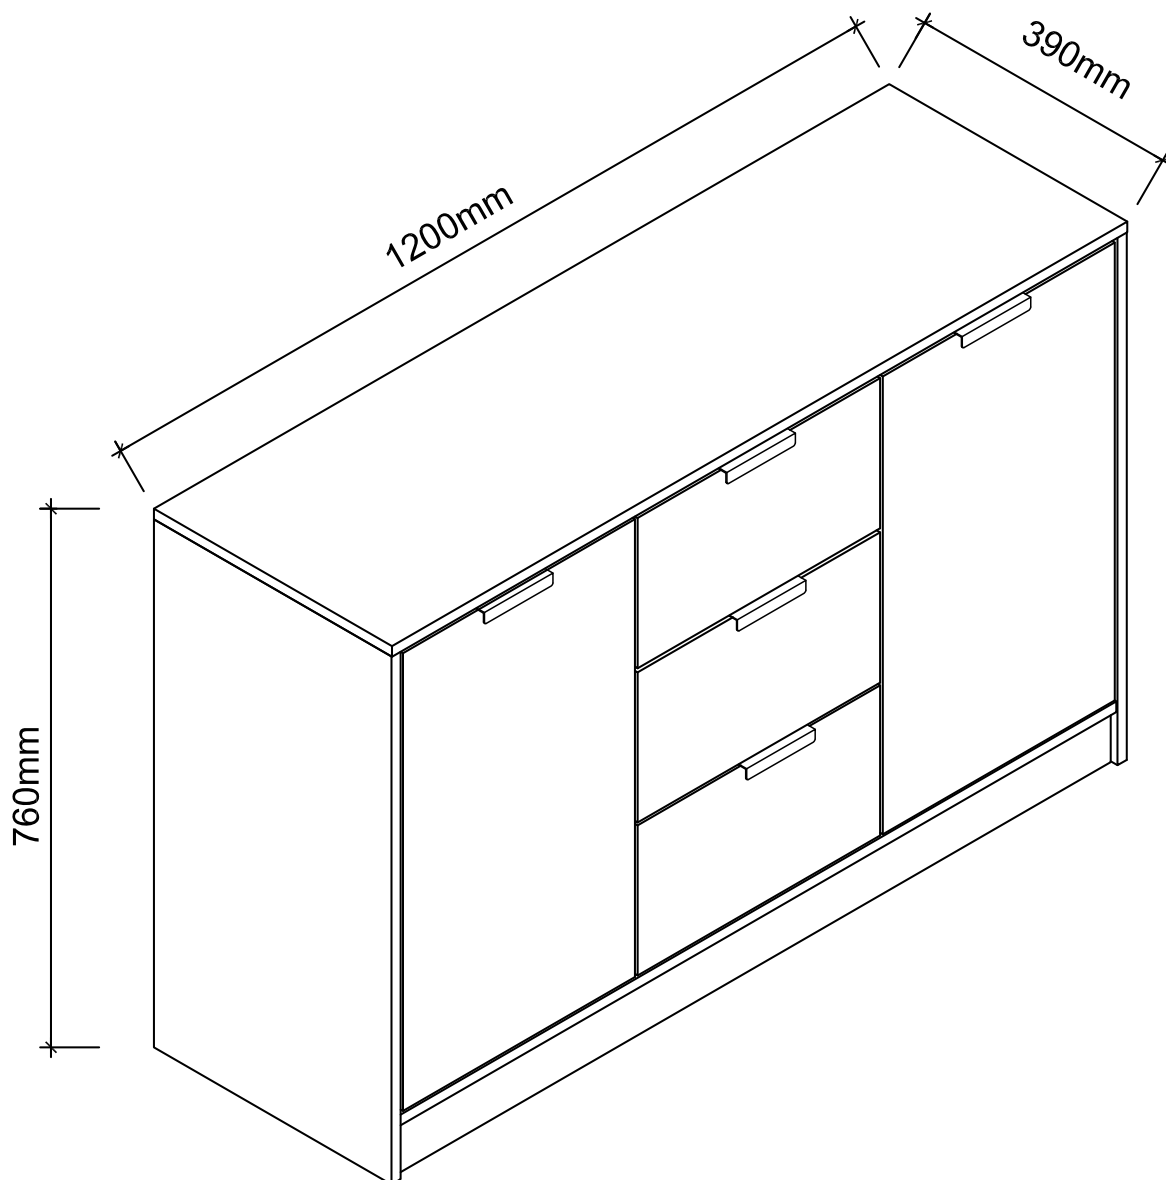

Dimensions	No. People	Assembly Time	OW#
Width: 120cm Depth: 39 cm Height: 76 cm		60 mins (approx)	SIDPHO23W

thank you

For purchasing this
GPM Limited
product

Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

⚠ Safety and Care Advice

Important-Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2,3 and 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screw, as this could damage the unit.
- only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.




Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

If you are unhappy with the product and wish to return it, please following the retailer's returns procedure.

Components - Panels

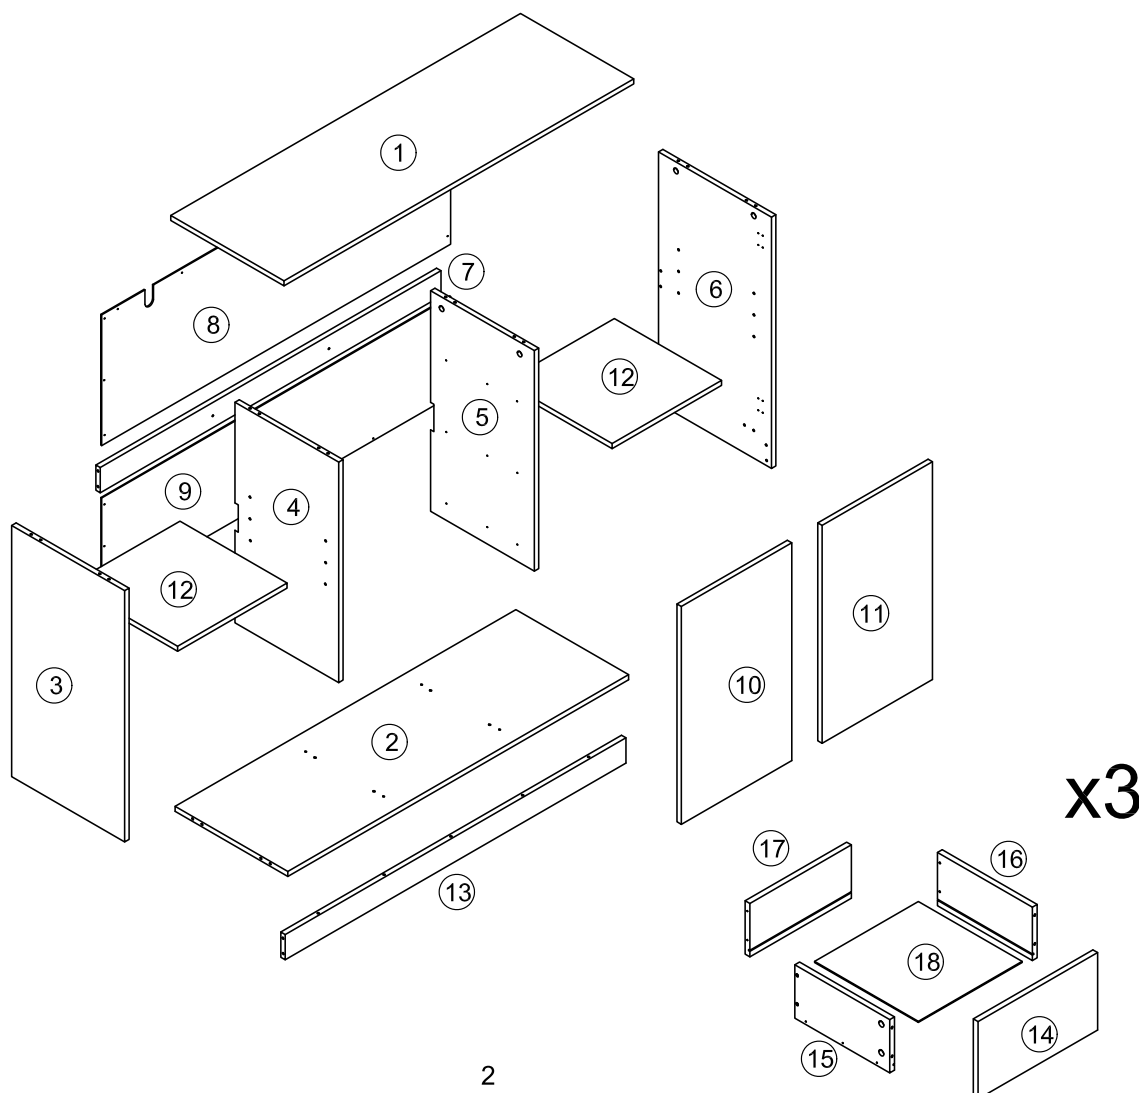

Components - Panels

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.

Part No	Description	Qty	Thickness (mm)
1	Top Panel	1	15 mm
2	Bottom Panel	1	15 mm
3	Left Side Panel	1	15 mm
4	Left Middle Vertical Panel	1	15 mm
5	Right Middle Vertical Panel	1	15 mm
6	Right Side Panel	1	15 mm
7	Back Support Panel	1	15 mm
8	Upper Back Board	1	3 mm
9	Bottom Back Board	1	3 mm
10	Left Door	1	15 mm
11	Right Door	1	15 mm
12	Shelf	2	15 mm
13	Lower Front Panel	1	15 mm
14	Drawer Front	3	15 mm
15	Drawer Left Side	3	15 mm
16	Drawer Right Side	3	15 mm
17	Drawer Back	3	15 mm
18	Drawer Bottom	3	3 mm

Important-Please read these instructions fully before starting assembly








If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk

Components - Fixings



If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk

Please check that you have all the components listed below before constructing your item.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

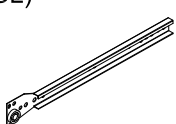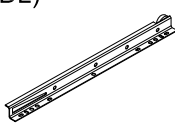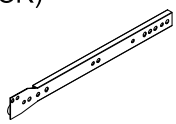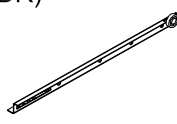(A)  Cam Bolt M6x35mm X 35+2	(B)  Cam Lock M15x10mm X 35+2	(C)  Dowel M6x30mm X 18+1	(D)  M4x35mm X 18+1	(E)  M3.5x14mm X 24+2	(F)  Handle X 5
(G)  Handle X 4	(H)  M3x12mm X 46+3	(I)  Handle X 8	(J)  Handle X 5	(K)  M2.5x12 mm X 29+2	(L)  Handle X 7
(CL)  Drawer Slide X 3	(DL)  Drawer Slide X 3	(CR)  Drawer Slide X 3	(DR)  Drawer Slide X 3		


ANTI - TIPPING KITS

(D)  M4x35mm X 2	(N)  Handle X 2			
---	--	--	--	--

Tools Required (Not Provided)



Ruler - Use this to measure your screws (mm)







Important-Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please email aftersales@gpmfurniture.co.uk









Assembly Instructions

If you have damaged or missing components,
email: aftersales@gpmfurniture.co.uk




Step 1

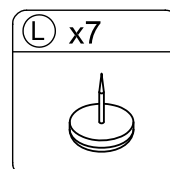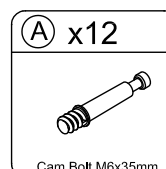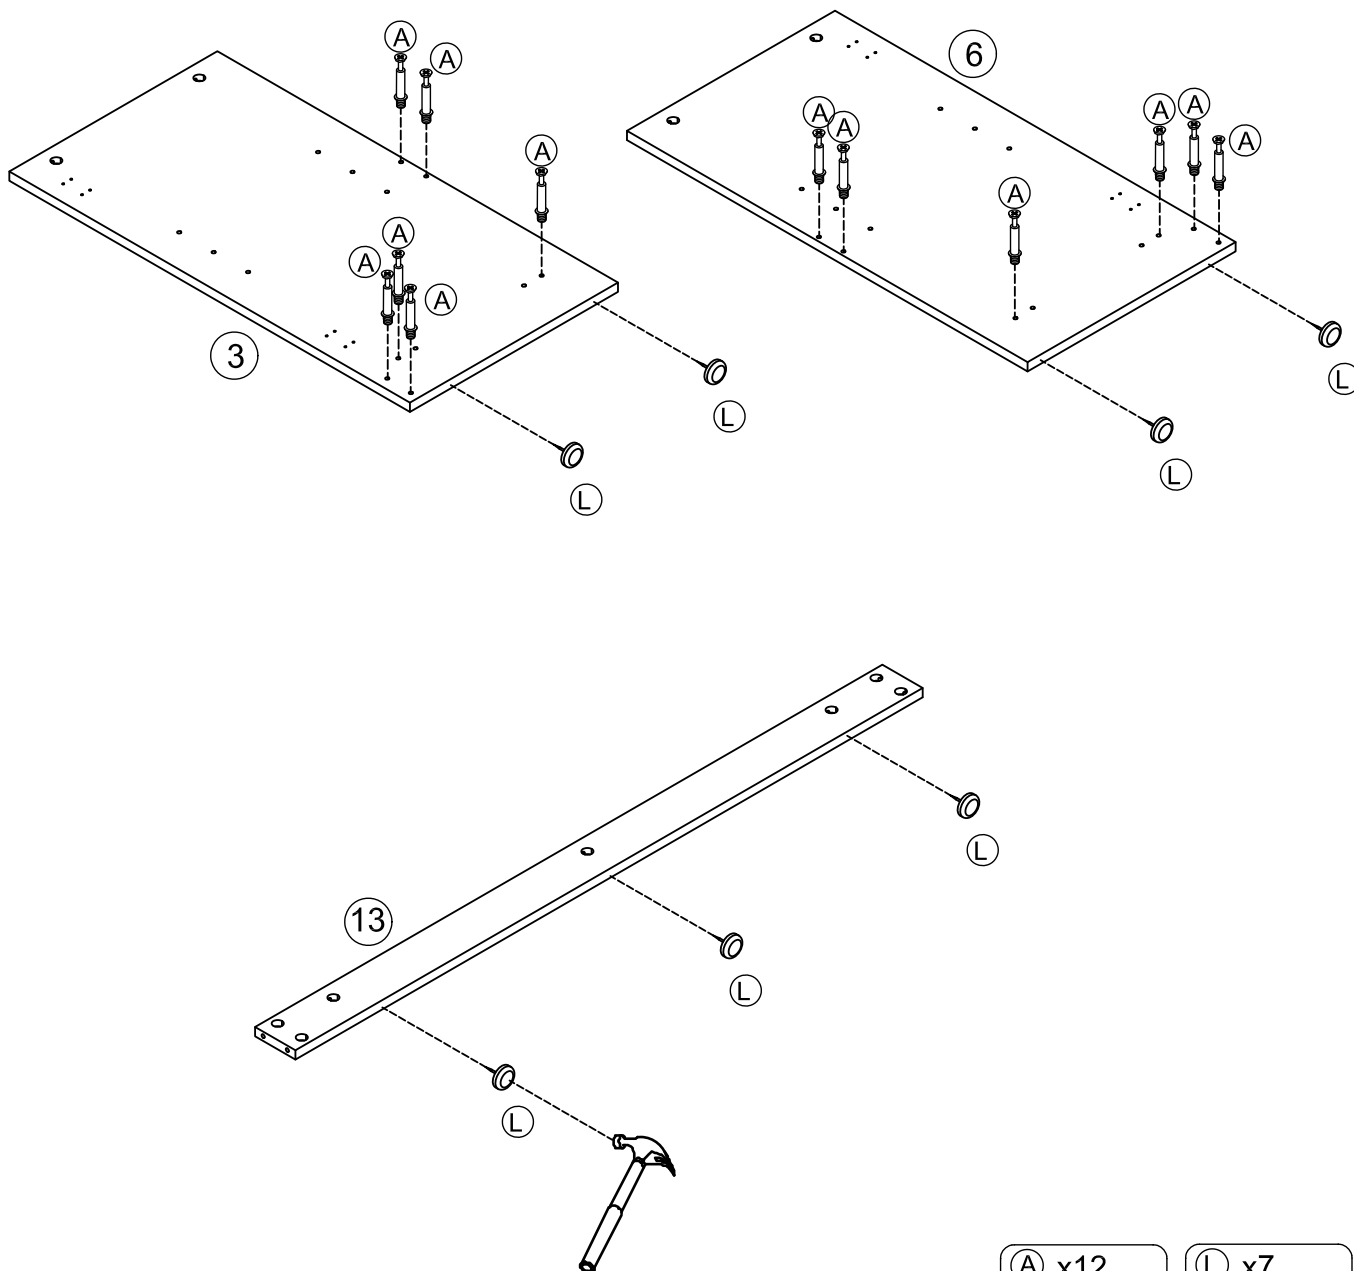




Step 2

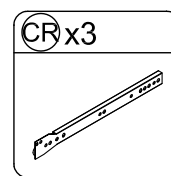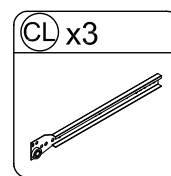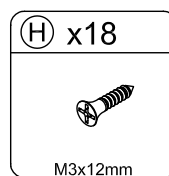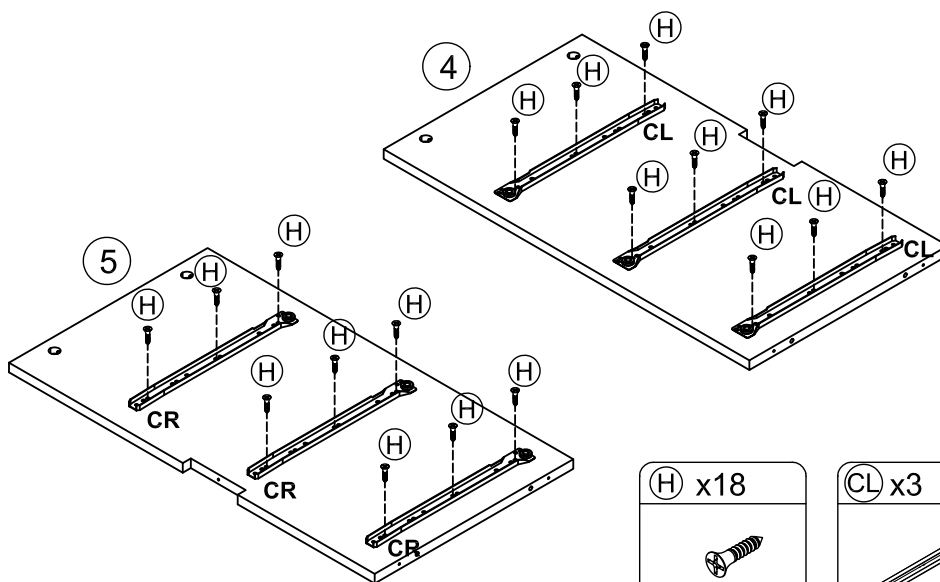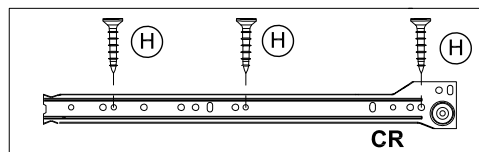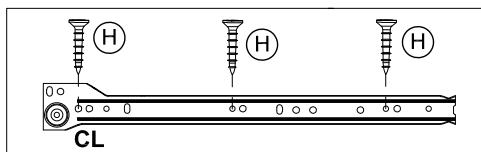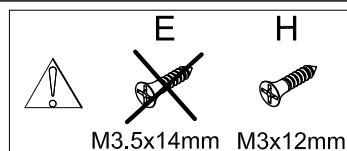




Step 3

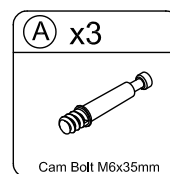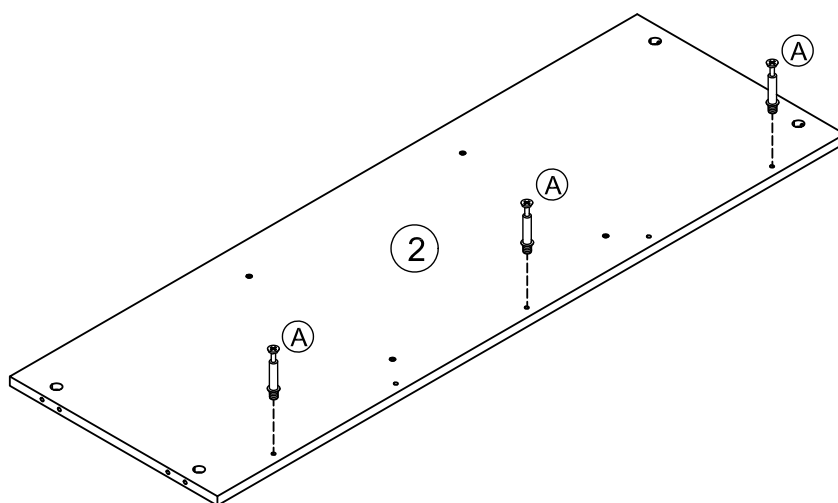



Step 4

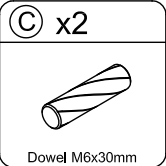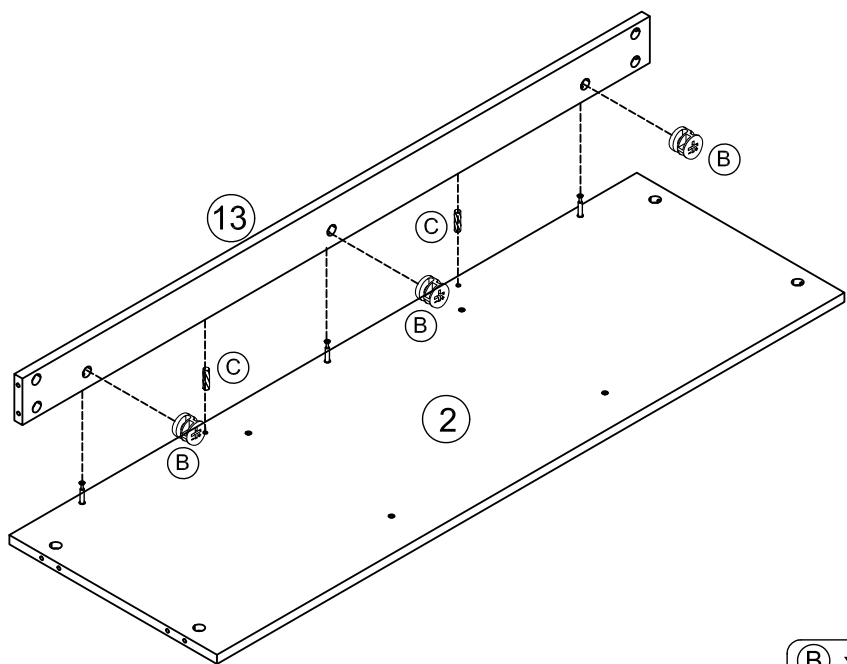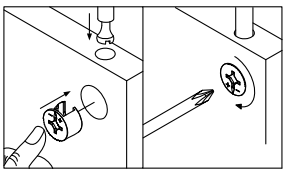





Step 5

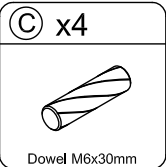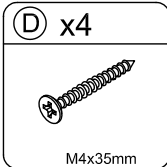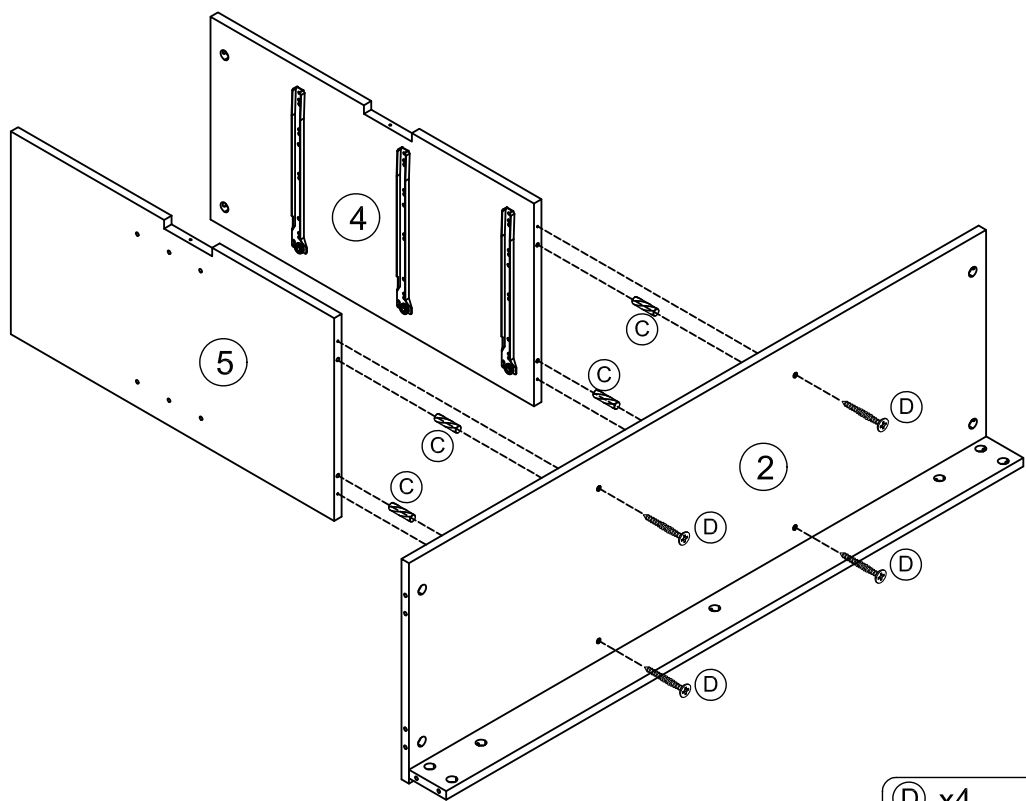


Step 6

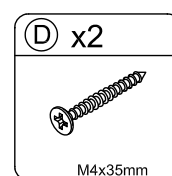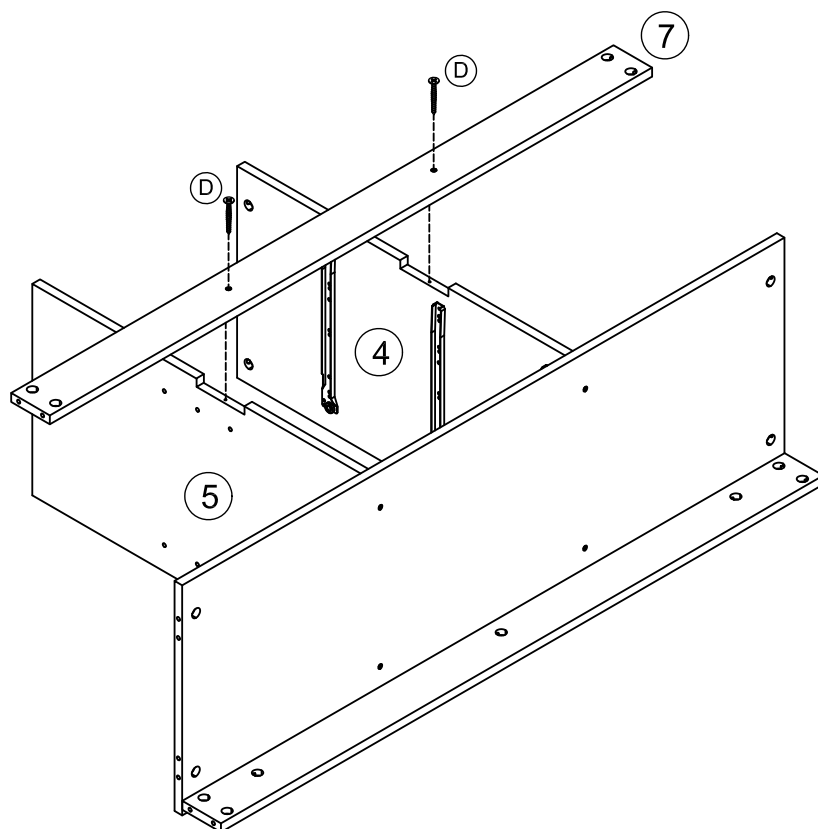



Step 7

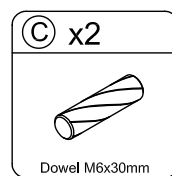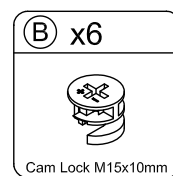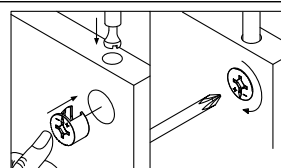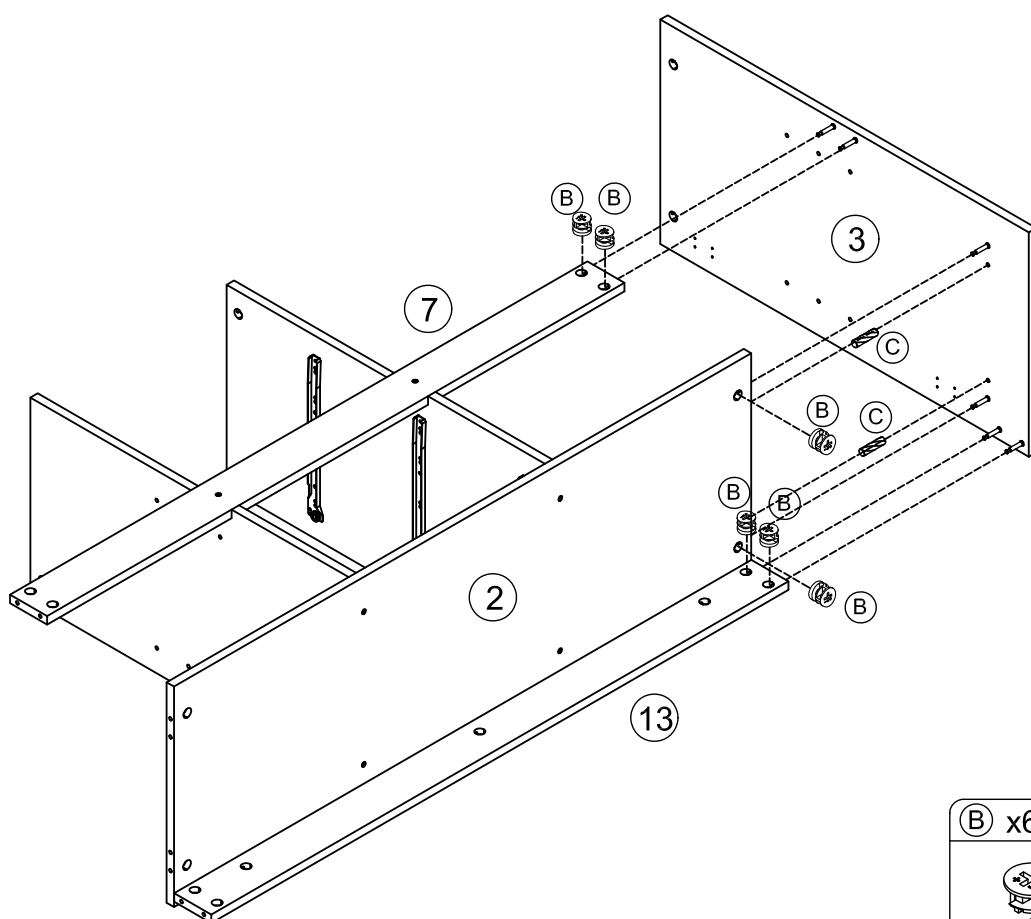





Step 8

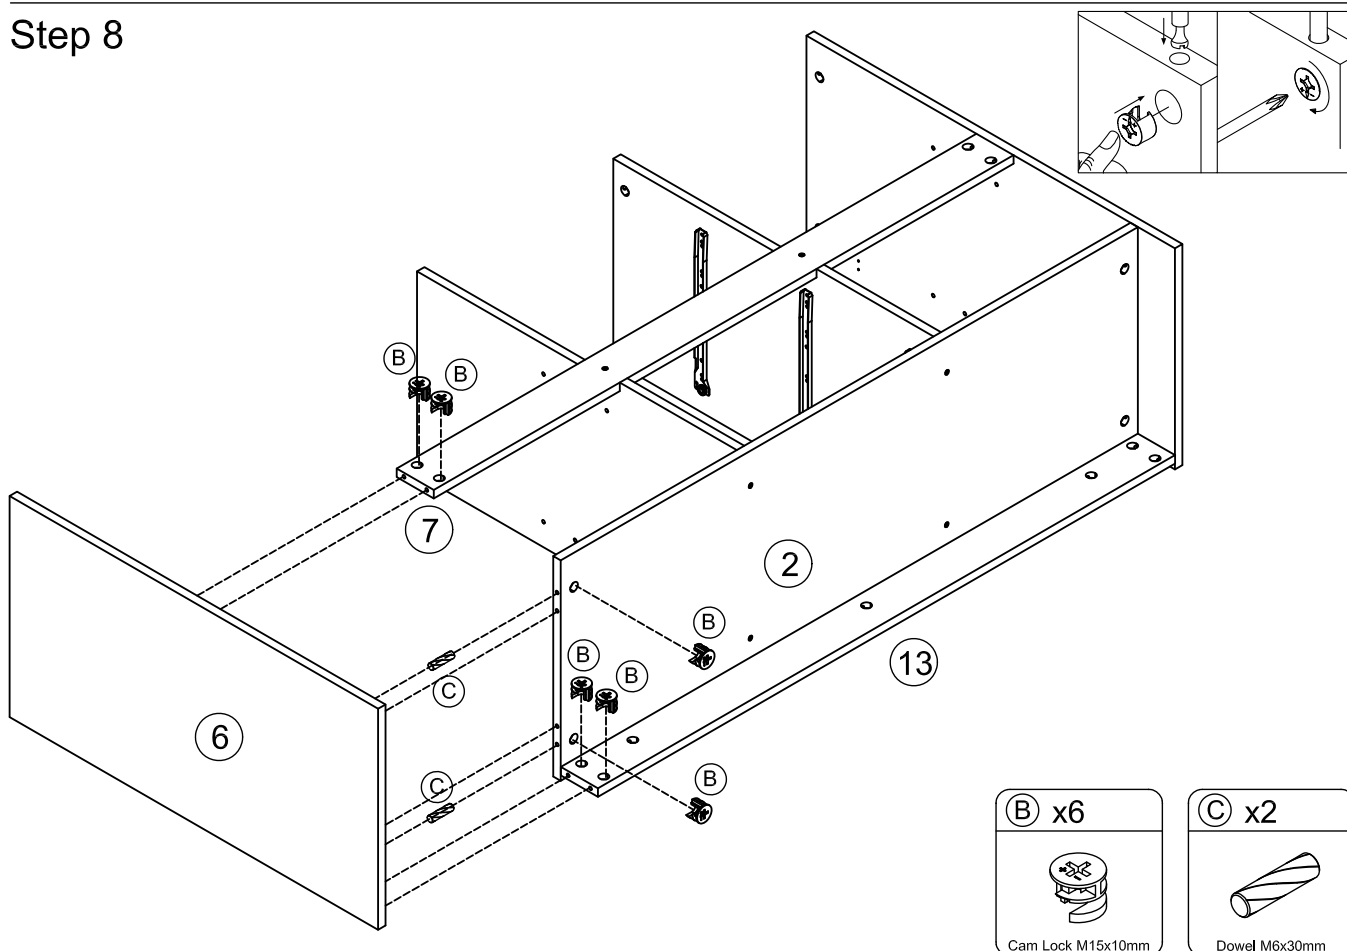




Step 9

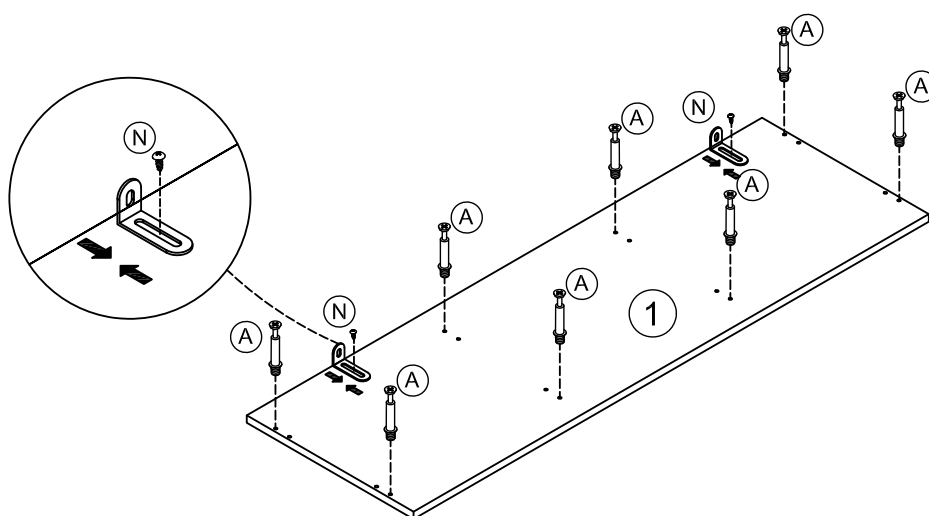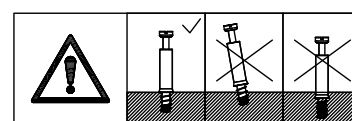


Step 10

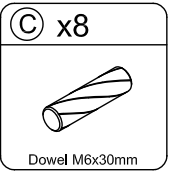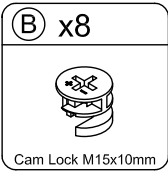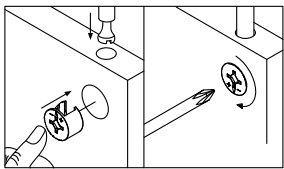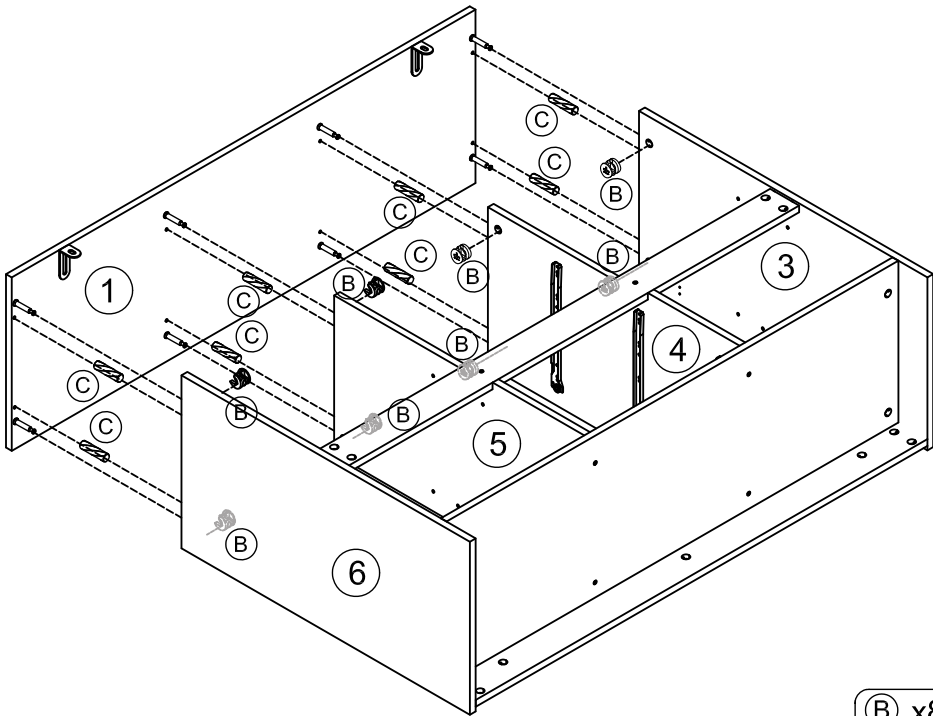


Step 11

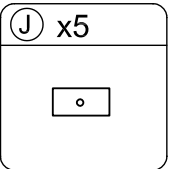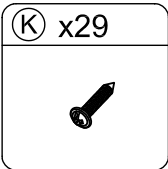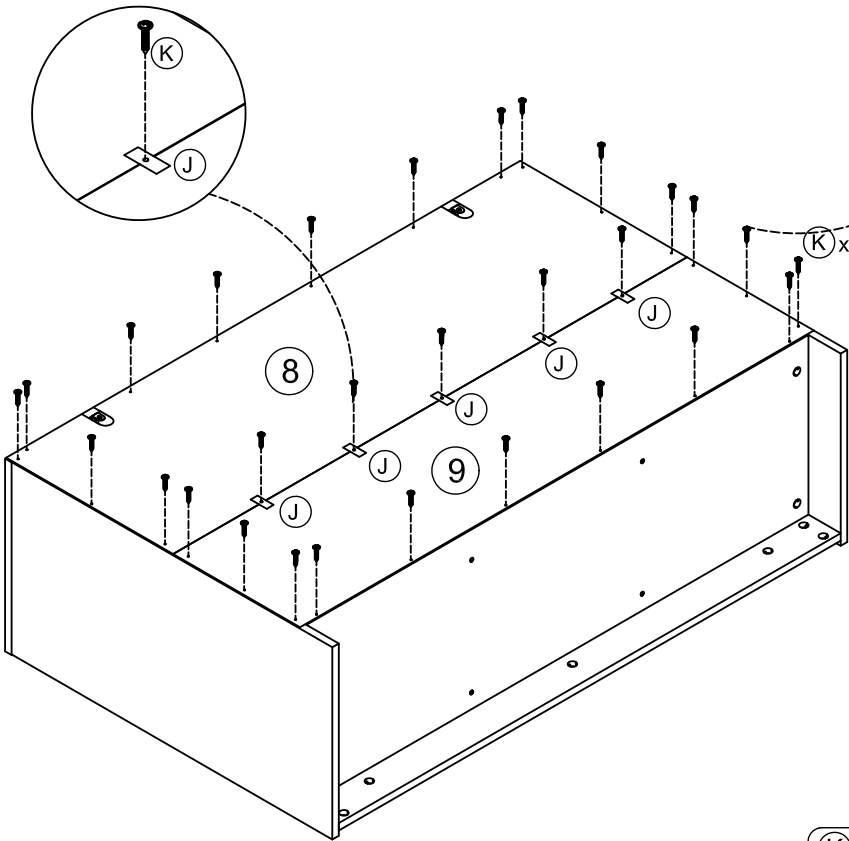


Step 12

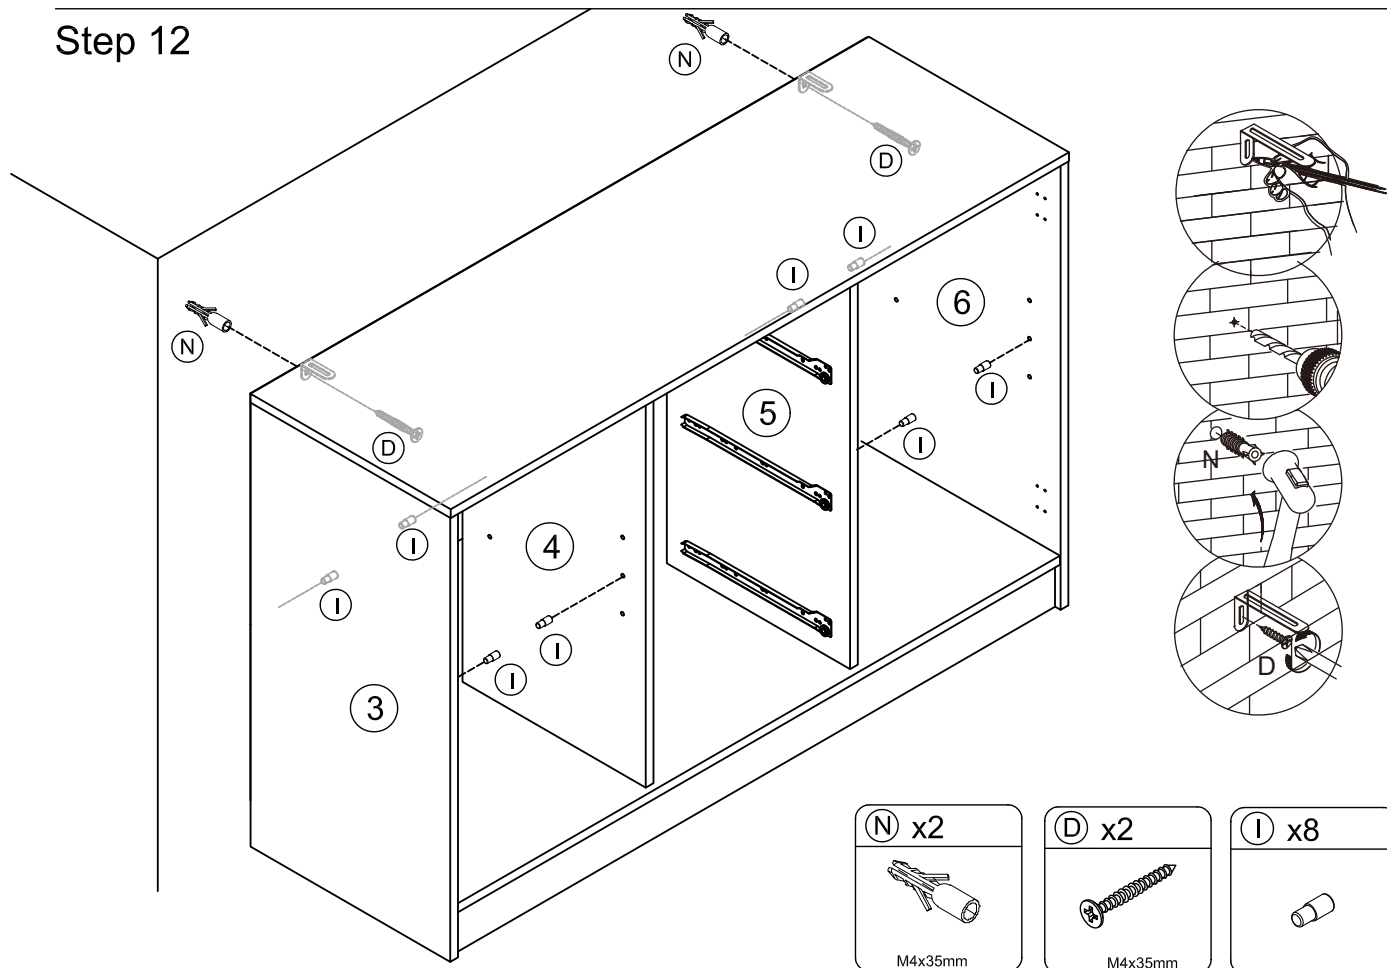


Step 13

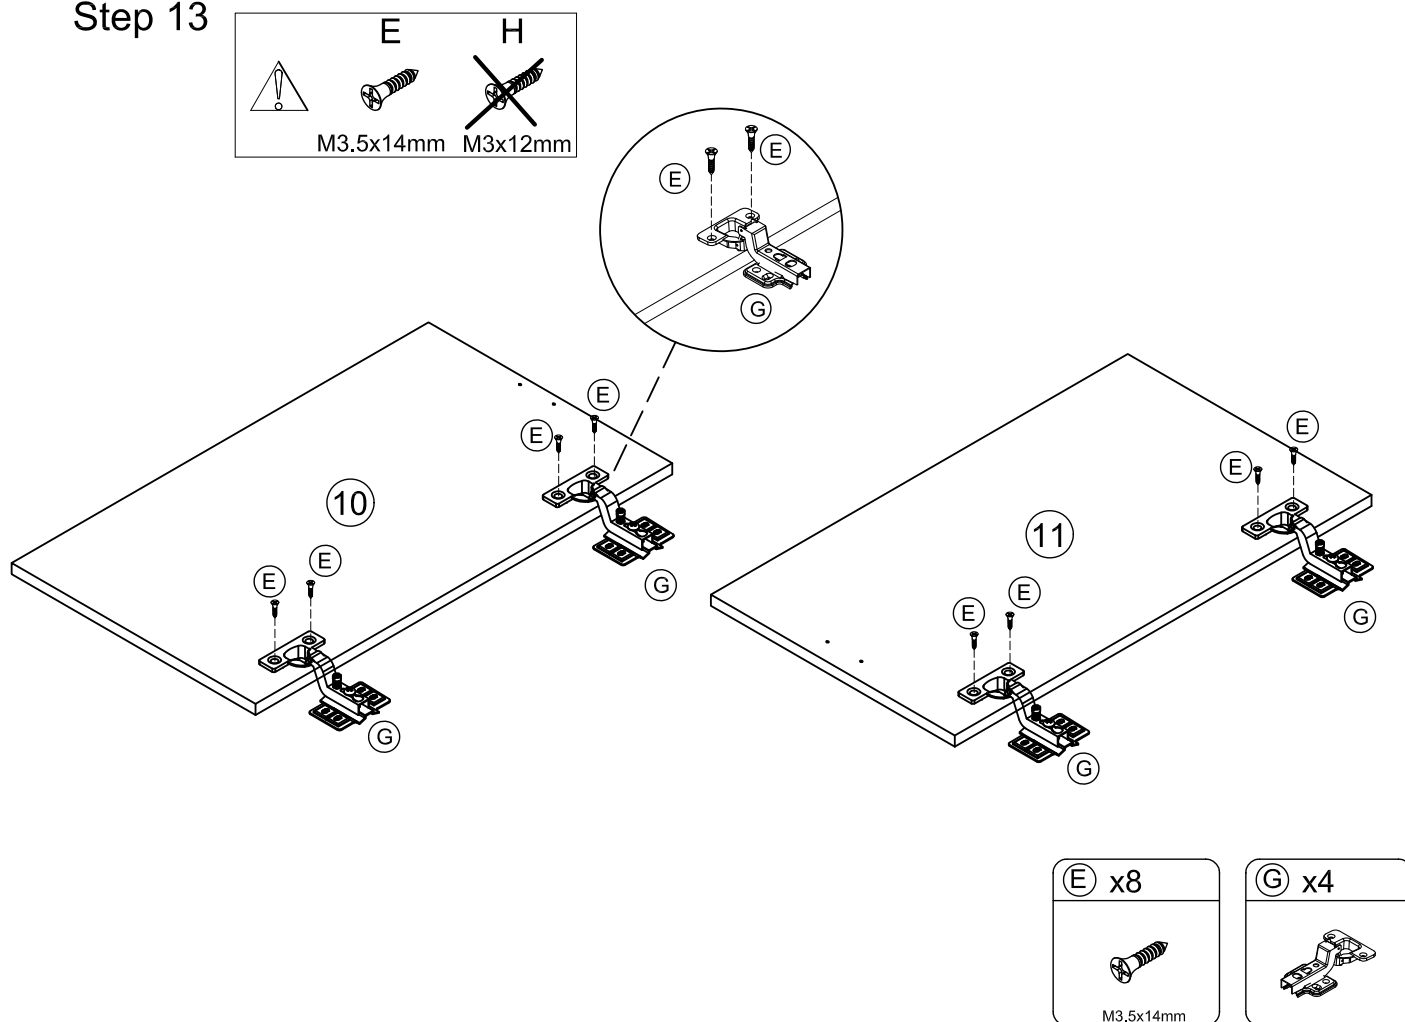


Step 14

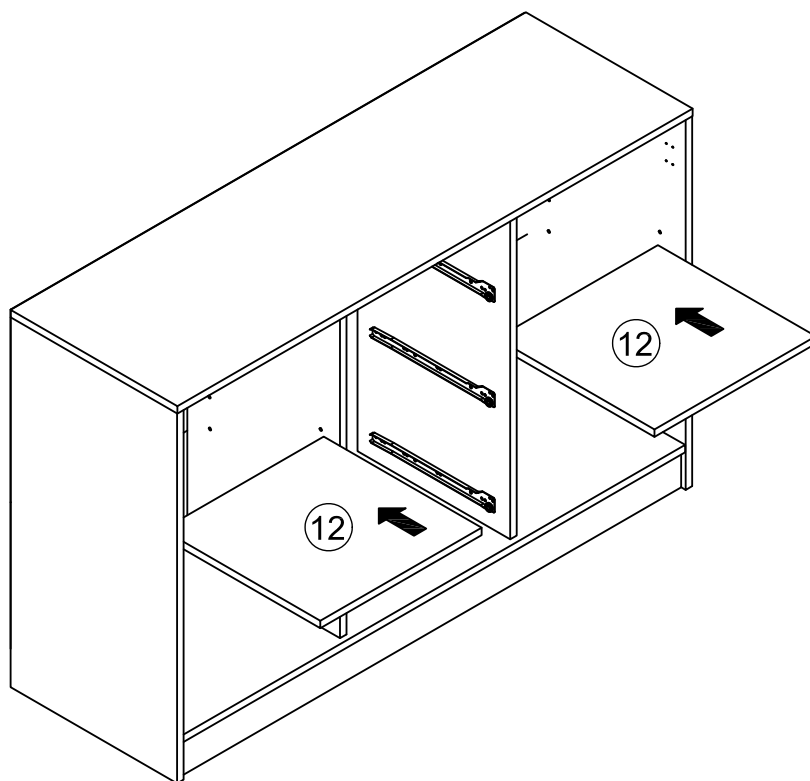









Step 15

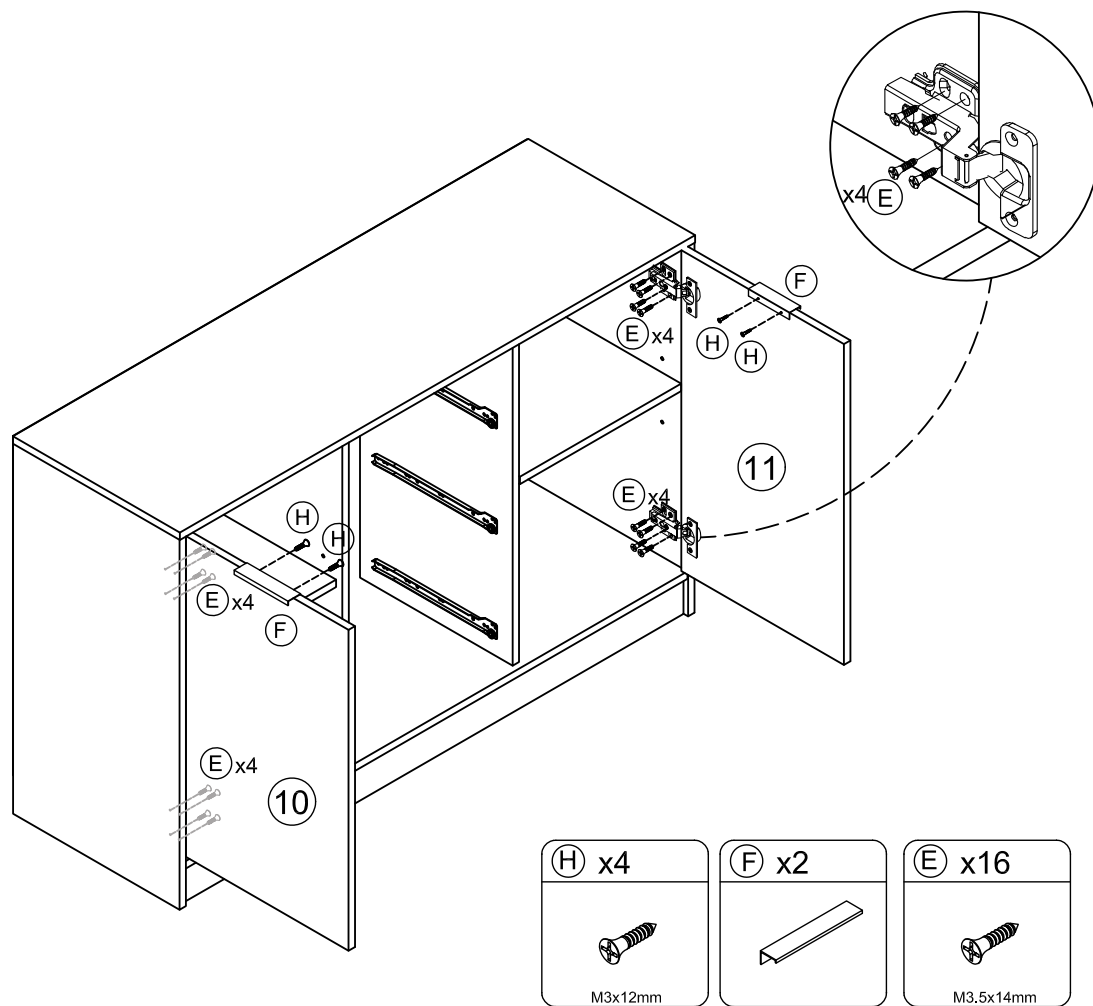

Step 16














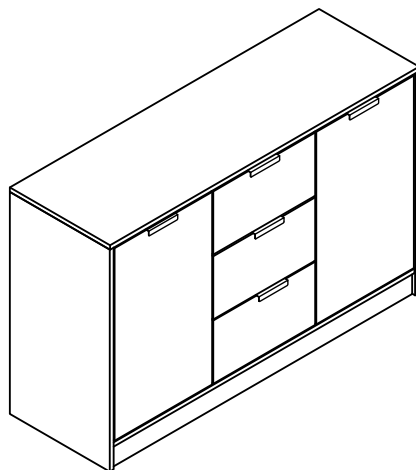


If there is misalignment after you install,
adjust the screw to the best condition

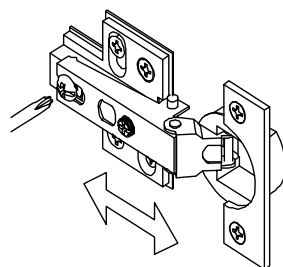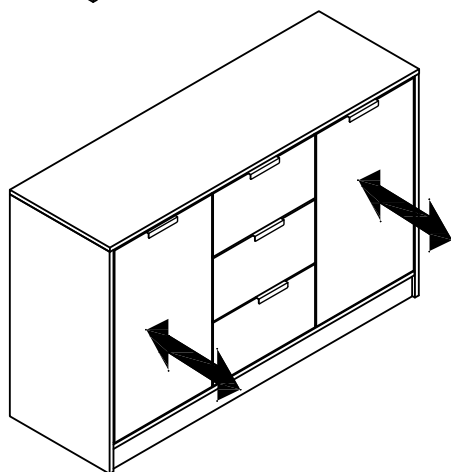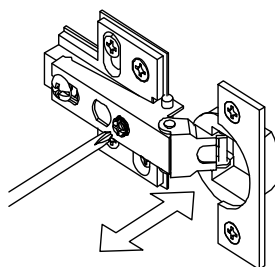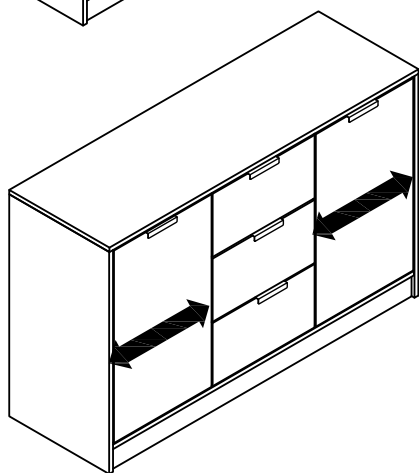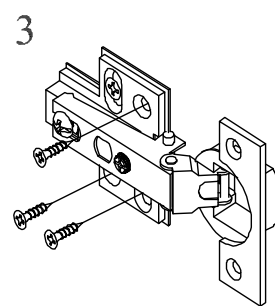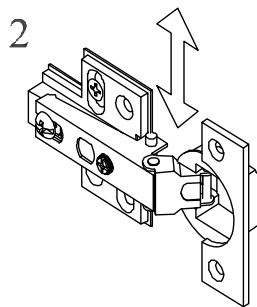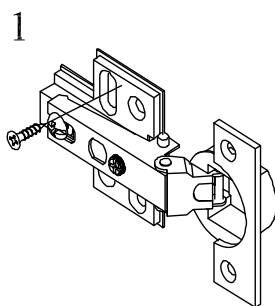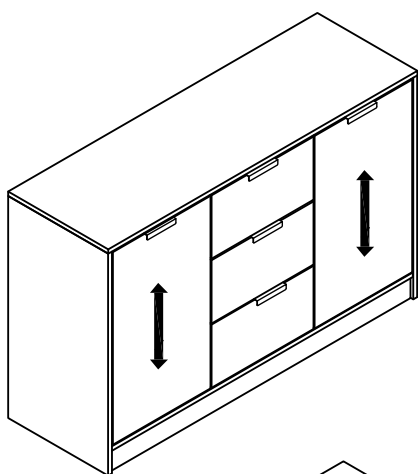

Step 17

x3

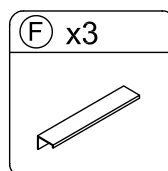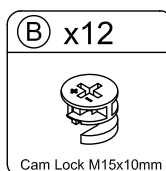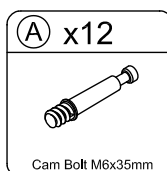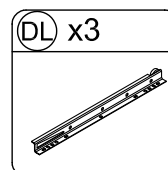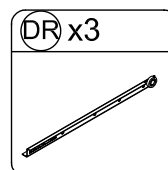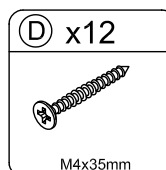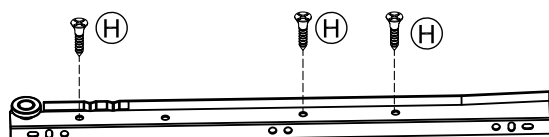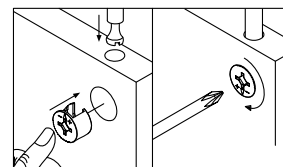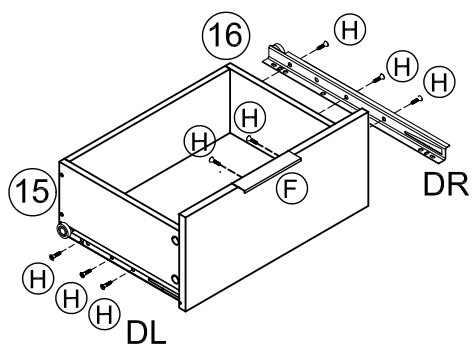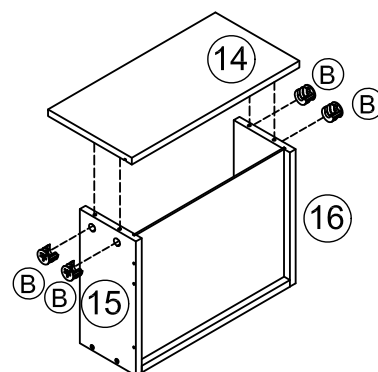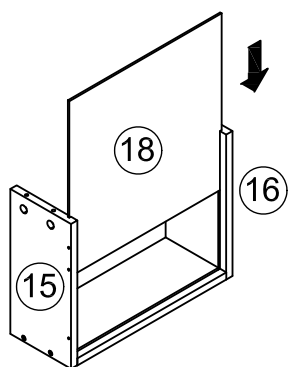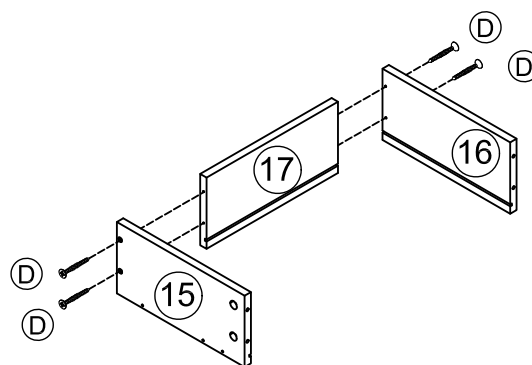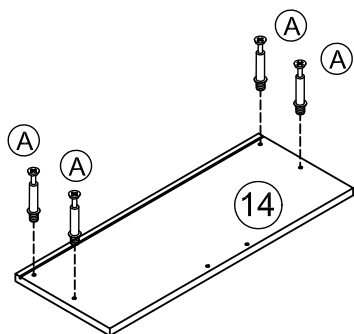

Step 18

